

VRF SYSTEM INDOOR UNIT Floor / Ceiling Type

 CAUTION

R410A
REFRIGERANT


This Air Conditioner contains
and operates with refrigerant R410A.

THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED
BY QUALIFIED PERSONNEL.

Refer to Commonwealth, State, Territory and local legislation,
regulations, codes, installation & operation manuals, before
the installation, maintenance and/or service of this product.

INSTALLATION MANUAL

For authorized service personnel only.

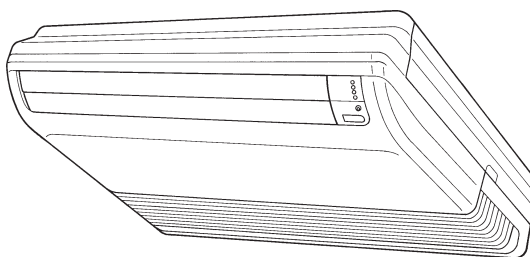

Contents

1. SAFETY PRECAUTIONS	2	
2. ABOUT THE UNIT		
2.1. Precautions for using R410A refrigerant	2	
2.2. Special tool for R410A.....	2	
2.3. Accessories	3	
2.4. Optional parts	3	
3. INSTALLATION WORK		
3.1. Selecting an installation location	4	
3.2. Installation dimension	4	
3.3. Installation the unit.....	4	
4. PIPE INSTALLATION		
4.1. Selecting the pipe material	6	
4.2. Pipe requirement	7	
4.3. Flare connection (pipe connection)	7	
4.4. Installing heat insulation	8	
5. INSTALLING DRAIN HOSE	9	
6. ELECTRICAL WIRING		
6.1. Electrical requirement.....	11	
6.2. Wiring method	11	
6.3. Unit wiring.....	11	
6.4. Connection of wiring	13	
6.5. External input and external output (Optional parts)	13	
7. FIELD SETTING		
7.1. Setting the address.....	16	
7.2. Custom code setting.....	17	
7.3. Function setting	18	
8. MOUNT THE COVER PLATE AND THE INTAKE GRILLE		
8.1. Handling for the pipe take-off part	19	
8.2. Mount the cover plate (Right)	19	
8.3. Mount the cover plate (Left).....	20	
8.4. Mount the intake grille	20	
9. TEST OPERATION		
9.1. Test operation using PCB (Outdoor unit).....	20	
9.2. Test operation using remote controller	20	
10. CHECK LIST	20	
11. ERROR CODES	21	

1. SAFETY PRECAUTIONS

- Be sure to read this Manual thoroughly before installation.
- The warnings and precautions indicated in this Manual contain important information pertaining to your safety. Be sure to observe them.
- Hand this Manual, together with the Operating Manual, to the customer. Request the customer to keep them on hand for future use, such as for relocating or repairing the unit.

WARNING

This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

- Request your dealer or a professional installer to install the indoor unit in accordance with this Installation Manual. An improperly installed unit can cause serious accidents such as water leakage, electric shock, or fire. If the indoor unit is installed in disregard of the instructions in the Installation Manual, it will void the manufacturer's warranty.
- Do not turn ON the power until all work has been completed. Turning ON the power before the work is completed can cause serious accidents such as electric shock or fire.
- If refrigerant leaks while work is being carried out, ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.
- Installation work must be performed in accordance with national wiring standards by authorized personnel only.
- Except for EMERGENCY, never turn off main as well as sub breaker of the indoor units during operation. It will cause compressor failure as well as water leakage. First, stop the indoor unit by operating the controller, converter or external input device and then cut the breaker.
Make sure to operate through the controller, converter or external input device.
When the breaker is designed, locate it at a place where the users cannot start and stop in the daily work.

CAUTION

This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

2. ABOUT THE UNIT

2.1. Precautions for using R410A refrigerant

WARNING

- Do not introduce any substance other than the prescribed refrigerant into the refrigeration cycle. If air enters the refrigeration cycle, the pressure in the refrigeration cycle will become abnormally high and cause the piping to rupture.
- If there is a refrigerant leak, make sure that it does not exceed the concentration limit. If a refrigerant leak exceeds the concentration limit, it can lead to accidents such as oxygen starvation.

WARNING

- Do not touch refrigerant that has leaked from the refrigerant pipe connections or other area. Touching the refrigerant directly can cause frostbite.
- If a refrigerant leak occurs during operation, immediately vacate the premises and thoroughly ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.

2.2. Special tool for R410A

WARNING






 
 
 

- To install a unit that uses R410A refrigerant, use dedicated tools and piping materials that have been manufactured specifically for R410A use. Because the pressure of R410A refrigerant is approximately 1.6 times higher than the R22, fail lure to use dedicated piping material or improper installation can cause rupture or injury. Furthermore, it can cause serious accidents such as water leakage, electric shock, or fire.



 



 



Tool name	Changes
Gauge manifold	The pressure in the refrigerant system is extremely high and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended to use a gauge manifold with a high pressure display range of -0.1 to 5.3 MPa and a low pressure display range of -0.1 to 3.8 MPa.
Charging hose	To increase pressure resistance, the hose material and base size were changed. (The charging port thread diameter for R410A is 1/2 UNF 20 threads per inch.)
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter. Be sure that the pump oil does not backflow into the system. Use one capable for vacuum suction of -100.7 kPa (5 Torr, -755 mmHg).
Gas leakage detector	Special gas leakage detector for R410A refrigerant.

2.3. Accessories


⚠ WARNING

- For installation purposes, be sure to use the parts supplied by the manufacturer or other prescribed parts. The use of non-prescribed parts can cause serious accidents such as the unit falling, water leakage, electric shock, or fire.
- The following installation parts are furnished. Use them as required.
- Keep the Installation Manual in a safe place and do not discard any other accessories until the installation work has been completed.

Name and Shape	Q'ty	Application
Operating Manual 	1	
Installation Manual 	1	(This book)
Cover plate (Left) 	1	
Cover plate (Right) 	1	
Tapping screw (M4 × 10mm) 	2	
Installation template 	1	For positioning the indoor unit For under ceiling type
Bracket (Left) 	1	For suspending the indoor unit from ceiling
Bracket (Right) 	1	
Special nut 	4	

 Wall bracket 	2	For suspending the indoor unit on the wall
Tapping screw (M4 × 20mm) 	6	For fixing the wall bracket
Coupler heat insulation 	2	For indoor side pipe joint
Binder 	Large 4 Medium 2	For fixing the coupler heat insulation For power supply, transmission and remote controller cable binding
Drain hose 	1	For installing drain pipe VP25 (O.D.32, I.D.25)
Hose Band 	1	For installing drain hose
Drain hose insulation 	1	Adhesive type 100 × 220
VT wire 	1	For fixing the drain hose L 280 mm
Insulation (Pipe) 	1	Adhesive type 160 × 110
Silencer pipe 	1	Connect the silencer pipe to the small (liquid) pipe.

2.4. Optional parts

Description	Part No.	Application
Auxiliary pipe 	9374714025	For indoor side pipe joint (For AB18, AB24)
External output wire	9379529006	For control output port
External input (voltage) wire	9368779016	For control input port
External input (no voltage) wire	9368779009	For control input port

3. INSTALLATION WORK

Especially, the installation place is very important for the split type air conditioner because it is very difficult to move from place to place after the first installation.

3.1. Selecting an installation location

Decide the mounting position together with the customer as follows.

⚠ WARNING

- Select installation locations that can properly support the weight of the indoor unit. Install the units securely so that they do not topple or fall.

⚠ CAUTION

Do not install the indoor unit in the following areas:

- Area with high salt content, such as at the seaside. It will deteriorate metal parts, causing the parts to fall or the unit to leak water.
- Area filled with mineral oil or containing a large amount of splashed oil or steam, such as a kitchen. It will deteriorate plastic parts, causing the parts to fall or the unit to leak water.
- Area that generates substances that adversely affect the equipment, such as sulfuric gas, chlorine gas, acid, or alkali. It will cause the copper pipes and brazed joints to corrode, which can cause refrigerant leakage.
- Area that can cause combustible gas to leak, contains suspended carbon fibers or flammable dust, or volatile inflammables such as paint thinner or gasoline. If gas leaks and settles around the unit, it can cause a fire.
- Area where animals may urinate on the unit or ammonia may be generated.

- Do not use the unit for special purposes, such as storing food, raising animals, growing plants, or preserving precision devices or art objects. It can degrade the quality of the preserved or stored objects.

- Do not install where there is the danger of combustible gas leakage.

- Do not install the unit near a source of heat, steam, or flammable gas.

- Install the unit where drainage does not cause any trouble.

- Install the indoor unit, outdoor unit, power supply cable, transmission cable, and remote controller cable at least 1 m away from a television or radio receivers. The purpose of this is to prevent TV reception interference or radio noise. (Even if they are installed more than 1 m apart, you could still receive noise under some signal conditions.)

- If children under 10 years old may approach the unit, take preventive measures so that they cannot reach the unit.


- Take precautions to prevent the unit from falling.

- (1) Install the indoor unit on a place having a sufficient strength so that it withstands against the weight of the indoor unit.
- (2) The inlet and outlet ports should not be obstructed; the air should be able to blow all over the room.
- (3) Leave the space required to service the air conditioner.
- (4) Install the unit where connection to the outdoor unit is easy.
- (5) Install the unit where the connection pipe can be easily installed.


- (6) Install the unit where the drain pipe can be easily installed.
- (7) Install the unit where noise and vibrations are not amplified.
- (8) Take servicing, etc., into consideration and leave the spaces. Also install the unit where the filter can be removed.
- (9) Do not install the unit where it will be exposed to direct sunlight.

3.2. Installation dimension

Floor console

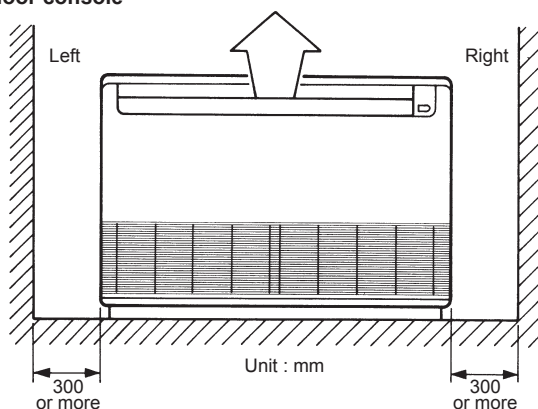

Under ceiling

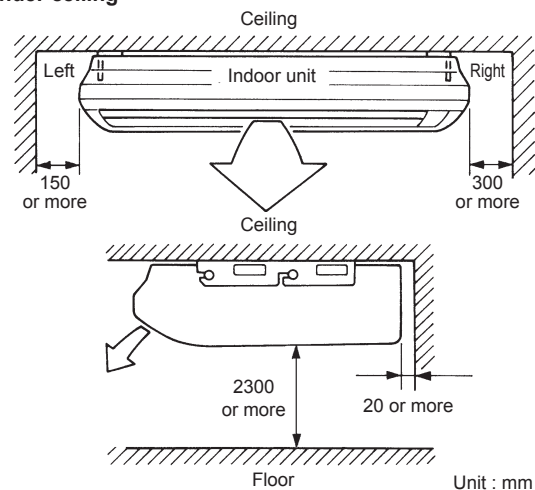


3.3. Installation the unit

⚠ WARNING

- Install the air conditioner in a location which can withstand a load of at least 5 times the weight of the main unit and which will not amplify sound or vibration. If the installation location is not strong enough, the indoor unit may fall and cause injuries.

3.3.1. Preparing indoor unit installation

Open the intake grille and remove the 3 screws.

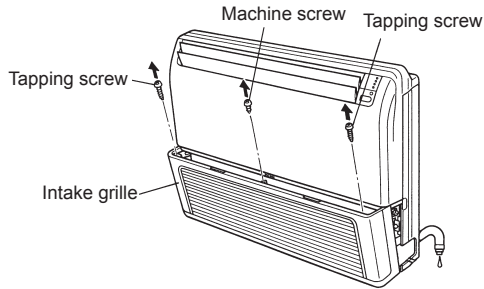

Remark : The main unit can be wired before the indoor unit is installed.
Select the most appropriate installation order.


3.3.2. Indoor unit installation

A. Floor console type


Drilling for piping

Select piping and drain directions.

The piping and drain can be made in 3 directions as shown below.

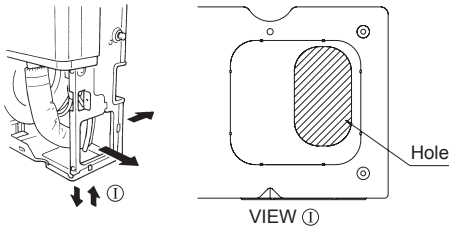


For direction, bore the oval hole shown in the above figure.
The drain hose can be connected to either the left or right side.

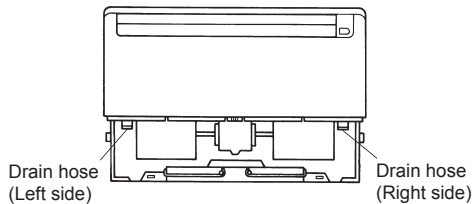


When the directions are selected, drill a 10 cm dia. hole on the wall so that the hole is tilted downward toward the outdoor for smooth water flow.

When the pipe is led out from the rear, make a hole as shown in the figure, at the position shown.

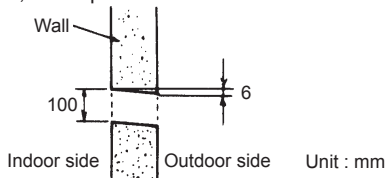


When installing set to wall install the accessory wall bracket at the position as shown in the figure, and mount the set to it.

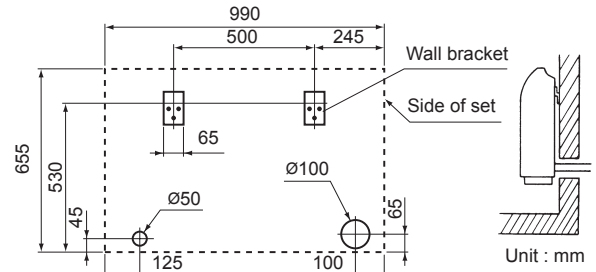


B. Under ceiling type

Using the installation template, drill holes for piping and suspension bolts (for holes).

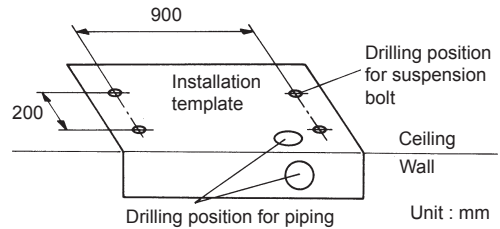

B-1. Drilling for piping

Select piping and drain directions.

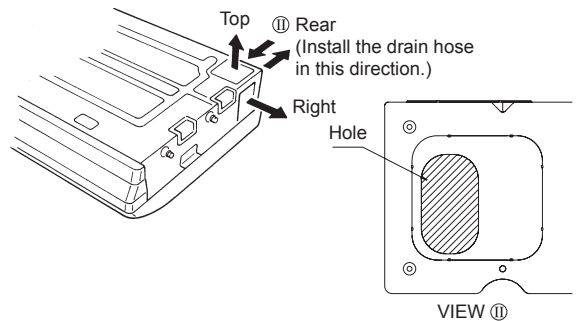


For direction, bore the oval hole shown in the above figure.

CAUTION

- Install the drain hose at the rear; it should not be installed on the top or right side.


When the directions are selected, drill 80 mm and 50 mm or 150 mm dia. hole on the wall so that the hole is tilted downward toward the outdoor for smooth water flow.

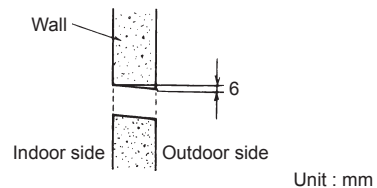

B-2. Drilling the holes and attaching the suspension bolts

Drill $\Phi 25$ mm holes at the suspension bolt locations, then install the bolts.


Bolt Strength	980 to 1470 N (100 to 150 kgf)
---------------	--------------------------------

 

[If using anchor bolts]


Drill holes for anchor bolts at the locations at which you will set the suspension bolts. Note that anchor bolts are M10 bolts (to be obtained locally).

Anchor-Bolt Strength	980 to 1470 N (100 to 150 kgf)
----------------------	--------------------------------

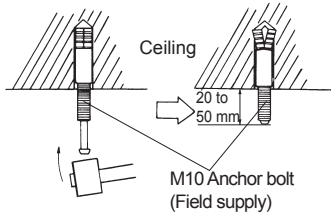


B-3. Installing Brackets

Install the bracket with nuts, spring washers.

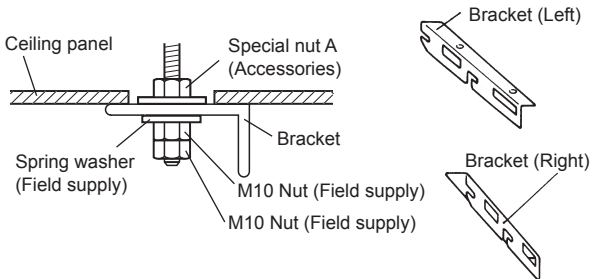


B-4. Installing indoor unit

Reset the hex bolts as shown in the figure

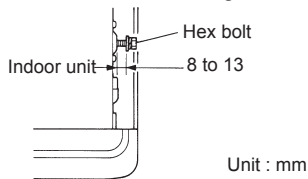


Apply the indoor unit to the brackets.

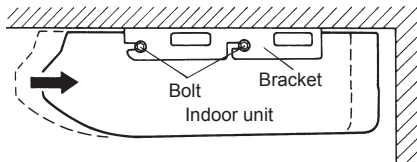

Now, securely tighten the hex bolts in both sides.

3.3.3. Barrier and RFM base removal and installation

- (1) Remove the barriers by removing the 4 fixing screws (2 screws each).
- (2) Remove the RFM base by removing the 2 fixing screws and unhooking the 1 hook.
- (3) After completing the work, install the barriers and RFM base as they were originally.

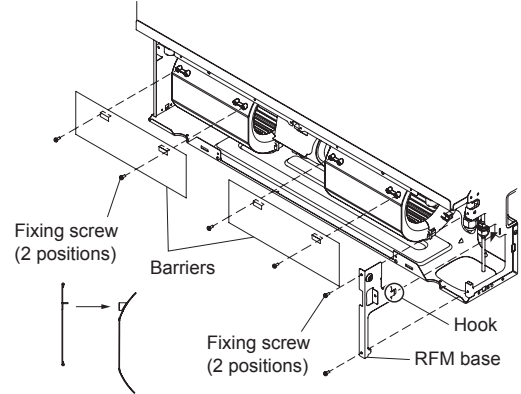

Install the barriers in the correct direction.

4. PIPE INSTALLATION

⚠ CAUTION

- Be more careful that foreign matter (oil, water, etc.) does not enter the piping than with refrigerant R410A models. Also, when storing the piping, securely seal the openings by pinching, taping, etc.
- While welding the pipes, be sure to blow dry nitrogen gas through them.

4.1. Selecting the pipe material

⚠ CAUTION

- Do not use existing pipes.
- Use pipes that have clean external and internal sides without any contamination which may cause trouble during use, such as sulfur, oxide, dust, cutting waste, oil, or water.
- It is necessary to use seamless copper pipes. Material : Phosphor deoxidized seamless copper pipes. It is desirable that the amount of residual oil is less than 40 mg/10 m.
- Do not use copper pipes that have a collapsed, deformed, or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants.
- Improper pipe selection will degrade performance. As an air conditioner using R410A incurs pressure higher than when using conventional refrigerant, it is necessary to choose adequate materials.
- Thicknesses of copper pipes used with R410A are as shown in the table.
- Never use copper pipes thinner than those indicated in the table even if they are available on the market.

Thicknesses of Annealed Copper Pipes (R410A)

Pipe outside diameter [mm (in.)]	Thickness [mm]
6.35 (1/4)	0.80
9.52 (3/8)	0.80
12.70 (1/2)	0.80
15.88 (5/8)	1.00
19.05 (3/4)	1.20

4.2. Pipe requirement

⚠ CAUTION

- Refer to the Installation Manual of the outdoor unit for description of the length of connecting pipe or for difference of its elevation.

- Use pipe with water-resistant heat insulation.


⚠ CAUTION

- Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leaks. Use heat insulation with heat resistance above 120 °C. (Reverse cycle model only)
- In addition, if the humidity level at the installation location of the refrigerant piping is expected to exceed 70 %, install heat insulation around the refrigerant piping. If the expected humidity level is 70-80 %, use heat insulation that is 15 mm or thicker and if the expected humidity exceeds 80 %, use heat insulation that is 20 mm or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation.
- In addition, use heat insulation with heat conductivity of 0.045 W/(m·K) or less (at 20 °C).

4.3. Flare connection (pipe connection)

4.3.1. Flaring

- Use special pipe cutter and flare tool exclusive for R410A.
- Cut the connection pipe to the necessary length with a pipe cutter.
 - Hold the pipe downward so that cuttings will not enter the pipe and remove any burrs.
 - Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool. Use the special R410A flare tool, or the conventional flare tool. Leakage of refrigerant may result if other flare nuts are used.
 - Protect the pipes by pinching them or with tape to prevent dust, dirt, or water from entering the pipes.

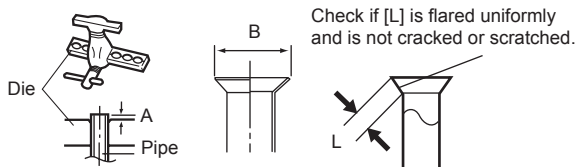

Pipe outside diameter [mm (in.)]	Dimension A [mm]	Dimension B _{3.4} [mm]
	Flare tool for R410A, clutch type	
6.35 (1/4)	0 to 0.5	9.1
9.52 (3/8)		13.2
12.70 (1/2)		16.6
15.88 (5/8)		19.7
19.05 (3/4)		24.0

When using conventional flare tools to flare R410A pipes, the dimension A should be approximately 0.5 mm more than indicated in the table (for flaring with R410A flare tools) to achieve the specified flaring. Use a thickness gauge to measure the dimension A.

Width across flats



Pipe outside diameter [mm (in.)]	Width across flats of Flare nut [mm]
6.35 (1/4)	17
9.52 (3/8)	22
12.70 (1/2)	26
15.88 (5/8)	29
19.05 (3/4)	36

4.3.2. Bending pipes

- The pipes are shaped by your hands or pipe bender. Be careful not to collapse them.
- Do not bend the pipes in an angle more than 90°.
- When pipes are repeatedly bend or stretched, the material will harden, making it difficult to bend or stretch them any more. Do not bend or stretch the pipes more than 3 times.


⚠ CAUTION

- To prevent breaking of the pipe, avoid sharp bends.
- If the pipe is bent repeatedly at the same place, it will break.

4.3.3. Pipe connection

Connect the silencer pipe to the small (liquid) pipe. Centering the pipe against port on the indoor unit, turn the flare nut with your hand.


Be sure that the small pipe is completely installed before connecting the large pipe.

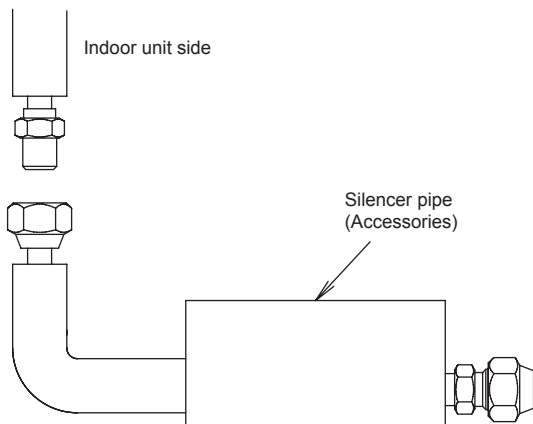

⚠ CAUTION

- Be sure to apply the pipe against the port on the indoor unit and the outdoor unit correctly. If the centering is improper, the flare nut cannot be tightened smoothly. If the flare nut is forced to turn, the threads will be damaged.
- Do not remove the flare nut from the indoor unit pipe until immediately before connecting the connection pipe.
- Do not use mineral oil on flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.


If necessary, cut the silencer pipe and use it.

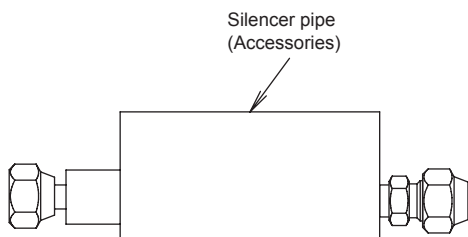

⚠ CAUTION

- Hold the torque wrench at its grip, keeping it in the right angle with the pipe, in order to tighten the flare nut correctly.
- Tighten the flare nuts with a torque wrench using the specified tightening method. Otherwise, the flare nuts could break after a prolonged period, causing refrigerant to leak and generate a hazardous gas if the refrigerant comes into contact with a flame.

When the flare nut is tightened properly by your hand, hold the body side coupling with a separate spanner, then tighten with a torque wrench.

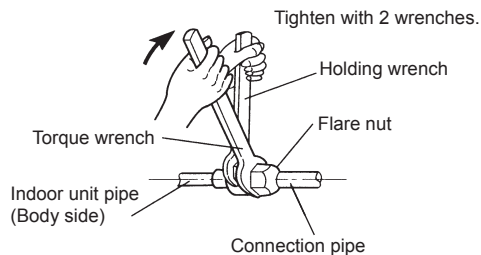

Flare nut [mm (in.)]	Tightening torque [N·m (kgf·cm)]
6.35 (1/4) dia.	16 to 18 (160 to 180)
9.52 (3/8) dia.	32 to 42 (320 to 420)
12.70 (1/2) dia.	49 to 61 (490 to 610)
15.88 (5/8) dia.	63 to 75 (630 to 750)
19.05 (3/4) dia.	90 to 110 (900 to 1,100)

4.4. Installing heat insulation


⚠ CAUTION


- After checking for gas leaks (refer to the Installation Manual of the outdoor unit), perform this section.
- Install heat insulation around both the large (gas) and small (liquid) pipes. Failure to do so may cause water leaks.

After checking for gas leaks, insulate by wrapping insulation around the 2 parts (Gas and Liquid) of the indoor unit coupling, using the coupler heat insulation.

After installing the coupler heat insulation, wrap both ends with vinyl tape so that there is no gap.

Secure both ends of the heat insulation material using Binder. And finally fix connection pipe (Liquid) to connection pipe (Gas) by rolling vinyl tape over coupler heat insulation (Gas) and coupler heat insulation (Liquid).

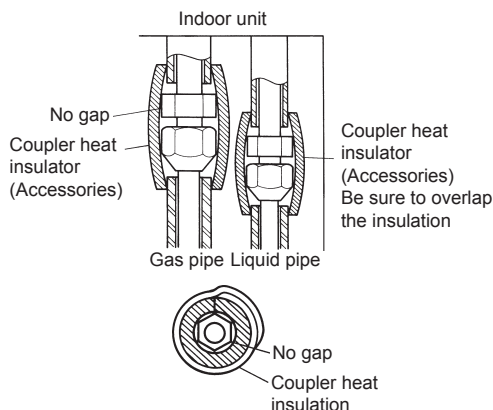

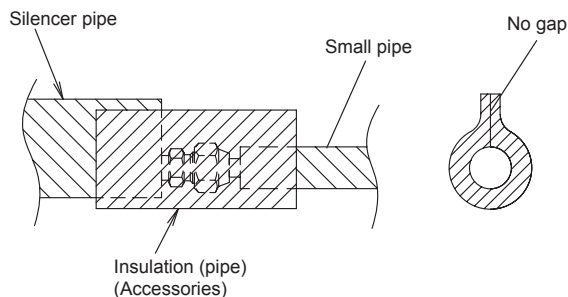

CAUTION

- There should be no gaps between the insulation and the unit.

5. INSTALLING DRAIN HOSE

CAUTION


- Install the drain hose in accordance with the instructions in this Installation Manual and keep the area warm enough to prevent condensation. Problems with the piping may lead to water leaks.

Use general hard polyvinyl chloride pipe and connect it with adhesive (polyvinyl chloride) so that there is no leakage. Always heat insulate the indoor side of the drain hose.

- Use a drain pipe that matches the size of the drain hose.
- Do not perform a rise, trap and air bleeding.
- Provide a downward gradient (1/100 or more).
- Provide supporters when long pipes are installed.
- Use an insulation material as needed, to prevent the pipes from freezing.
- Install the pipes in a way that allows for the removal of the control box.

	O.D.
Drain pipe	32 mm (VP25)

When using the drain port on the left side of the unit, remove the drain cap and install it to the right side drain port. (Only when suspended from the ceiling)

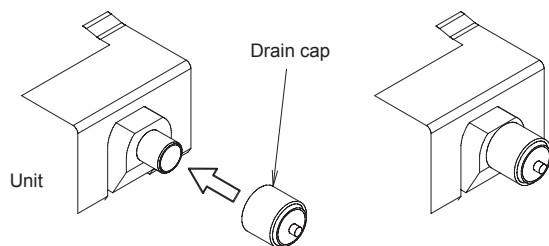


INSTALL THE DRAIN HOSE


Working procedure

- 1) Install the attached drain hose to the drain port of the body. Install the hose band from the top of the hose within the graphic display area. Secure firmly with the hose band.
- 2) Use vinyl adhesive agent to glue the drain piping (PVC pipe VP25) which is prepared on site or piping socket. (Apply color adhesive agent evenly until the gauge line and seal)
- 3) Check the drainage.
- 4) Install the heat insulation.
- 5) Use the attached heat insulation to insulate the drain port and band parts of the body.

Top view

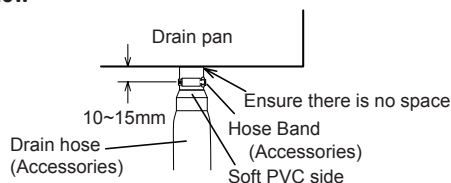


Side view

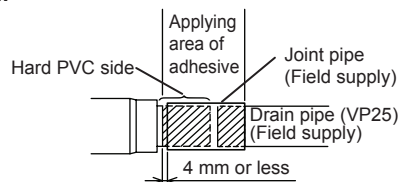


Wrap the Drain hose insulation around the drain hose connection.

Top view

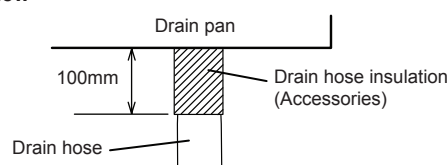


Hose opening view

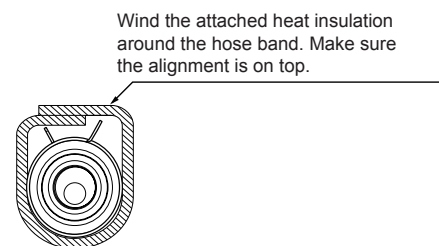


A. Floor console type

Be sure to arrange the drain hose so that it is leveled lower than the drain hose connecting port of the indoor unit.

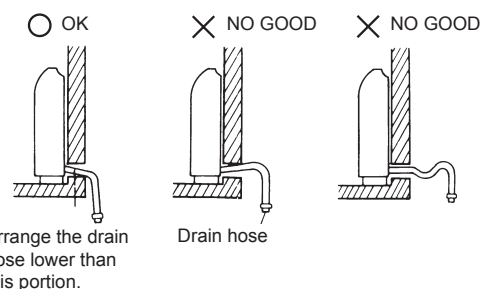


CAUTION

- Do not install the unit so that the drain hose side is too high. Height A should be less than 5 mm.

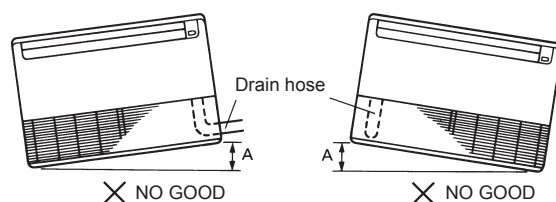


B. Under ceiling type

Be sure to arrange the drain hose so that it is leveled lower than the drain hose connecting port of the indoor unit.

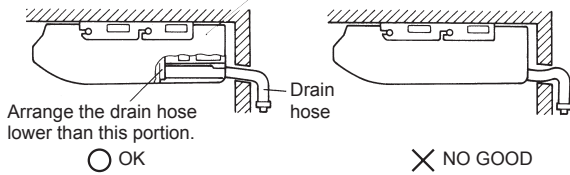

When drain hose is arranged backward. Secure the drain hose with the VT wire.

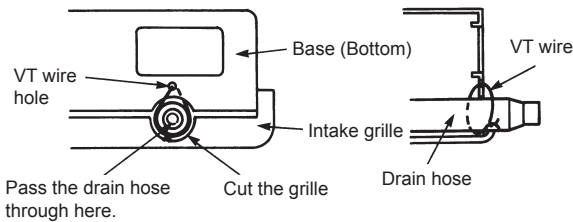

6. ELECTRICAL WIRING

⚠ WARNING

- Electrical work must be performed in accordance with this Manual by a person certified under the national or regional regulations. Be sure to use a dedicated circuit for the unit. An insufficient power supply circuit or improperly performed electrical work can cause serious accidents such as electric shock or fire.
- Before starting work, check that power is not being supplied to the indoor unit and outdoor unit.
- Use the included connection cables and power cables or ones specified by the manufacturer. Improper connections, insufficient insulation, or exceeding the allowable current can cause electric shock or fire.
- For wiring, use the prescribed type of cables, connect them securely, making sure that there are no external forces of the cables applied to the terminal connections. Improperly connected or secured cables can cause serious accidents such as overheating the terminals, electric shock, or fire.
- Do not modify the power cables, use extension cables, or use any branches in the wiring. Improper connections, insufficient insulation, or exceeding the allowable current can cause electric shock or fire.
- Match the terminal board numbers and connection cable colors with those of the outdoor unit. Erroneous wiring may cause burning of the electric parts.
- Securely connect the connection cables to the terminal board. In addition, secure the cables with wiring holders. Improper connections, either in the wiring or at the ends of the wiring, can cause a malfunction, electric shock, or fire.
- Always fasten the outside covering of the connection cable with the cable clamp. (If the insulator is chafed, electric leakage may occur.)
- Securely install the electrical box cover on the unit. An improperly installed electrical box cover can cause serious accidents such as electric shock or fire through exposure to dust or water.

- Install sleeves into any holes made in the walls for wiring. Otherwise, a short circuit could result.
- Install a ground leakage breaker. In addition, install the ground leakage breaker so that the entire AC main power supply is cut off at the same time. Otherwise, electric shock or fire could result.
- Always connect the ground cable. Improper grounding work can cause electric shocks.
- Install the remote controller cables so as not to be direct touched with your hand.
- Perform wiring work in accordance with standards so that the air conditioner can be operated safely and positively.
- Connect the connection cable firmly to the terminal board. Imperfect installation may cause a fire.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚠ CAUTION

- Ground the unit.
Do not connect the ground cable to a gas pipe, water pipe, lightning rod, or a telephone ground cable. Improper grounding may cause electric shock.
- Do not connect power supply cables to the transmission or remote controller terminals, as this will damage the product.
- Never bundle the power supply cable and transmission cable, remote controller cable together. Separate these cable by 50 mm or more. Bundling these cables together will cause miss operation or breakdown.
- When handling PCB, static electricity charged in the body may cause malfunction of the PCB. Follow the cautions below:
 - Establish a ground for the indoor and outdoor units and peripheral devices.
 - Cut power (breaker) off.
 - Touch metal part of the indoor and outdoor units for more than 10 seconds to discharge static electricity charged in the body.
 - Do not touch terminals of parts and patterns implemented on PCB.

6.1. Electrical requirement

Voltage rating	230 V
Operating range	198 - 264 V


	Recom- mended cable size (mm²)	Cable type	Remark
Power supply cable	2.5	Type 245 IEC57 or equivalent	1ø 50 Hz 198 - 264 V 2 Cable + ground
Transmission cable	0.33	LONWORKS compatible cable	22 AWG LEVEL 4 (NEMA) non-polar 2 core, twisted pair solid core diameter 0.65 mm
Remote controller cable	0.33	Sheathed PVC cable*	Polar 3 core Twisted pair

*: Use shielded cable in accordance with local rules for remote controller cable.

Fuse capacity (A)	Breaker for leakage current
15	30 mA 0.1 sec. or less

6.2. Wiring method

(EXAMPLE)

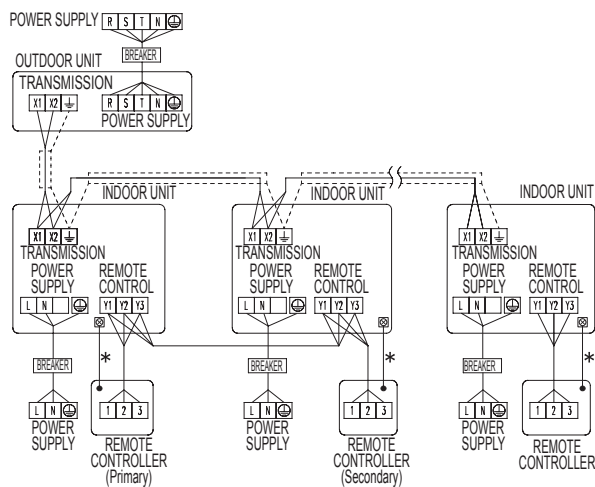


*Ground the remote controller if it has a ground wire.

6.3. Unit wiring

- Before attaching the cable to terminal block.


6.3.1. Power supply cable

Adjust the length of power supply cable to avoid excessive tension with referring figure below.

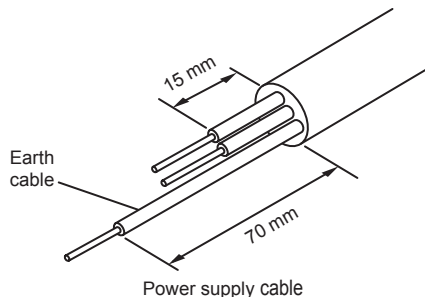

A. For solid core wiring

- (1) To connect the electrical terminal, follow the below diagram and connect after looping it around the end of the cable.
- (2) Use the specified cables, connect them securely, and fasten them so that there is no stress placed on the terminals.
- (3) Use an appropriate screwdriver to tighten the terminal screws. Do not use a screwdriver that is too small, otherwise, the screw heads may be damaged and prevent the screws from being properly tightened.
- (4) Do not tighten the terminal screws too much, otherwise, the screws may break.
- (5) See the table for the terminal screw tightening torques.
- (6) Please do not fix 2 power supply cables with 1 screw.

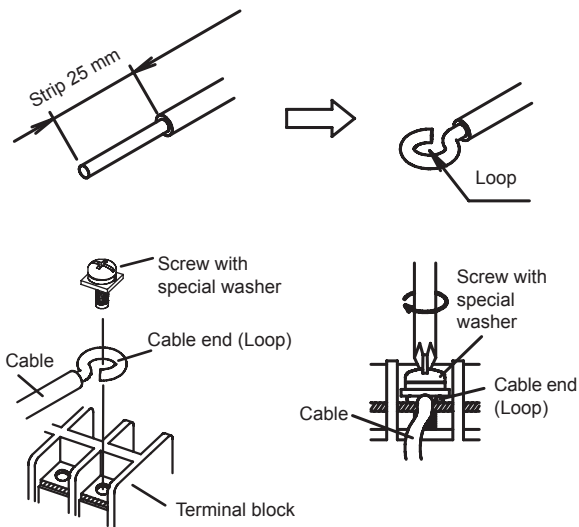


⚠ WARNING

- When using solid core cables, do not use the ring terminal. If you use the solid core cables with the ring terminal, the ring terminal's pressure bonding may malfunction and cause the cables to abnormally heat up.

B. For strand wiring

- (1) Use ring terminals with insulating sleeves as shown in the figure below to connect to the terminal block.
- (2) Securely clamp the ring terminals to the cables using an appropriate tool so that the cables do not come loose.
- (3) Use the specified cables, connect them securely, and fasten them so that there is no stress placed on the terminals.
- (4) Use an appropriate screwdriver to tighten the terminal screws. Do not use a screwdriver that is too small, otherwise, the screw heads may be damaged and prevent the screws from being properly tightened.
- (5) Do not tighten the terminal screws too much, otherwise, the screws may break.
- (6) See the table for the terminal screw tightening torques.
- (7) Please do not fix 2 power supply cables with 1 screw.

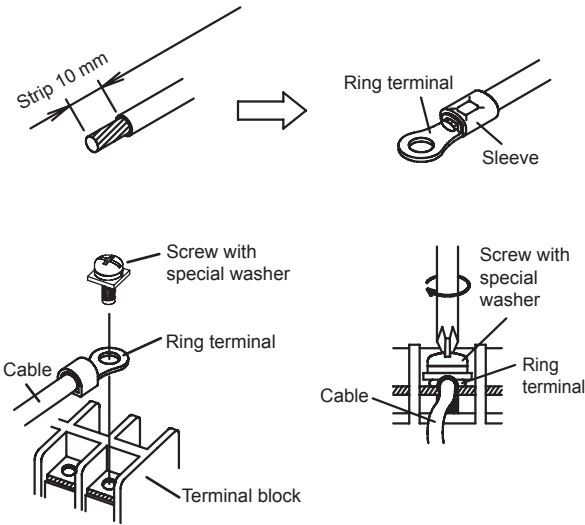



⚠ WARNING

- Use ring terminals and tighten the terminal screws to the specified torques, otherwise, abnormal overheating may be produced and possibly cause heavy damage inside the unit.

Tightening torque


M4 screw (Power supply/L, N, GND)	1.2 to 1.8 N·m (12 to 18 kgf·cm)
--------------------------------------	-------------------------------------

6.3.2. Transmission and Remote controller cable

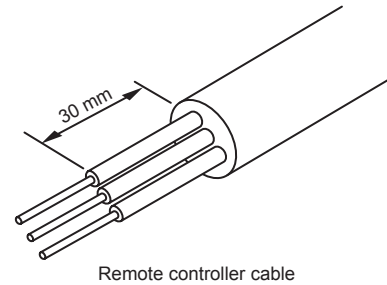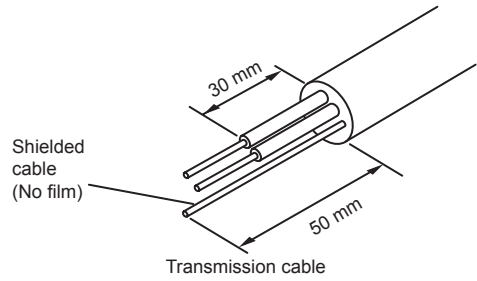

- Connect remote controller and transmission cables as shown in Fig. B.
- When the 2 cables are attached.

Fig. B

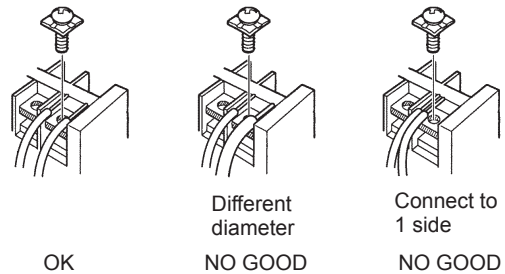

⚠ WARNING

- Tighten the terminal screws to the specified torques, otherwise, abnormal overheating may be produced and possibly cause heavy damage inside the unit.

Tightening torque


M3 screw (Transmission/X1, X2) (Remote controller/Y1, Y2, Y3)	0.5 to 0.6 N·m (5 to 6 kgf·cm)
---	-----------------------------------

⚠ CAUTION

- To peel the film from the lead cable, use a dedicated tool that will not damage the conductor cable.
- When installing a screw on the terminal block, do not cut the cable by overtightening the screw. On the other hand, an undertightened screw can cause faulty contact, which will lead to a communication failure.

6.4. Connection of wiring

(1) Remove the electric component box.

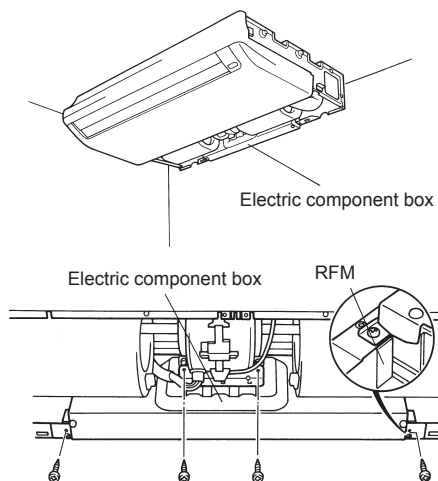


CAUTION


- Do not remove the RFM fixing screws. If the stays are removed, the electric component box will fall.
- If you use as "Floor console", you must remove screws and RFMs (2 position).

When removing the electric component box, remove the clamp from the cables.


After completing the work, fasten the cables as they were originally by installing the clamp.

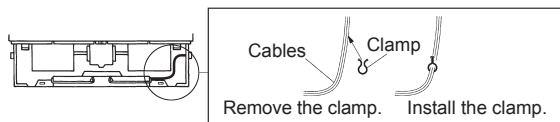

(2) Pull out the electric component box.

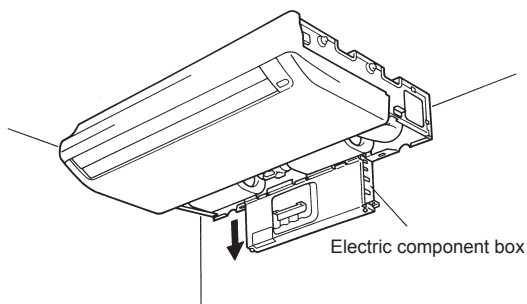

(3) Remove the electric component box cover.
Remove the 3 tapping screws.

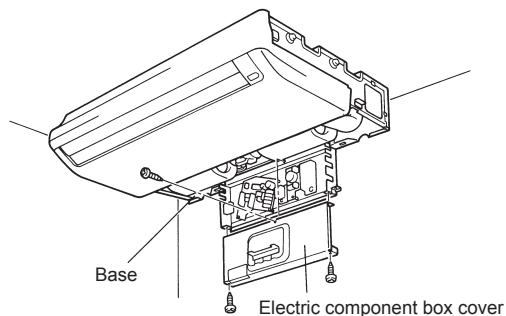

CAUTION


- Be careful not to pinch the lead cables between the electric component box and base.

(4) Wiring

- * When there is 1 transmission cable or remote controller cable, fasten it the same way as shown in the figure with a binder (medium).


Remote controller cable

Y1: Red, Y2: White, Y3: Black X1, X2: Transmission cable

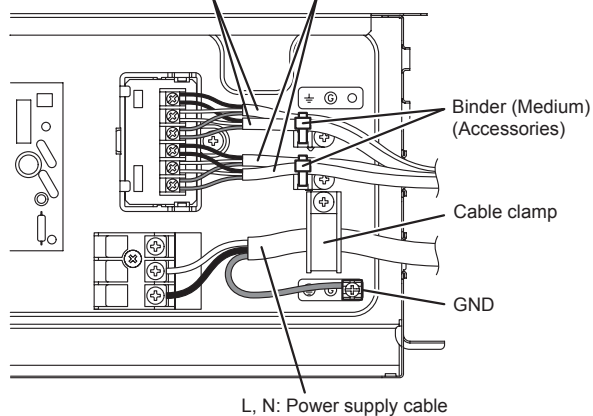

6.5. External input and external output (Optional parts)

Controller PCB

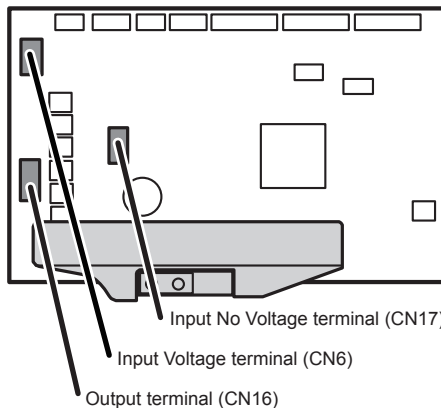

(1) External input terminals

- Indoor unit can be Start/Stop or Emergency stop, Forced stop by using indoor unit PCB CN6 or CN17.

Wiring methods and specifications


- A twisted pair cable (22AWG) should be used. Maximum length of cable is 150 m.
- * Use an external input and output cable with appropriate external dimension, depending on the number of cables to be installed.
- The wire connection should be separate from the power cable line.

Input selection

Use either one of these types of terminal according to the application. (Both types of terminals cannot be used simultaneously.)

Voltage terminal ([CN6])

When a power supply must be provided at the input device you want to connect, use the voltage terminal ([CN6]).

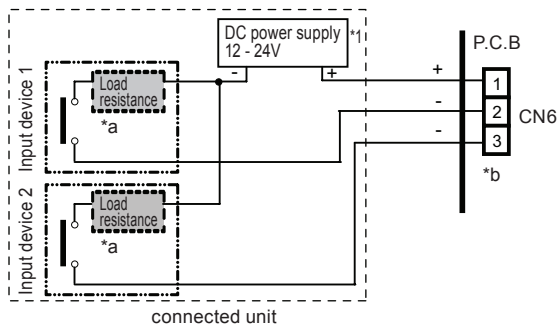


*1 Make the power supply DC12 to 24V. Select a power supply capacity with an ample surplus for the connected load. Do not impress a voltage exceeding 24V across pins 1-2, and 1-3.

*a The allowable current is DC5~10mA. (Recommended: DC5mA)
Provide a load resistance such that the current becomes DC10mA or less.
Select very low current use contacts (usable at DC12V, DC1mA or less).


*b The polarity is [+] for pin 1 and [-] for pin 2 and 3.
Connect correctly.

When connected to voltage terminals of multiple indoor units with a connected unit, be sure to make a branch outside the indoor unit using a pull box, etc. as shown on below example.

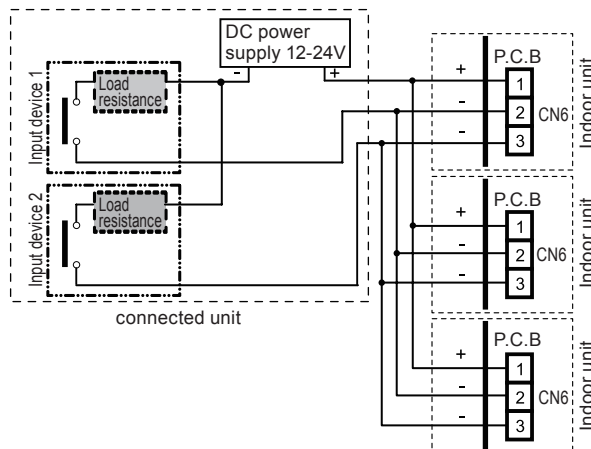

- No voltage terminal ([CN17])

When a power supply is unnecessary at the input device you want to connect, use the no voltage terminal ([CN17]).

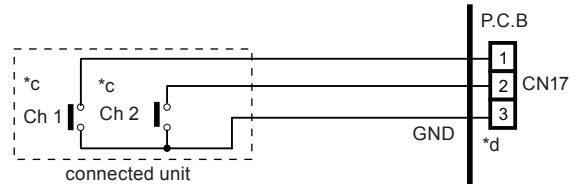


*c Select very low current use contacts (usable at DC12V, DC1mA or less).

*d The wiring is different from voltage terminals. Be sufficiently careful when wiring.

When connected to no voltage terminals of multiple indoor units with a connected unit, insulate each indoor unit with relay, etc. as shown on below example.

When connected to multiple indoor units directly, it will cause breakdown.

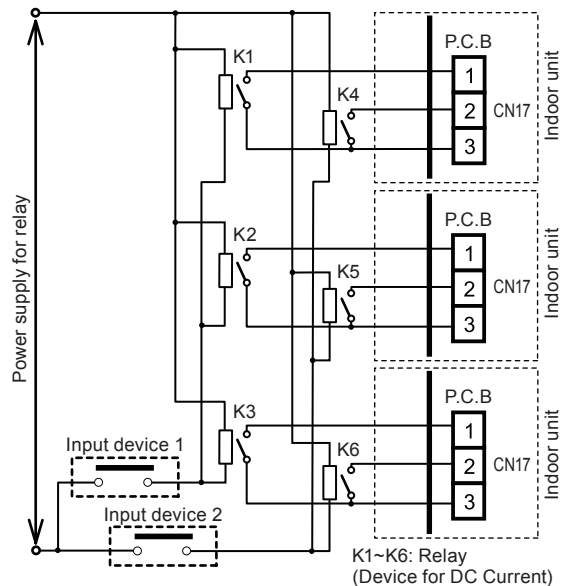


Operation behavior

Input signal type

The input signal type can be selected. It is switched by Dip-sw on the indoor unit PCB.

Dip-sw [Set 2-2]	Input signal type
OFF	Edge
ON	Pulse

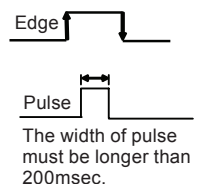

- When function setting is "Start/Stop" mode
In the case of "Edge" input

Connector	Input signal	Command
Ch1 of CN6 or CN17	OFF → ON	Operation
	ON → OFF	Stop

In the case of "Pulse" input

Connector	Input signal	Command
CN6 or CN17	Ch1	OFF → ON Operation
	Ch2	OFF → ON Stop

- * The last command has priority.
- * The indoor units within the same remote controller group operates in the same mode.

• When function setting is “Emergency stop” mode
In the case of “Edge” input

Connector	Input signal	Command
Ch1 of CN6 or CN17	OFF → ON	Emergency stop
	ON → OFF	Normal

In the case of “Pulse” input

Connector		Input signal	Command
CN6 or CN17	Ch1	OFF → ON	Emergency stop
	Ch2	OFF → ON	Normal

* All indoor units of same refrigerant system stops when Emergency stop operates.

• When function setting is “Forced stop” mode
In the case of “Edge” input

Connector	Input signal	Command
Ch1 of CN6 or CN17	OFF → ON	Forced stop
	ON → OFF	Normal

In the case of “Pulse” input

Connector		Input signal	Command
CN6 or CN17	Ch1	OFF → ON	Forced stop
	Ch2	OFF → ON	Normal

* When the forced stop is triggered, indoor unit stops and Start/Stop operation by a remote controller is restricted.

* **When forced stop function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.**


• Selection method of functions

“Start/Stop” mode or “Emergency stop” mode, “Forced stop” mode can be selected with function setting of indoor unit.

(2) External output terminals

- When picking up output signals for operating status, abnormal conditions or indoor unit status.

Wiring methods and specifications

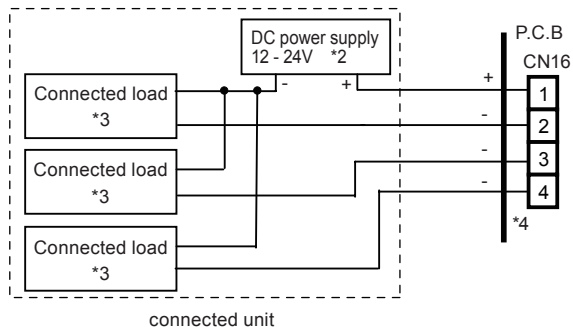

*2 Provide a DC12 to 24V power supply. Select a power supply capacity with an ample surplus for the connected load.

*3 The allowable current is 30mA or less. Provide a load resistance such that the current becomes 30mA or less.

*4 Polarity is [+] for pin 1 and [-] for pins 2-4. Connect correctly. Do not impress a voltage exceeding 24V across pins 1-2, 1-3, and 1-4.

Operation behavior

Connector		Output voltage	Status
CN16	External output1 Pins 1-2	0V	Stop
		DC 12-24 V *2	Operation
	External output2 Pins 1-3	0V	Normal
		DC 12-24 V *2	Error
	External output3 Pins 1-4	0V	Indoor unit fan stop
		DC 12-24 V *2	Indoor unit fan operation

A twisted pair cable (22AWG) should be used. Maximum length of cable is 150 m.


* Use an external input and output cable with appropriate external dimension, depending on the number of cables to be installed.

(3) Connection methods

• Wire modification

Use a tool to cut off the terminal on the end of the wire, and then remove the insulation from the cut end of the wire. Connect the wire with connecting wire with solder.

Important: Be sure to insulate the connection between the wires.

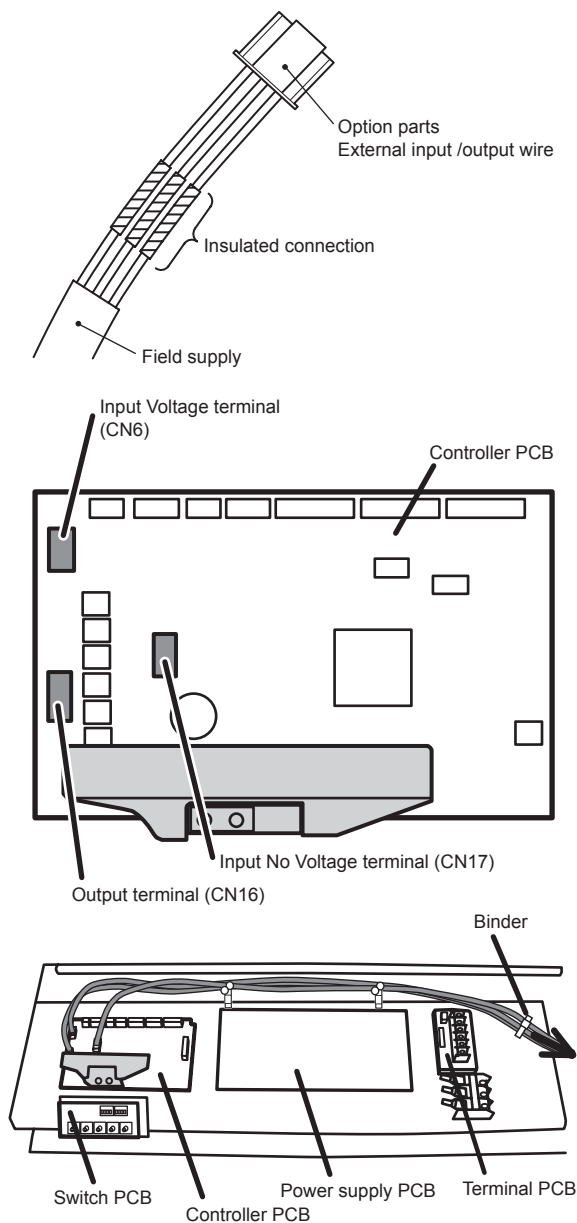

7. FIELD SETTING

There are 3 methods for address setting by FIELD SETTING as follows.

Set by either of the methods.

Each setting method is described (1) to (3) below.

- (1) IU AD, REF AD SW settings....This section (7.1. Setting the address)
- (2) Remote controller settings Refer to the wired or wireless remote controller manual for detailed setting information. (Set IU AD, REF AD SW to 0)
- (3) Automatic address settings... Refer to the outdoor unit manual for detailed setting information. (Set IU AD, REF AD SW to 0)

7.1. Setting the address

Manual address setting method



- The indoor unit address and the refrigerant circuit address can also be set up through the wireless remote controller.

⚠ CAUTION

- Be sure to turn OFF the power before performing the field setting.



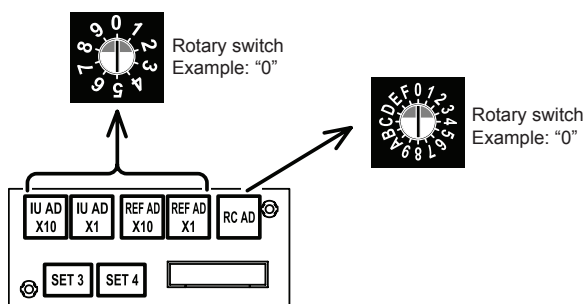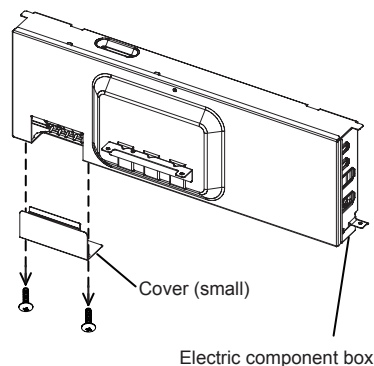

- Set it according to the following procedures when setting manually.

It can be set manually if the cover (small) is removed under the condition that the electric component box cover is attached.



CAUTION

- Use an insulated screwdriver to set the dip switches.

Setting	Setting range	Type of switch
Indoor unit address	0–63	Setting example 2  IU AD x 10  IU AD x 1
Refrigerant circuit address	0–99	Setting example 63  REF AD x 10  REF AD x 1

(1) Indoor unit address

Rotary switch (IU AD × 1).....Factory setting “0”
 Rotary switch (IU AD × 10).....Factory setting “0”
 When connecting multiple indoor units to 1 refrigerant system, set the address at IU AD SW as shown in the Table A.

(2) Refrigerant circuit address

Rotary switch (REF AD × 1).....Factory setting “0”
 Rotary switch (REF AD × 10).....Factory setting “0”
 In the case of multiple refrigerant systems, set REF AD SW as shown in the Table A for each refrigerant system.
 Set to the same refrigerant circuit address as the outdoor unit.


Table A

Address	Rotary Switch Setting		Address	Rotary Switch Setting	
	REF AD SW			IU AD SW	
Refrigerant circuit	× 10	× 1	Indoor unit	× 10	× 1
0	0	0	0	0	0
1	0	1	1	0	1
2	0	2	2	0	2
3	0	3	3	0	3
4	0	4	4	0	4
5	0	5	5	0	5
6	0	6	6	0	6
7	0	7	7	0	7
8	0	8	8	0	8
9	0	9	9	0	9
10	1	0	10	1	0
11	1	1	11	1	1
12	1	2	12	1	2
⋮	⋮	⋮	⋮	⋮	⋮
99	9	9	63	6	3


Do not set the indoor unit address (IU AD SW) at 64 to 99. It may result failure.

(3) Remote controller address

Rotary switch (RC AD SW).....Factory setting “0”
 When connecting multiple indoor units to 1 standard wired remote controller, set the address at RC AD SW in sequence from 0.

Setting	Setting range	Type of switch
Remote controller address	0–15	Setting example 0  RC AD

Example If 4 indoor units are connected.

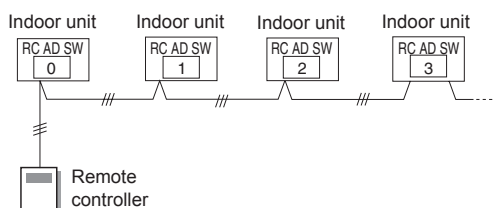

RC AD SW	0	1	2	3	4	5	6	7
Address	0	1	2	3	4	5	6	7
RC AD SW	8	9	A	B	C	D	E	F
Address	8	9	10	11	12	13	14	15


7.2. Custom code setting

Selecting the custom code prevents the indoor unit mix-up. (Fig. B)

(Up to 4 codes can be set.)

Perform the setting for both the indoor unit and the remote controller.

Fig. B

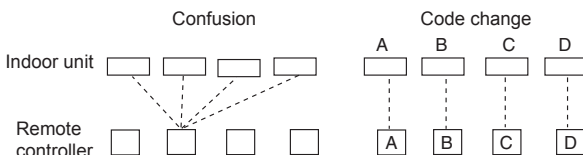

• Custom code setting for indoor unit

Set the DIP SW SET 3 SW1, SW2, referring to the Table B.

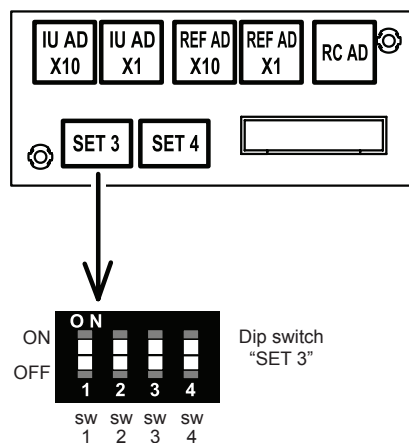


Table B

	Custom code			
	A (Factory setting)	B	C	D
DIP SW SET 3 SW1	OFF	ON	OFF	ON
DIP SW SET 3 SW2	OFF	OFF	ON	ON


7.3. Function setting

- FUNCTION SETTING can be performed with the wired or wireless remote controller.
(The remote controller is optional equipment)
- Refer to the wired or wireless remote controller manual for detailed setting information. (Set IU AD, REF AD SW to 0)
- Refer to "7.1. Setting the address" for indoor unit address and refrigerant circuit address settings.
- Turn the power of the indoor unit ON before starting the setting.
 - * Turning on the power indoor units initializes EEV, so make sure the piping air tight test and vacuuming have been conducted before turning on the power.
 - * Also check again to make sure no wiring mistakes were made before turning on the power.

Function details

Function	Function number	Setting number	Default	Details
Filter indicator interval	11	00	Default	Adjust the filter cleaning interval notification. If the notification is too early, change to setting 01. If the notification is too late, change to setting 02.
		01	Longer	
		02	Shorter	
Filter indicator action	13	00	Enable	Enable or disable the filter indicator. Setting 02 is for use with a central remote controller.
		01	Disable	
		02	Display only on central remote controller	
Horizontal swing airflow direction	24	00	Default	Adjust the horizontal swing airflow direction. (For horizontal swing equipped models)
		01	Left half	
		02	Right half	
Cool air temperature trigger	30	00	Default	Adjust the cool air trigger temperature. To lower the trigger temperature, use setting 01. To raise the trigger temperature, use setting 02.
		01	Adjust (1)	
		02	Adjust (2)	
Hot air temperature trigger	31	00	Default	Adjust the hot air trigger temperature. To lower the trigger temperature by 6 degrees C, use setting 01. To lower the trigger temperature by 4 degrees C, use setting 02. To raise the trigger temperature, use setting 03.
		01	Adjust (1)	
		02	Adjust (2)	
		03	Adjust (3)	
Auto restart	40	00	Enable	Enable or disable automatic system restart after a power outage. * Auto restart is an emergency function such as for power failure etc. Do not start and stop the indoor unit by this function in normal operation. Be sure to operate by the control unit, converter or external input device.
		01	Disable	
External control	46	00	Start/Stop	Allow an external controller to start or stop the system, or to perform an emergency stop. * If an emergency stop is performed from an external controller, all refrigerant systems will be disabled. * If forced stop is set, indoor unit stops by the input to the external input terminals, and Start/Stop by a remote controller is restricted.
		01	Emergency stop	
		02	Forced stop	
Error report target	47	00	All	Change the target for reporting errors. Errors can either be reported in all locations, or only on the central remote controller.
		01	Display only on central remote controller	

7.3.1. Button name and function

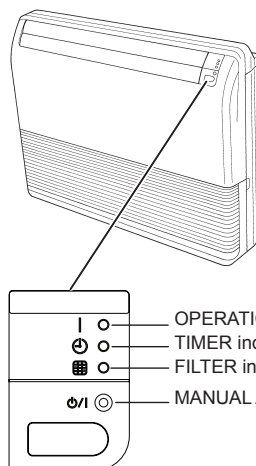

7.3.2. Checking the function settings

- Press and hold the "MANUAL AUTO" button on the indoor unit for 3 seconds to check the function settings. It is necessary to disconnect the power in order to return to normal operation mode.


(1) Indoor unit and refrigerant address indication

Indication pattern

Indicator name	Indication pattern	
	Indoor unit address	Refrigerant address
OPERATION indicator lamp (Green)	ON	Flash (1.0s ON/1.0s OFF)
TIMER indicator lamp (Orange)	Address: tens place (0.5s ON/0.5s OFF)	
FILTER indicator lamp (Red)	Address: ones place (0.5s ON/0.5s OFF)	


- Indoor unit address example

(Example) ADDRESS : 24

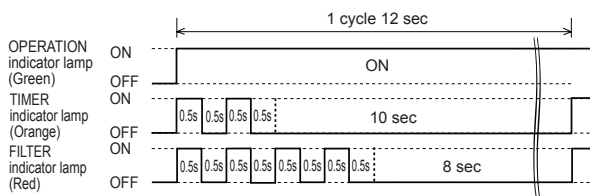

- Refrigerant address example

(Example) ADDRESS : 30

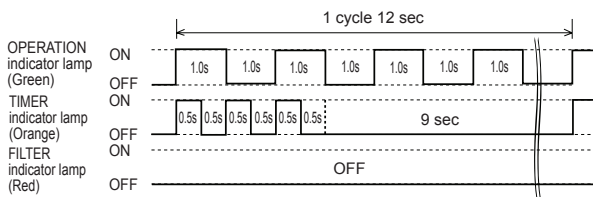

- Setting details

Function number	Item	Setting number
01	Indoor unit address	00~63
02	Refrigeration address	00~99


For use with a remote controller, set all rotary switches to 0, and refer to "7.1. Setting the address" for details. All switches are set to 0 at the factory.

(2) Others

Indication pattern

Indicator Name	Indication pattern
OPERATION indicator lamp (Green)	Function number; tens place (0.5s ON/0.5s OFF)
TIMER indicator lamp (Orange)	Function number; ones place (0.5s ON/0.5s OFF)
FILTER indicator lamp (Red)	Setting number: (0 - 9) (0.5s ON/0.5s OFF)

(Example) Function : 31, Setting number : 2

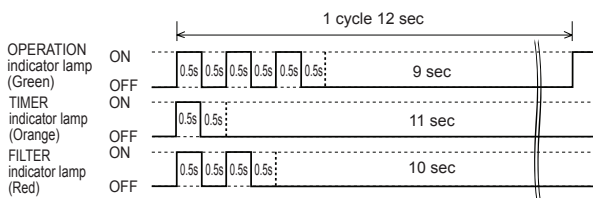


8. MOUNT THE COVER PLATE AND THE INTAKE GRILLE


8.1. Handling for the pipe take-off part

When the pipe is pulled out in the direction shown in the figure below, cover the take-off part with material (putty or the like) that will block it off.

UNDER CEILING TYPE

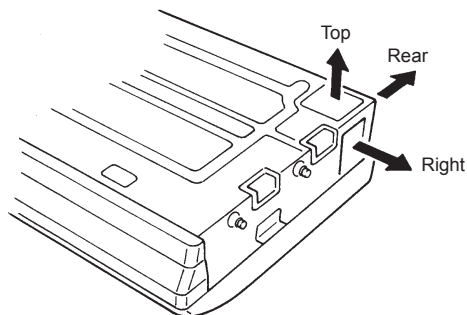


FLOOR CONSOLE TYPE

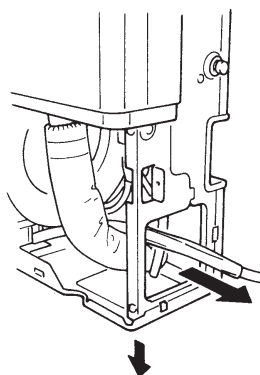


8.2. Mount the cover plate (Right)

- (1) Cut a pipe exit hole in the right plate. This is only when the pipe exits from the right side. (This operation is not required when the protrusion is on the top or rear.)

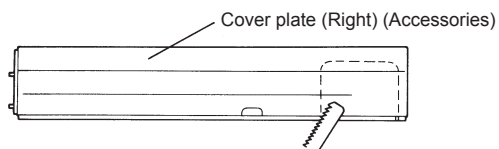


- (2) Join the cover plates (right) and mount with screws.

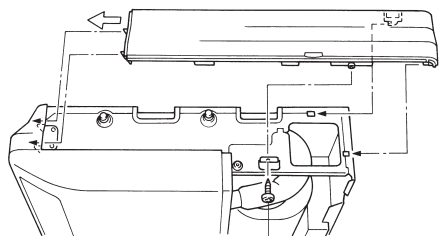

Tapping screw ($\phi 4 \times 10$)
(Accessories)

8.3. Mount the cover plate (Left)


- (1) Join the cover plates (left) and mount with screws.

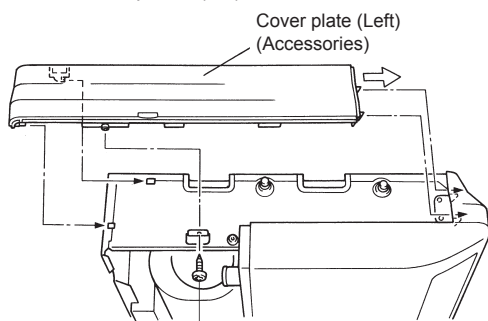


Tapping screw ($\phi 4 \times 10$)
(Accessories)

8.4. Mount the intake grille

- (1) Cut the right side of the intake grille. This is only when the pipe exits from the right side.

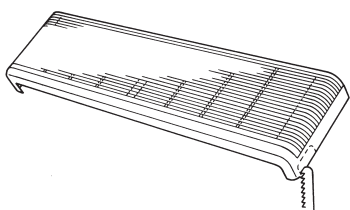

- (2) Insert the hinges on the bottom of the intake grille into the holes in the base assembly. Then mount the arms to the 3 areas on the top of the intake grille.

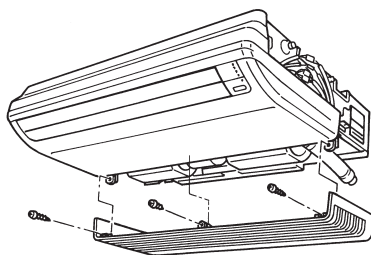

9. TEST OPERATION

9.1. Test operation using PCB (Outdoor unit)

- Refer to the Installation Manual for the outdoor unit if the PCB for the outdoor unit is to be used for the test operation.

9.2. Test operation using remote controller

- Refer to the Installation Manual for the remote controller to perform the test operation using the remote controller.
- When the air conditioner is being test run, the OPERATION and TIMER indicator lamps flash slowly at the same time.

10. CHECK LIST

Pay special attention to the check items below when installing the indoor unit(s). After installation is complete, be sure to check the following check items again.

Check items	If not performed correctly	Check box
Has the indoor unit been installed correctly?	Vibration, noise, indoor unit may drop	<input type="checkbox"/>
Has there been a check for gas leaks (refrigerant pipes)?	No cooling, No heating	<input type="checkbox"/>
Has heat insulation work been completed?	Water leakage	<input type="checkbox"/>
Does water drain easily from the indoor units?	Water leakage	<input type="checkbox"/>
Is the voltage of the power source the same as that indicated on the label on the indoor unit?	No operation, heat or burn damage	<input type="checkbox"/>
Are the wires and pipes all connected completely?	No operation, heat or burn damage	<input type="checkbox"/>
Is the indoor unit grounded?	Short circuit	<input type="checkbox"/>
Is the connection cable the specified thickness?	No operation, heat or burn damage	<input type="checkbox"/>
Are the inlets and outlets free of any obstacles?	No cooling, No heating	<input type="checkbox"/>
Does start and stop air conditioner operation by remote controller or external device?	No operation	<input type="checkbox"/>
After installation is completed, has the proper operation and handling been explained to the user?	_____	<input type="checkbox"/>

11. ERROR CODES

If you use a wired type remote controller, error codes will appear on the remote controller display. If you use a wireless remote controller, the lamp on the photodetector unit will output error codes by way of blinking patterns. See the lamp blinking patterns and error codes in the table below.

Error display			Wired Remote Controller Error CODE	Error contents
OPERATION indicator lamp (green)	TIMER indicator lamp (orange)	FILTER indicator lamp (red)		
● (1)	● (2)	◇	12	Remote controller communication error
● (1)	● (4)	◇	14	Anomalous network communications
● (1)	● (6)	◇	16	Parallel communication error
● (3)	● (1)	◇	31	Power frequency error
● (3)	● (2)	◇	32	Model information error/EEPROM accession error
● (4)	● (1)	◇	41	Room temperature thermistor error
● (4)	● (2)	◇	42	Indoor heat exchanger temperature thermistor error
● (5)	● (1)	◇	51	Indoor fan motor error
● (5)	● (3)	◇	53	Drainage error
● (9)	● (15)	◇	90	Outdoor unit error

Display mode ● : 0.5s ON / 0.5s OFF
 ◇ : 0.1s ON / 0.1s OFF
 () : Number of flashing

Wired Remote Controller Display

