




8. DISASSEMBLY ILLUSTRATION & PARTS LIST


8-1 OUTDOOR UNIT

Model : AJ*126LATF

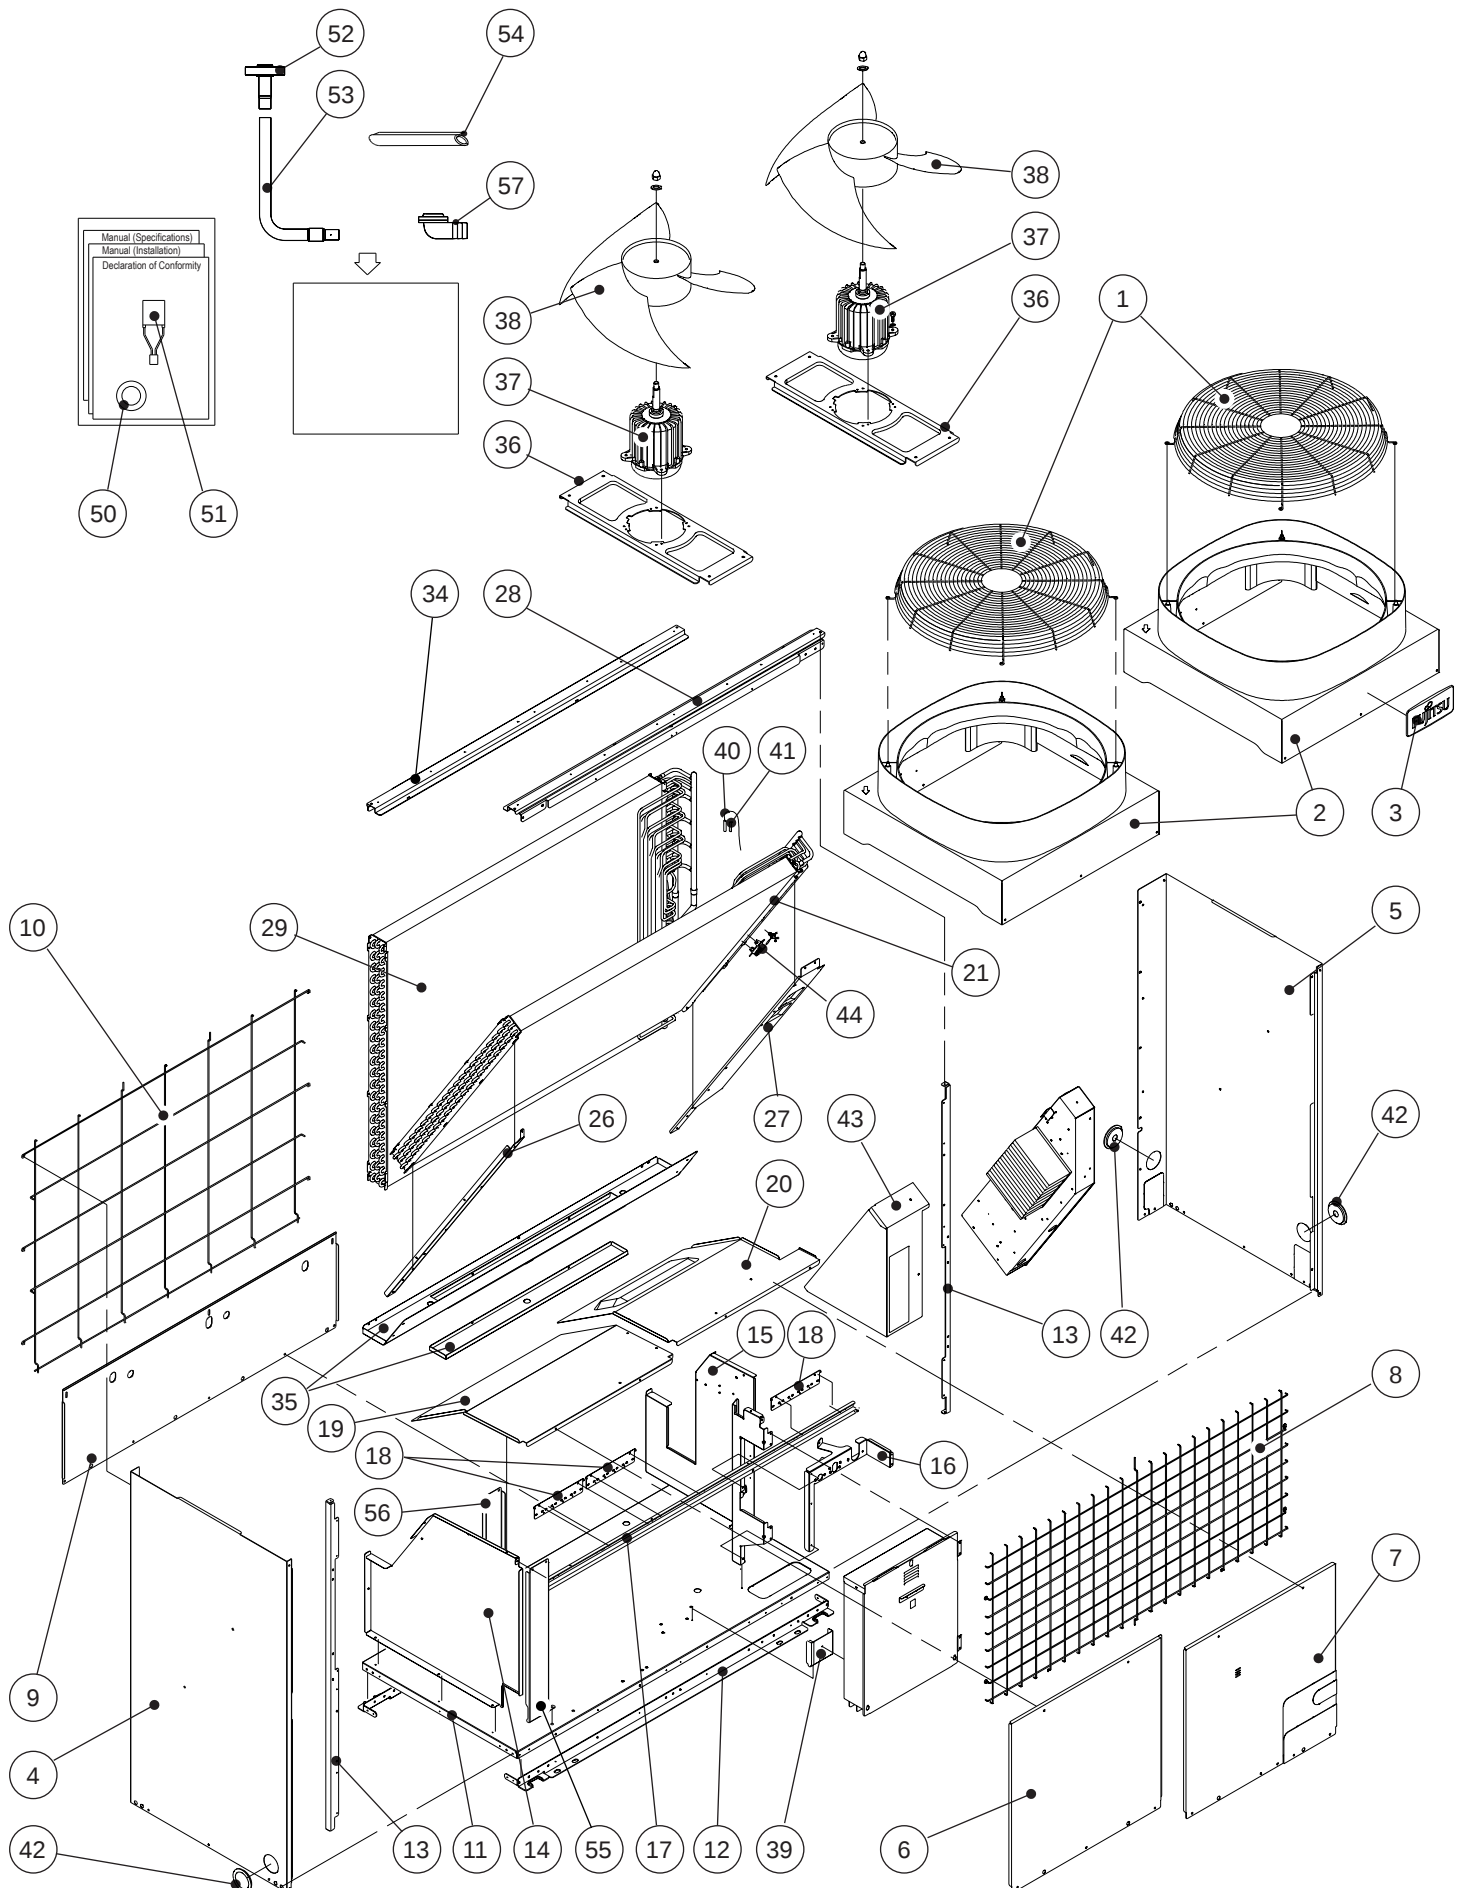

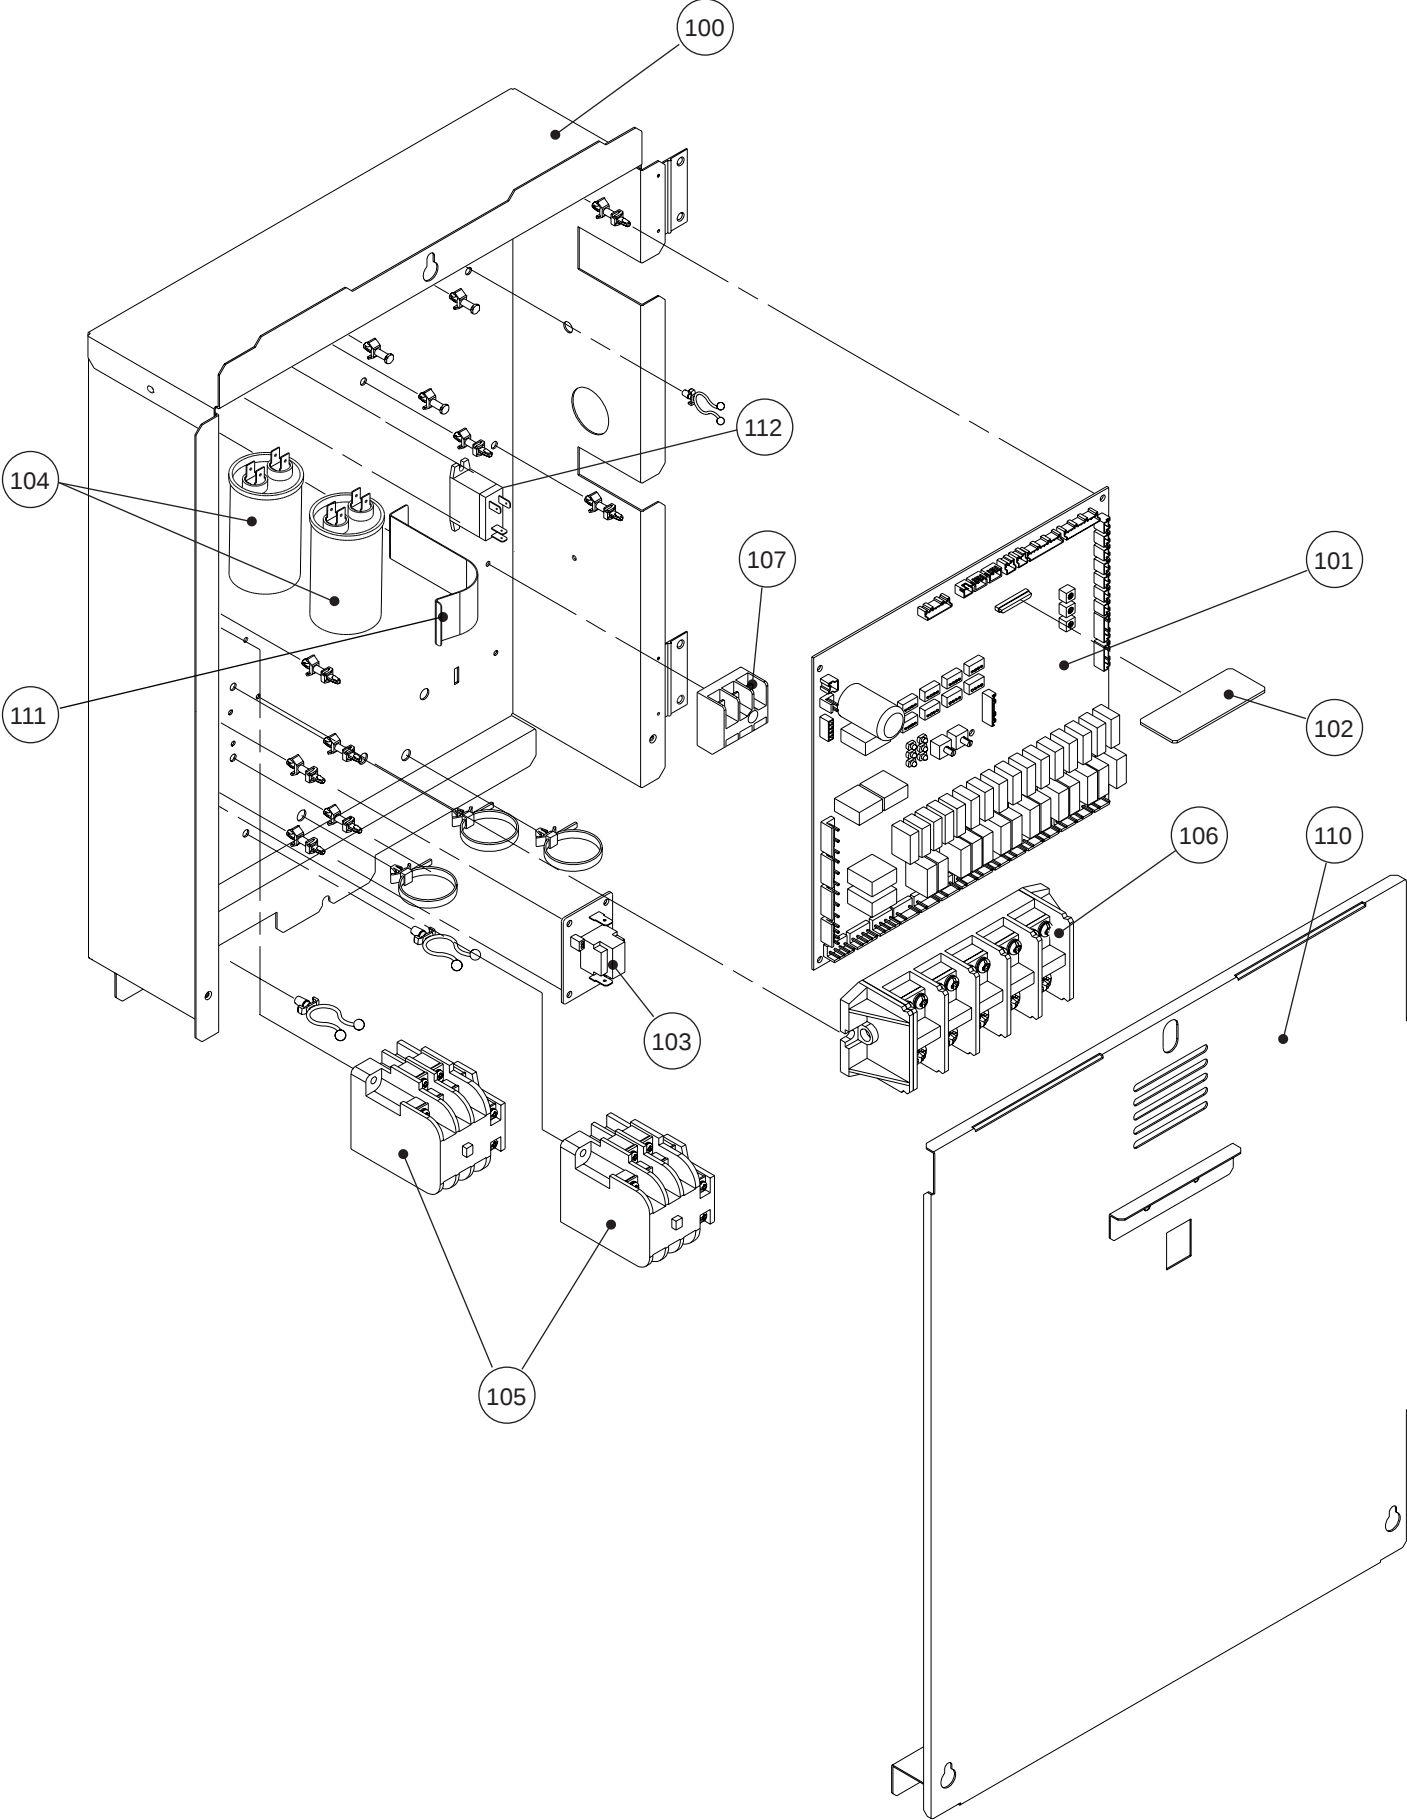

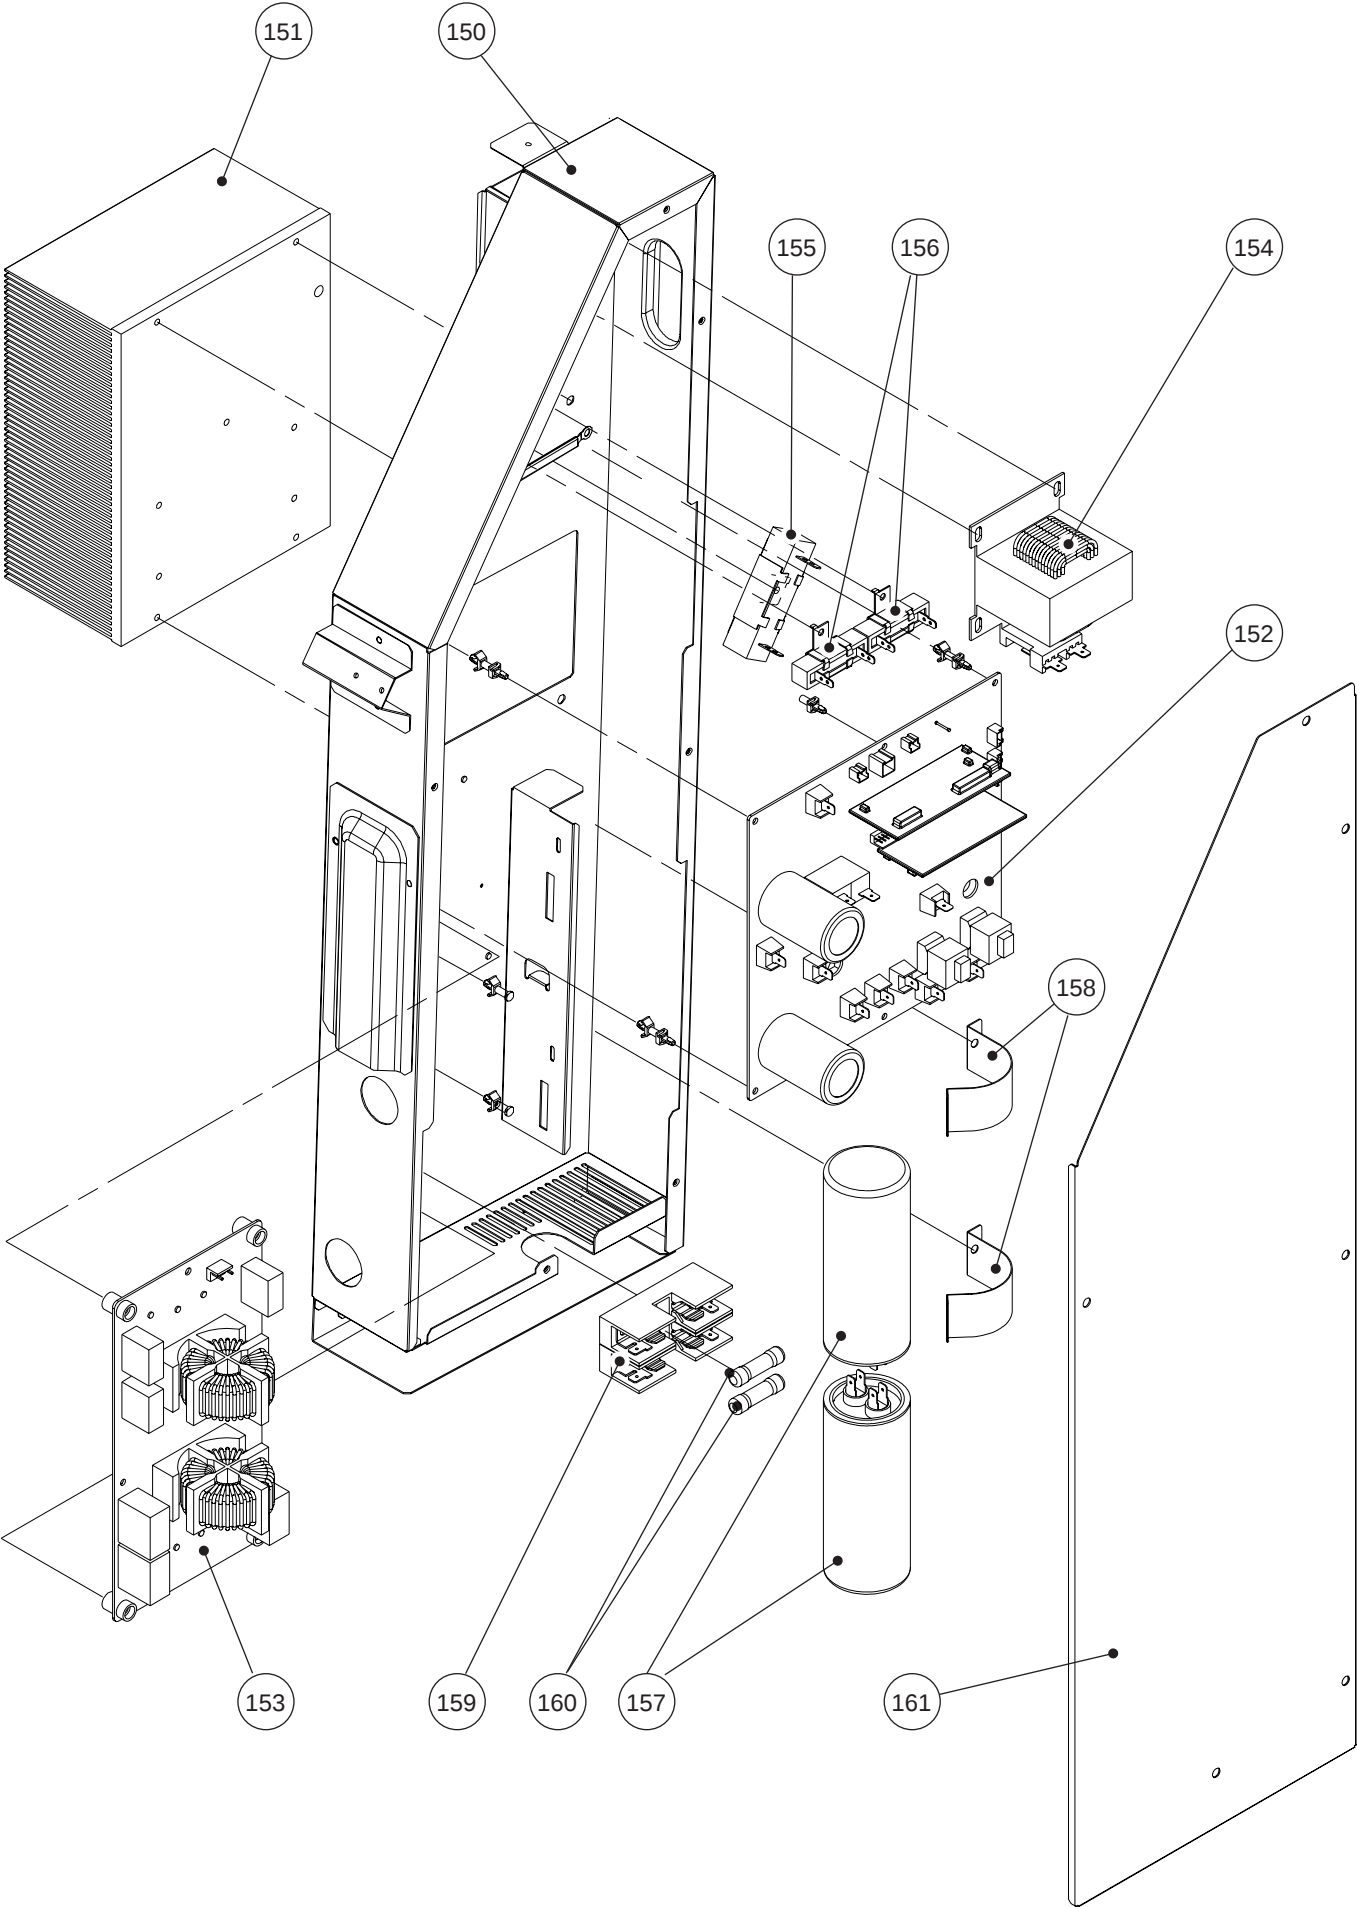


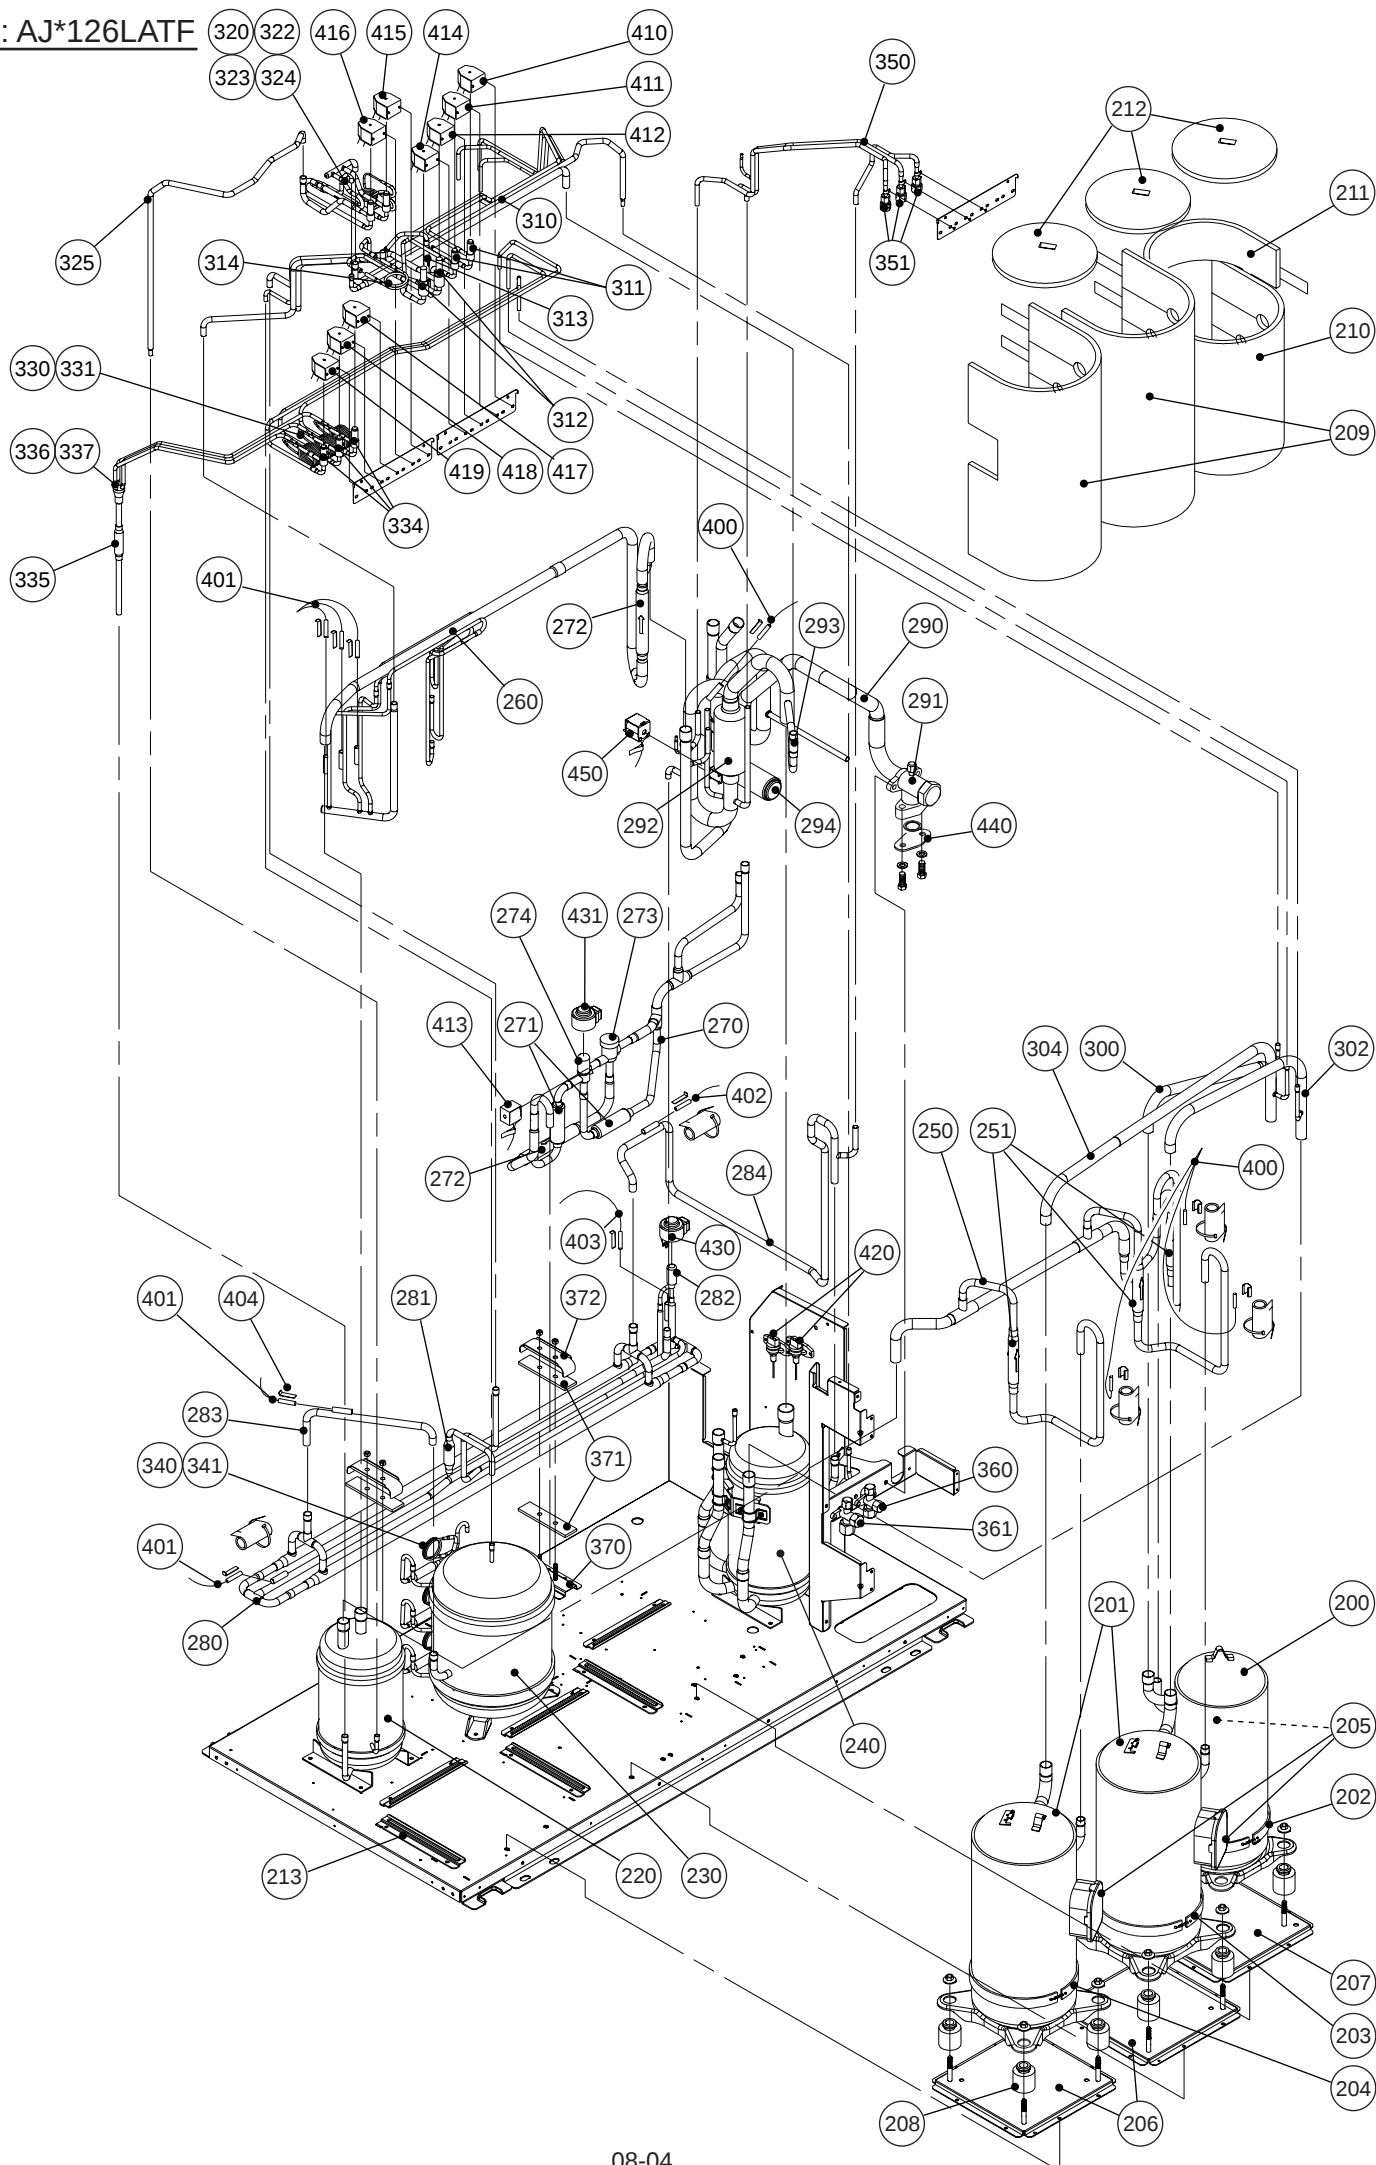



Ref No.	Description	Part No.	Ref No.	Description	Part No.
		AJ*126LATF			AJ*126LATF
1	FAN COVER	9377941015	100	CONTROL BOX	9373932017
2	BELL MOUTH	9361721005	101	CONTROLLER PCB ASSY	9705653023
3	EMBLEM (FUJITSU)	9371388014	102	COMMUNICATION PCB	9704424044
4	SIDE PANEL- L ASSY	9362940023	103	PWB UNIT (CT)	9705702011
5	SIDE PANEL- R ASSY	9362941037	104	CAPACITOR (FAN MOTOR)	9900269180
6	FRONT PANEL- L	9361709027	105	MAGNETIC RELAY	9900116019
7	FRONT PANEL- R	9374339020	106	TERMINAL 5P	9900251017
8	FRONT PROTECTION NET	9377939012	107	TERMINAL 3P	9703345012
9	REAR PANEL ASSY	9362943031	110	CONTROL BOX COVER ASSY	9375204013
10	CONDENSER GUARD	9377940018	111	BAND (CAPACITOR)	9373942023
11	BASE ASSY	9372336021	112	RELAY	9900294014
12	BASE FOOT PAINTED	9361688025	150	CONTROL BOX (INVERTER)	9373935018
13	RFM (SIDE PANEL) ASSY	9362955027	151	HEAT SINK	9374245017
14	SEPARATE WALL- L	9373917014	152	INVERTER PCB ASSY	9705654013
15	SEPARATE WALL- R ASSY	9362948050	153	FILTER PCB ASSY	9705655010
16	BRACKET (VALVE)- A	9373926016	154	REACTOR ASSY	9900252014
17	RFM(SEPARATE WALL)	9361697003	155	RESISTOR,CEMENT	0200441016
18	BRKT PNL (S VLV)	9364230009	156	RESISTOR,CEMENT	0200444017
19	SEPARATE WALL TOP(LEFT) ASSY	9362942041	157	CAPACITOR (INVERTER)	9705387027
20	SEPARATE WALL TOP(RIGHT) ASSY	9362942034	158	BAND (CAPACITOR)	9373942016
21	CONDENSER A SUB ASSY	9362954150	159	FUSE HOLDER	9900260026
26	BRACKET (CONDENSER)-L ASSY	9362958028	160	FUSE	9900259013
27	BRACKET (CONDENSER)-R ASSY	9362959025	161	CONTROL BOX (INVERTER) COVER A	9375205010
28	BRACKET (MOTOR) A ASSY	9362960021			
29	CONDENSER B SUB ASSY	9362956062			
34	BRACKET (MOTOR) B ASSY	9362963022			
35	DRAIN PAN ASSY	9362961028			
36	BRACKET PANEL (MOTOR)	9361703001			
37	FAN MOTOR ASSY-OUTER	9602003013			
38	PROPELLER FAN	9361726000			
39	BRACKET (CONTROL BOX)	9361727007			
40	THERMISTOR (H.E)	9900099039			
41	THERMISTOR SPRING A	313728262708			
42	BUSHING	9361725003			
43	CONTROL BOX (INVERTER) COVER B	9373941019			
44	BRACKET (THERMISTOR)	9373154013			
50	GASKET	9375556013			
51	RESISTOR(WITH CONNECTOR)	9703926013			
52	FLANGE ASSY	9373983026			
54	INSULATION (PIPE) C	9363828009			
55	RFM CHASSIS A	9374790012			
56	RFM CHASSIS B	9374790029			

Ref No.	Description	Part No.	Ref No.	Description	Part No.
		AJ*126LATF			AJ*126LATF
200	COMPRESSOR ASSY (INVERTER)	9374248018	310	BYPASS A ASSY	9374957019
201	COMPRESSOR ASSY	9374250011	311	SOLENOID VALVE SV1,2	9970038013
202	BELT HEATER C 240V 25W	9361140073	312	SOLENOID VALVE SV3,5	9970040016
203	BELT HEATER B 240V 35W	9361140196	313	CHECK VALVE	9312268009
204	BELT HEATER C 240V 35W	9361140202	314	CAPILLARY ASSY (SV5)	9375636012
205	TERMINAL COVER (COMP)	9372760017	320	BYPASS B ASSY	9374959013
206	BRKT PNL (COMP) ASSY	9373923015	322	CAPILLARY TUBE	9374001101
207	BRKT PNL (COMP) ASSY	9373923022	323	CHECK VALVE	9312268009
208	RUBBER SEAT (COMP)	9372761021	324	SOLENOID VALVE SV6,7	9970046018
209	COMPRESSOR COVER-A	9374243020	325	JOINT PIPE (BYPASS B)	9375657017
210	COMPRESSOR COVER-B (INVERTER)	9374243037	330	OIL RETURN VALVE ASSY	9375561017
211	COMPRESSOR COVER-C (INVERTER)	9374243044	331	CAPILLARY TUBE	9374001095
212	COMPRESSOR COVER-D	9374243013	334	SOLENOID VALVE SV8-1,2,3	9970046018
213	BRACKET (COMPRESSOR)	9361694002	335	STRAINER	9373588122
220	OIL SEPARATOR ASSY	9373991021	336	DISTRIBUTOR	9304394006
230	RECEIVER TANK ASSY	9373993025	337	NOZZLE	9304395003
240	ACCUMULATOR ASSY	9373995036	340	CAPILLARY ASSY	9373979029
250	DISCHARGE PIPE ASSY	9375557010	341	STRAINER	9373588115
251	CHECK VALVE	9372198056	350	PRESSURE PORT ASSY	9373969020
260	JOINT PIPE E ASSY	9375018016	351	CHECK JOINT ASSY	9372802038
270	EXPANSION VALVE ASSY	9374811014	360	3WAY VALVE ASSY (OIL)	9372205129
271	STRAINER	9371191010	361	3WAY VALVE ASSY (LIQUID)	9372205136
272	CHECK VALVE	9372198063	370	BRACKET (PIPE BAND) ASSY	9374362011
273	SOLENOID VALVE SV4	9970041013	371	CUSHION	9374366019
274	EXPANSION VALVE	9900170035	372	PIPE BAND	9374365012
280	SUB COOL HEX ASSY	9374807017	400	THERMISTOR (TH1,2,3,11,12) ASSY	9900247010
281	STRAINER ASSY	9372524015	401	THERMISTOR (TH5,6,7,8,9) ASSY	9900249014
282	EXPANSION VALVE	9900056025	402	THERMISTOR (TH10)	9900099046
283	JOINT PIPE (SUB COOL HEX) A ASSY	9374381029	403	THERMISTOR (TH13)	9900099053
284	JOINT PIPE (SUB COOL HEX) B ASSY	9374809011	404	THERMISTOR SPRING A	313728262708
290	4WAY VALVE ASSY	9374806010	410	SOLENOID SV1	9900189037
291	3WAY VALVE ASSY (GAS)	9373989035	411	SOLENOID SV2	9900189044
292	STRAINER	9375130022	412	SOLENOID SV3	9970044038
293	STRAINER F	9365441008	413	SOLENOID SV4	9970044014
294	4WAY VALVE	9970042010	414	SOLENOID SV5	9970044021
300	SUCTION PIPE A ASSY	9375559014	415	SOLENOID SV6	9900189105
302	SUCTION PIPE B ASSY	9375559021	416	SOLENOID SV7	9900189068
304	SUCTION PIPE C ASSY	9375559038	417	SOLENOID SV8-1	9900189075
			418	SOLENOID SV8-2	9900189082
			419	SOLENOID SV8-3	9900189099
			420	PRESSURE SENSOR	9900253011
			430	COIL (EXPANSION VALVE)	9900197025
			431	COIL (EXPANSION VALVE)	9900190040
			440	VALVE PLATE	9375555016
			450	SOLENOID 4WV	9970045011
				BINDER CB	9374569021
				BINDER LB	9305335008
				PIPE COVER	9363470000
				EMI FILTER	0400056140

Model : AJ*126UATF

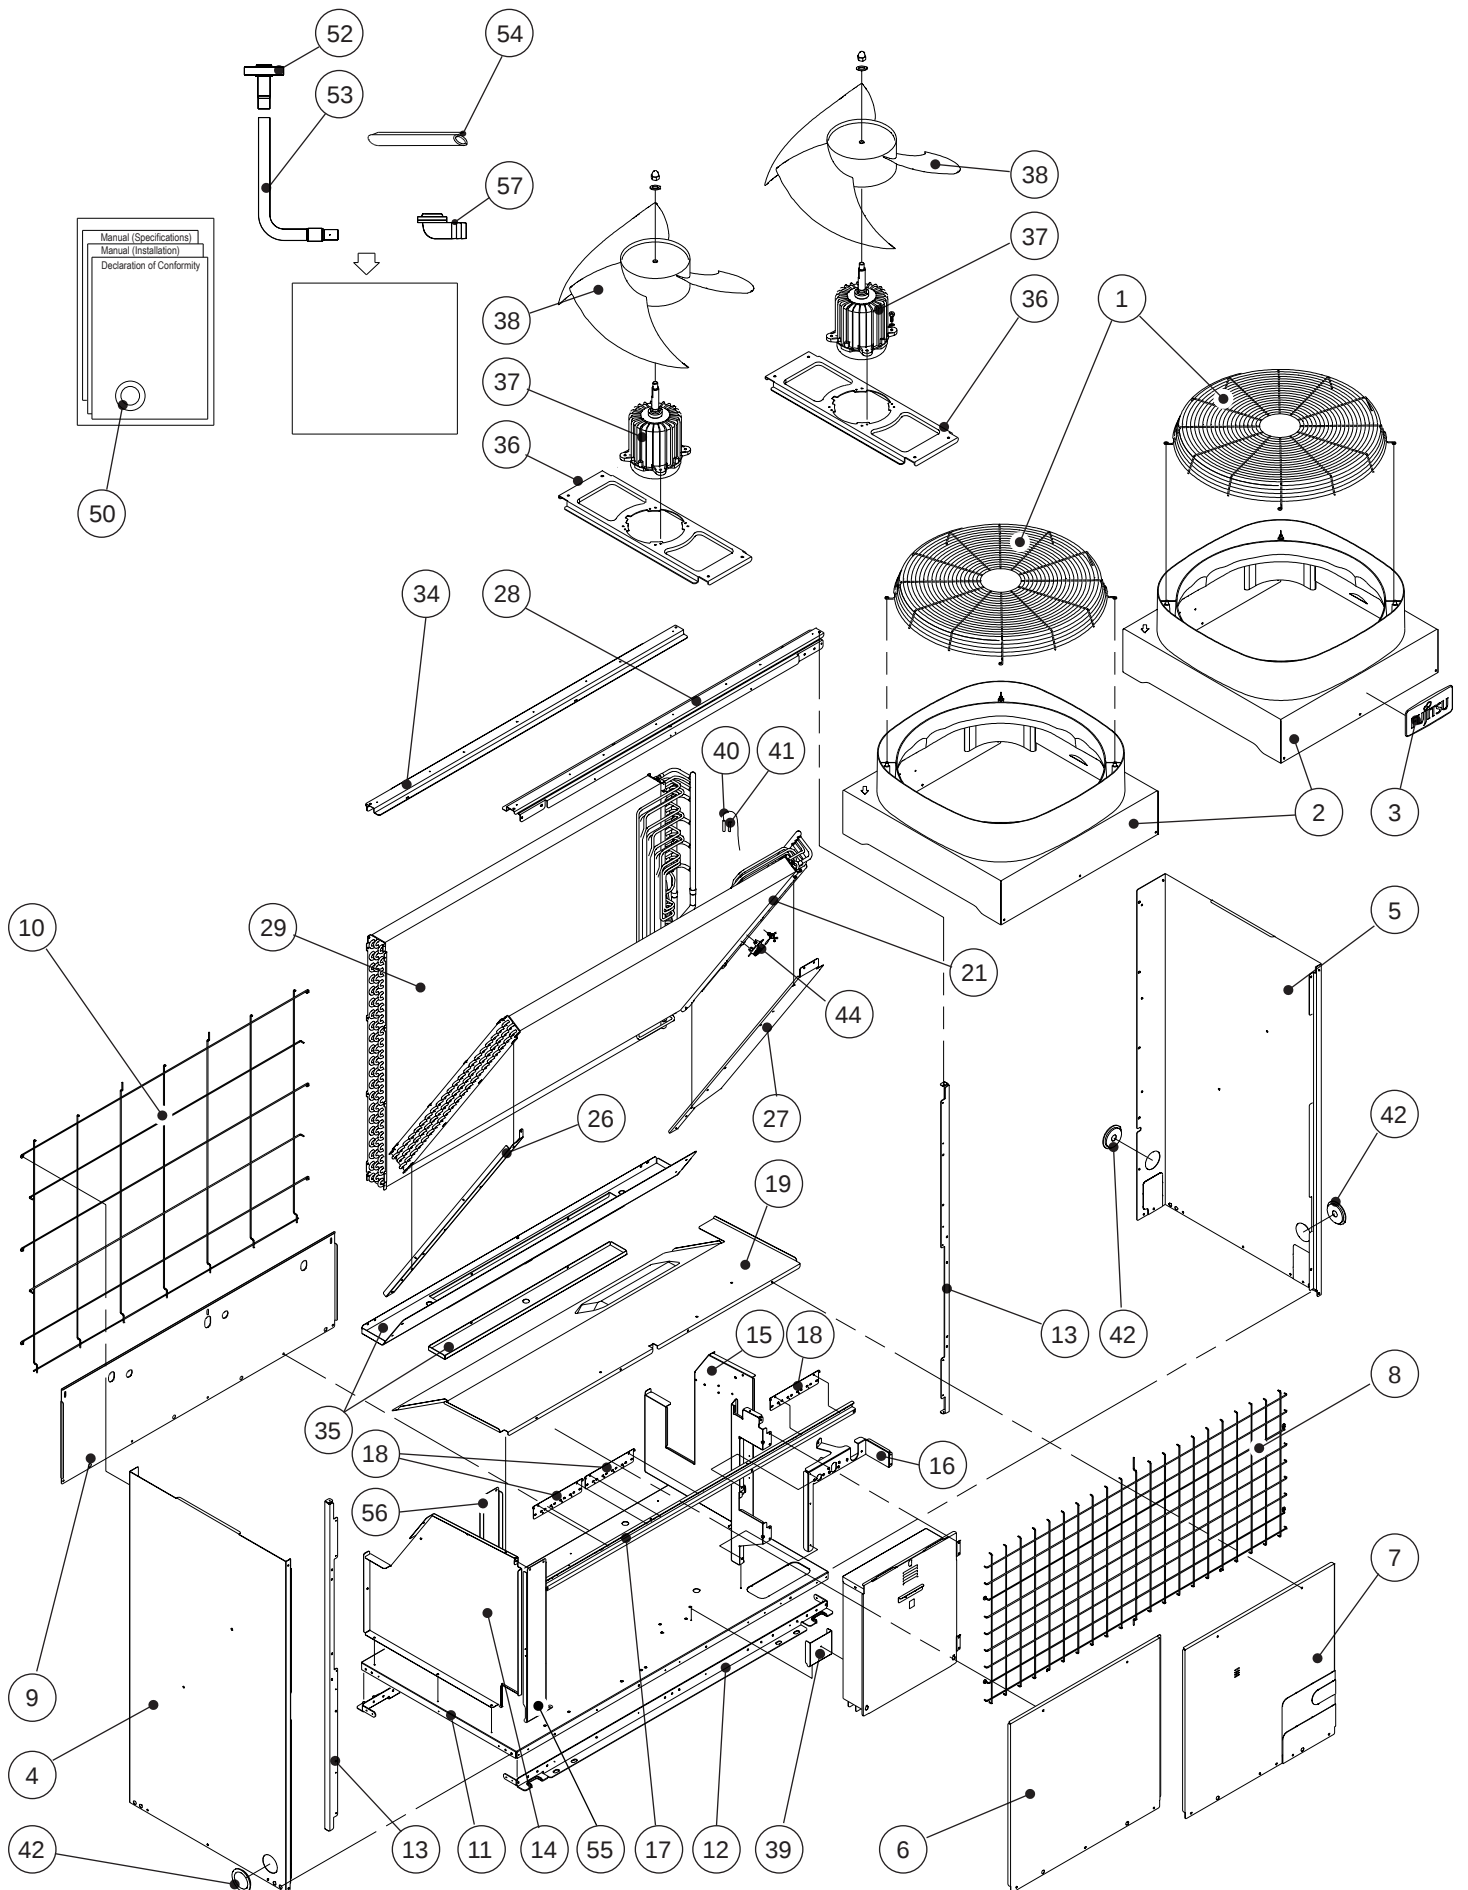

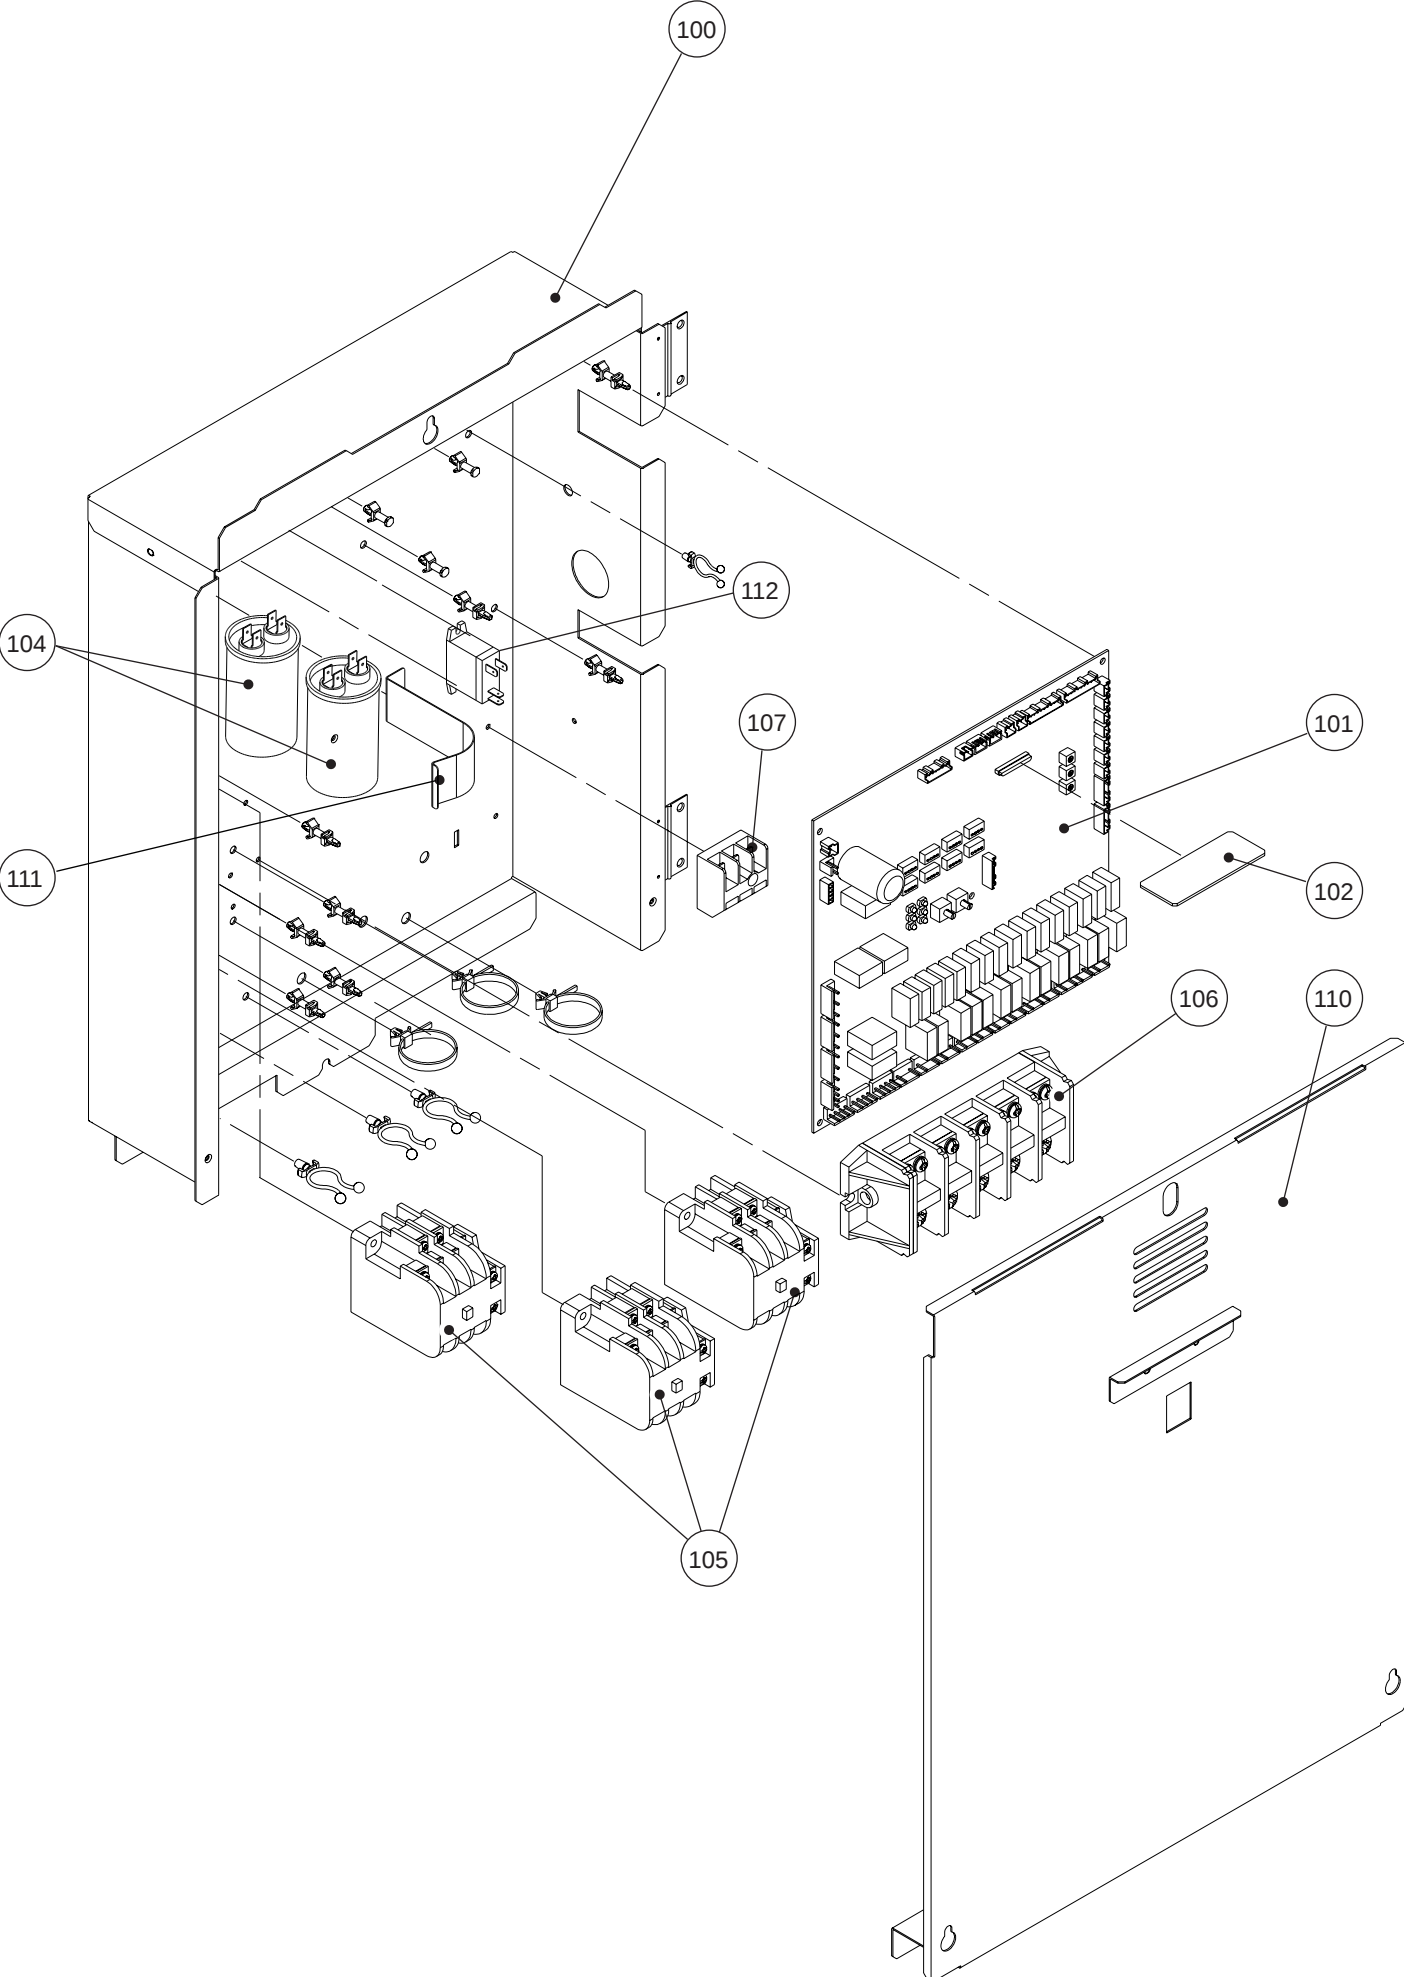


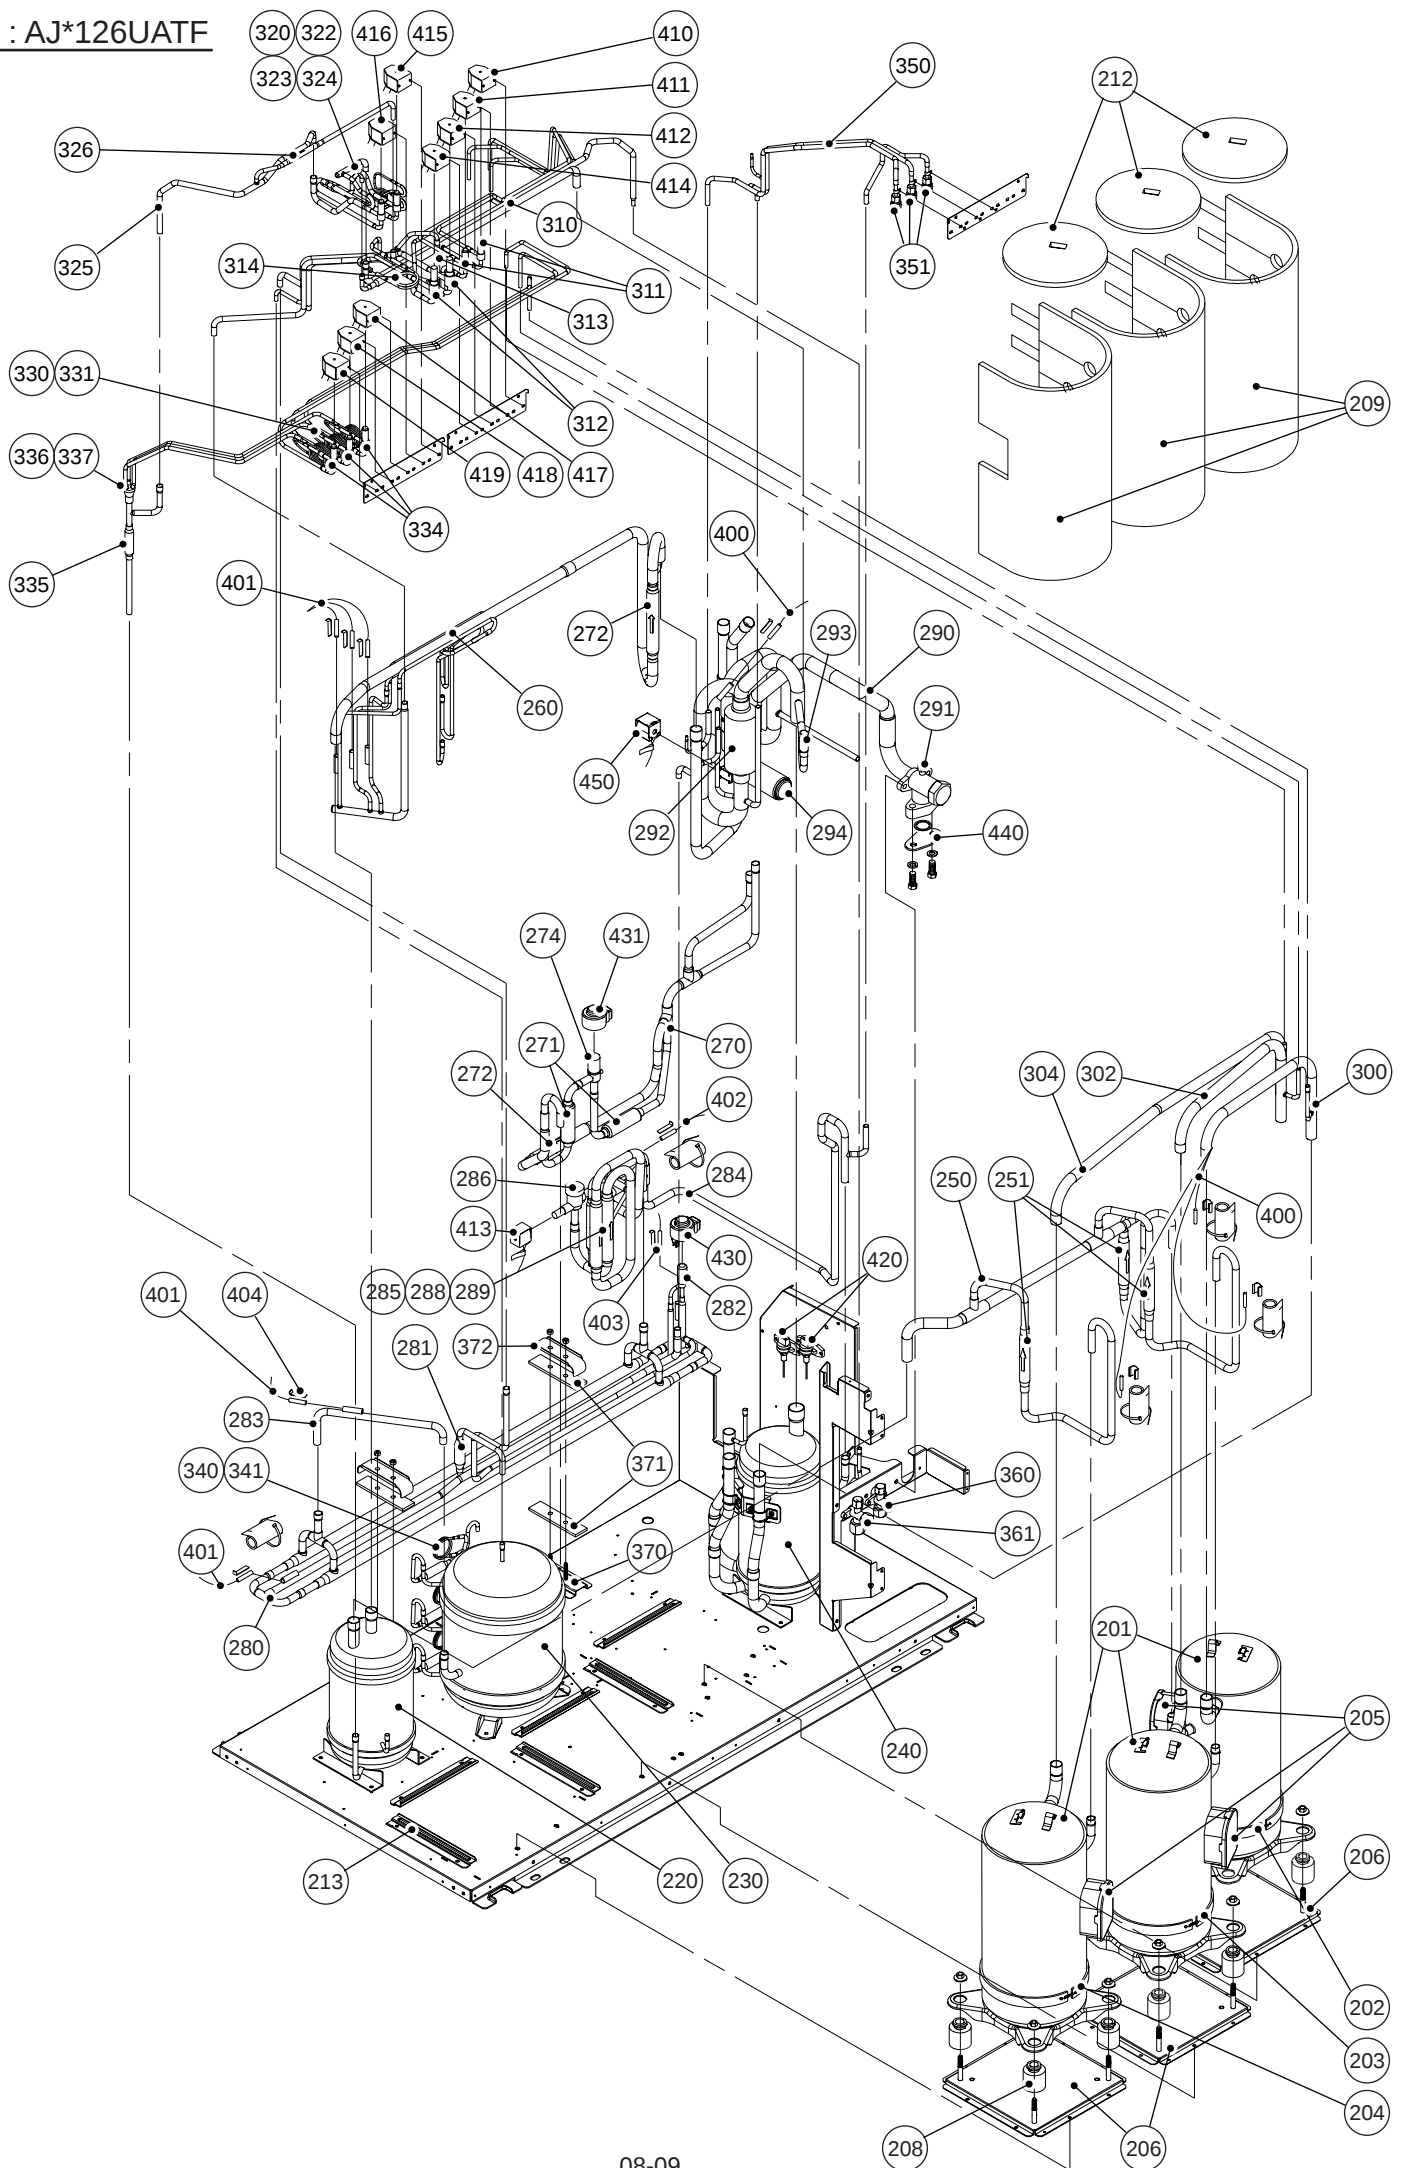


Ref No.	Description	Part No.	Ref No.	Description	Part No.
		AJ*126UATF			AJ*126UATF
1	FAN COVER	9377941015	100	CONTROL BOX	9373932017
2	BELL MOUTH	9361721005	101	CONTROLLER PCB ASSY	9705653023
3	EMBLEM (FUJITSU)	9371388014	102	COMMUNICATION PCB	9704424044
4	SIDE PANEL- L ASSY	9362940023	104	CAPACITOR (FAN MOTOR)	9900269180
5	SIDE PANEL- R ASSY	9362941037	105	MAGNETIC RELAY	9900116019
6	FRONT PANEL- L	9361709027	106	TERMINAL 5P	9900251017
7	FRONT PANEL- R	9374339020	107	TERMINAL 3P	9703345012
8	FRONT PROTECTION NET	9377939012	110	CONTROL BOX COVER ASSY	9375204013
9	REAR PANEL ASSY	9362943031	111	BAND (CAPACITOR)	9373942023
10	CONDENSER GUARD	9377940018	112	RELAY	9900294014
11	BASE ASSY	9372336021			
12	BASE FOOT PAINTED	9361688025			
13	RFM (SIDE PANEL) ASSY	9362955027			
14	SEPARATE WALL- L	9373917014			
15	SEPARATE WALL- R ASSY	9362948050			
16	BRACKET (VALVE)- A	9373926016			
17	RFM(SEPARATE WALL)	9361697003			
18	BRKT PNL (S VLV)	9364230009			
19	SEPARATE WALL TOP ASSY	9362942058			
21	CONDENSER A SUB ASSY	9362954174			
26	BRACKET (CONDENSER)-L ASSY	9362958028			
27	BRACKET (CONDENSER)-R ASSY	9362959032			
28	BRACKET(MOTOR) A ASSY	9362960021			
29	CONDENSER B SUB ASSY	9362956062			
34	BRACKET(MOTOR) B ASSY	9362963022			
35	DRAIN PAN ASSY	9362961028			
36	BRACKET PANEL (MOTOR)	9361703001			
37	FAN MOTOR ASSY-OUTER	9602003013			
38	PROPELLER FAN	9361726000			
39	BRACKET (CONTROL BOX)	9361727007			
40	THERMISTOR (H.E)	9900099039			
41	THERMISTOR SPRING A	313728262708			
42	BUSHING	9361725003			
44	BRACKET (THERMISTOR)	9373154013			
50	GASKET	9375556013			
52	FLANGE ASSY	9373983026			
54	INSULATION (PIPE) C	9363828009			
55	RFM CHASSIS A	9374790012			
56	RFM CHASSIS B	9374790029			

Ref No.	Description	Part No.	Ref No.	Description	Part No.
		AJ*126UATF			AJ*126UATF
201	COMPRESSOR ASSY	9374250011	310	BYPASS A ASSY	9374957019
202	BELT HEATER A 240V 35W	9361140189	311	SOLENOID VALVE SV1,2	9970038013
203	BELT HEATER B 240V 35W	9361140196	312	SOLENOID VALVE SV3,5	9970040016
204	BELT HEATER C 240V 35W	9361140202	313	CHECK VALVE	9312268009
205	TERMINAL COVER (COMP)	9372760017	314	CAPILLARY ASSY (SV5)	9375636012
206	BRKT PNL (COMP) ASSY	9373923015	320	BYPASS B ASSY	9374959013
208	RUBBER SEAT (COMP)	9372761021	322	CAPILLARY TUBE	9374001101
209	COMPRESSOR COVER-A	9374243020	323	CHECK VALVE	9312268009
212	COMPRESSOR COVER-D	9374243013	324	SOLENOID VALVE SV6,7	9970046018
213	BRACKET (COMPRESSOR)	9361694002	325	JOINT PIPE (BYPASS) ASSY	9375657024
220	OIL SEPARATOR ASSY	9373991021	326	CHECK VALVE	9312268009
230	RECEIVER TANK ASSY	9373993025	330	OIL RETURN VALVE ASSY	9375561031
240	ACCUMULATOR ASSY	9373995036	331	CAPILLARY TUBE	9374001095
250	DISCHARGE PIPE ASSY	9375557034	334	SOLENOID VALVE SV8-1,2,3	9970046018
251	CHECK VALVE	9372198056	335	STRAINER	9373588122
260	JOINT PIPE E ASSY	9375018016	336	DISTRIBUTOR	9304394006
270	EXPANSION VALVE ASSY	9374811038	337	NOZZLE	9304395003
271	STRAINER	9371191010	340	CAPILLARY ASSY	9373979029
272	CHECK VALVE	9372198063	341	STRAINER	9373588115
274	EXPANSION VALVE	9900170035	350	PRESSURE PORT ASSY	9373969020
280	SUB COOL HEX ASSY	9374807017	351	CHECK JOINT ASSY	9372802038
281	STRAINER ASSY	9372524015	360	3WAY VALVE ASSY (OIL)	9372205129
282	EXPANSION VALVE	9900056025	361	3WAY VALVE ASSY (LIQUID)	9372205136
283	JOINT PIPE (SUB COOL HEX) A ASSY	9374381029	370	BRACKET (PIPE BAND) ASSY	9374362011
284	JOINT PIPE (SUB COOL HEX) B ASSY	9374809028	371	CUSHION	9374366019
285	CHECK VALVE	9372198063	372	PIPE BAND	9374365012
286	SOLENOID VALVE SV4	9970041013	400	THERMISTOR (TH1,2,3,11,12) ASSY	9900247010
288	STRAINER	9372951033	401	THERMISTOR (TH5,6,7,8,9) ASSY	9900249014
289	RELIEF VALVE	9375660017	402	THERMISTOR (TH10)	9900099046
290	4WAY VALVE ASSY	9374806010	403	THERMISTOR (TH13)	9900099053
291	3WAY VALVE ASSY (GAS)	9373989035	404	THERMISTOR SPRING A	313728262708
292	STRAINER	9375130022	410	SOLENOID SV1	9900189037
293	STRAINER F	9365441008	411	SOLENOID SV2	9900189044
294	4WAY VALVE	9970042010	412	SOLENOID SV3	9970044038
300	SUCTION PIPE A ASSY	9375559045	413	SOLENOID SV4	9970044014
302	SUCTION PIPE B ASSY	9375559052	414	SOLENOID SV5	9970044021
304	SUCTION PIPE C ASSY	9375559069	415	SOLENOID SV6	9900189105
			416	SOLENOID SV7	9900189068
			417	SOLENOID SV8-1	9900189075
			418	SOLENOID SV8-2	9900189082
			419	SOLENOID SV8-3	9900189099
			420	PRESSURE SENSOR	9900253011
			430	COIL (EXPANSION VALVE)	9900197025
			431	COIL (EXPANSION VALVE)	9900190040
			440	VALVE PLATE	9375555016
			450	SOLENOID 4WV	9970045011
				BINDER CB	9374569021
				BINDER LB	9305335008
				PIPE COVER	9363470000


Model : AJ*A90LATF
AJ*A72LATF

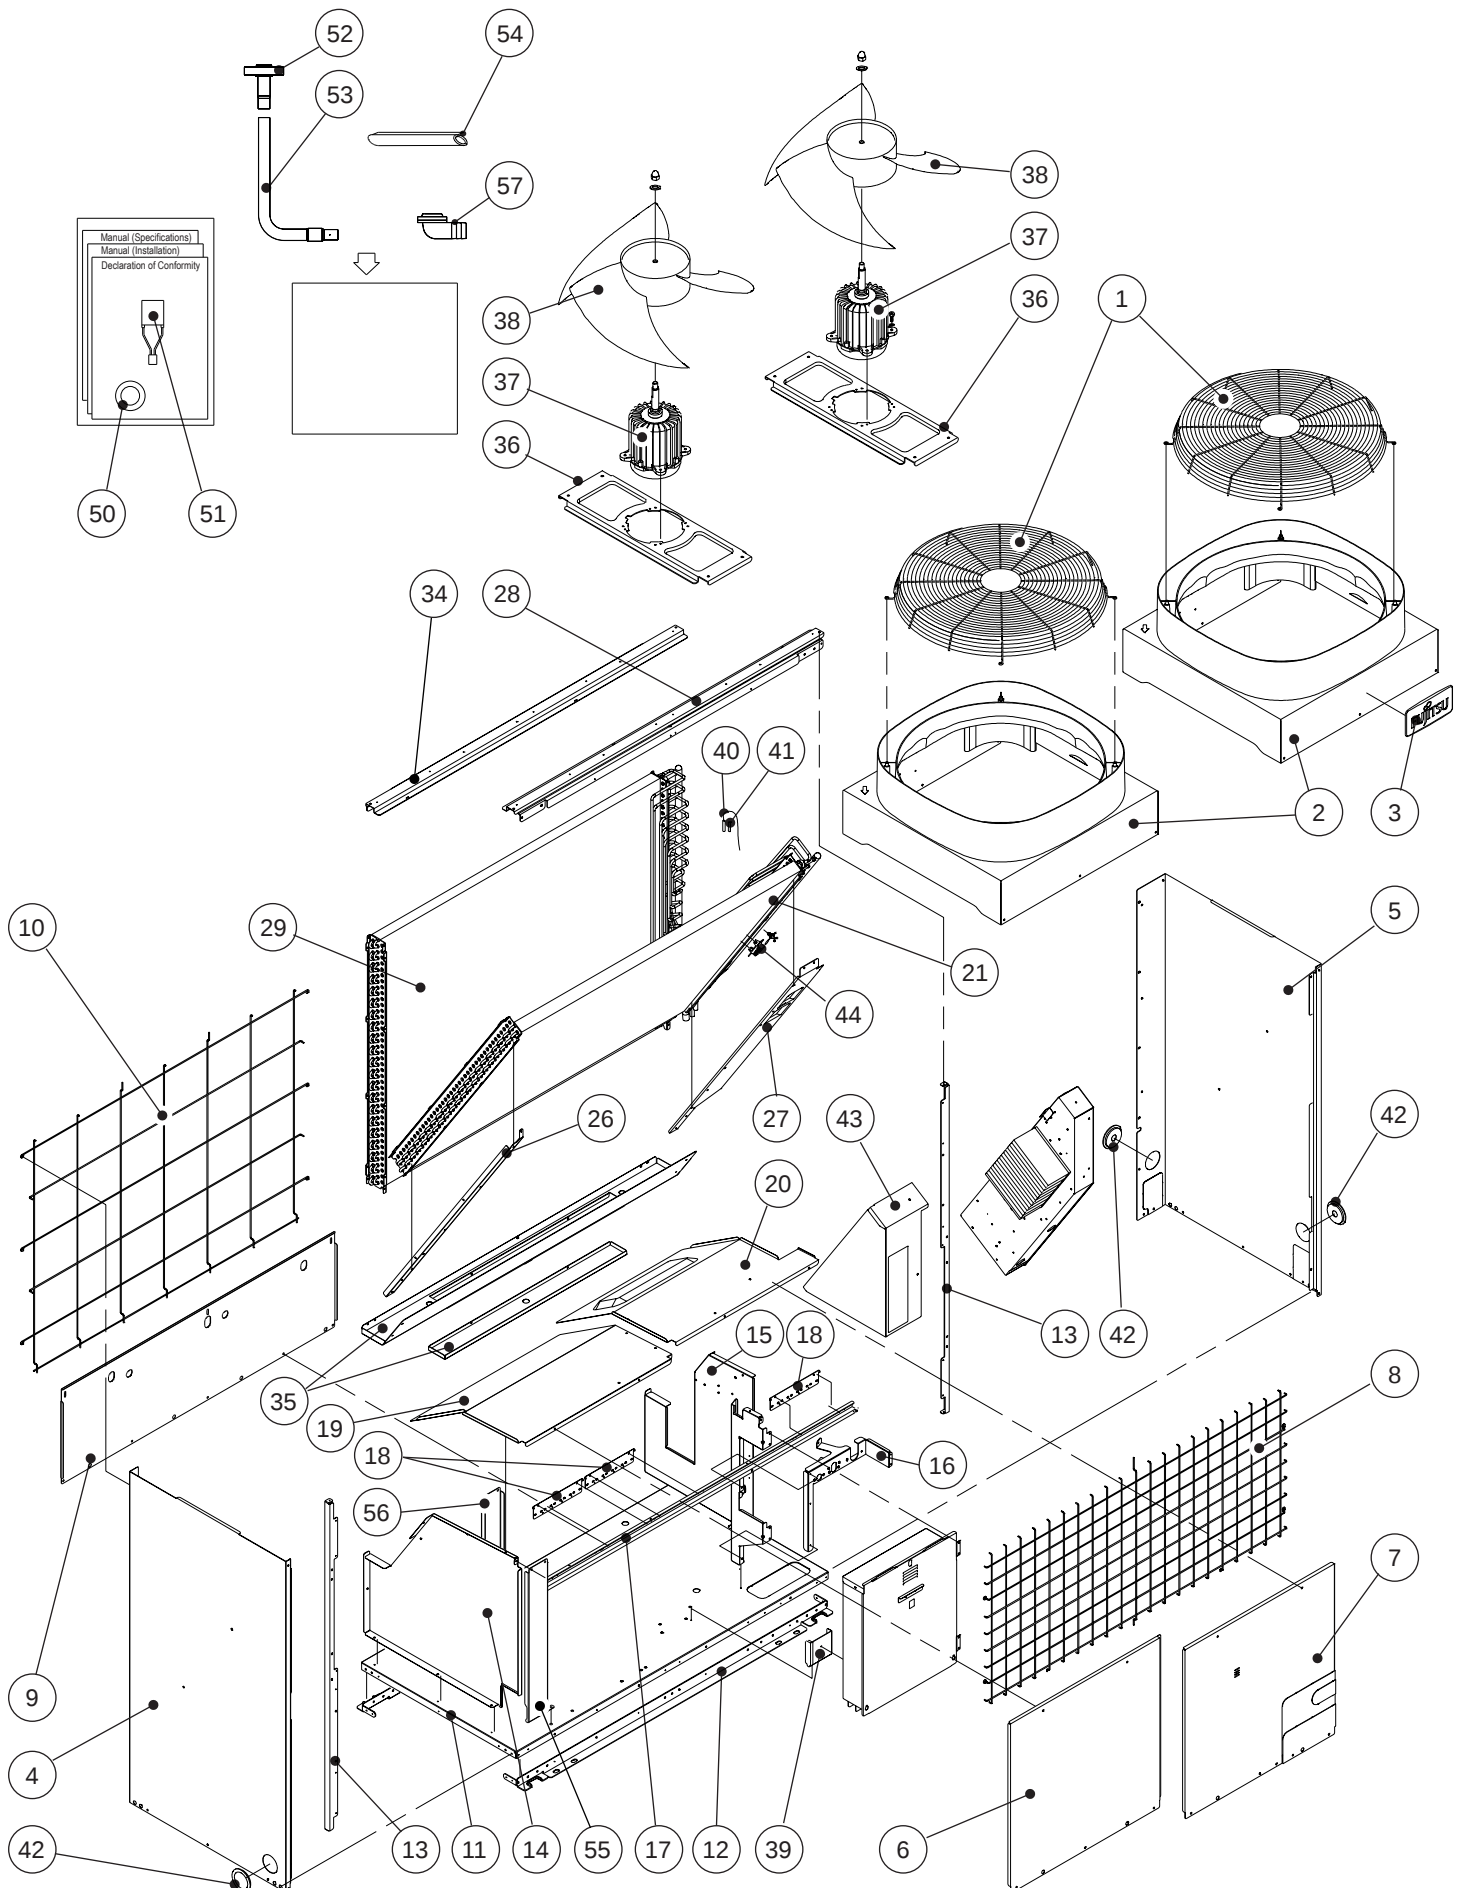

Model : AJ*A90LATF
AJ*A72LATF

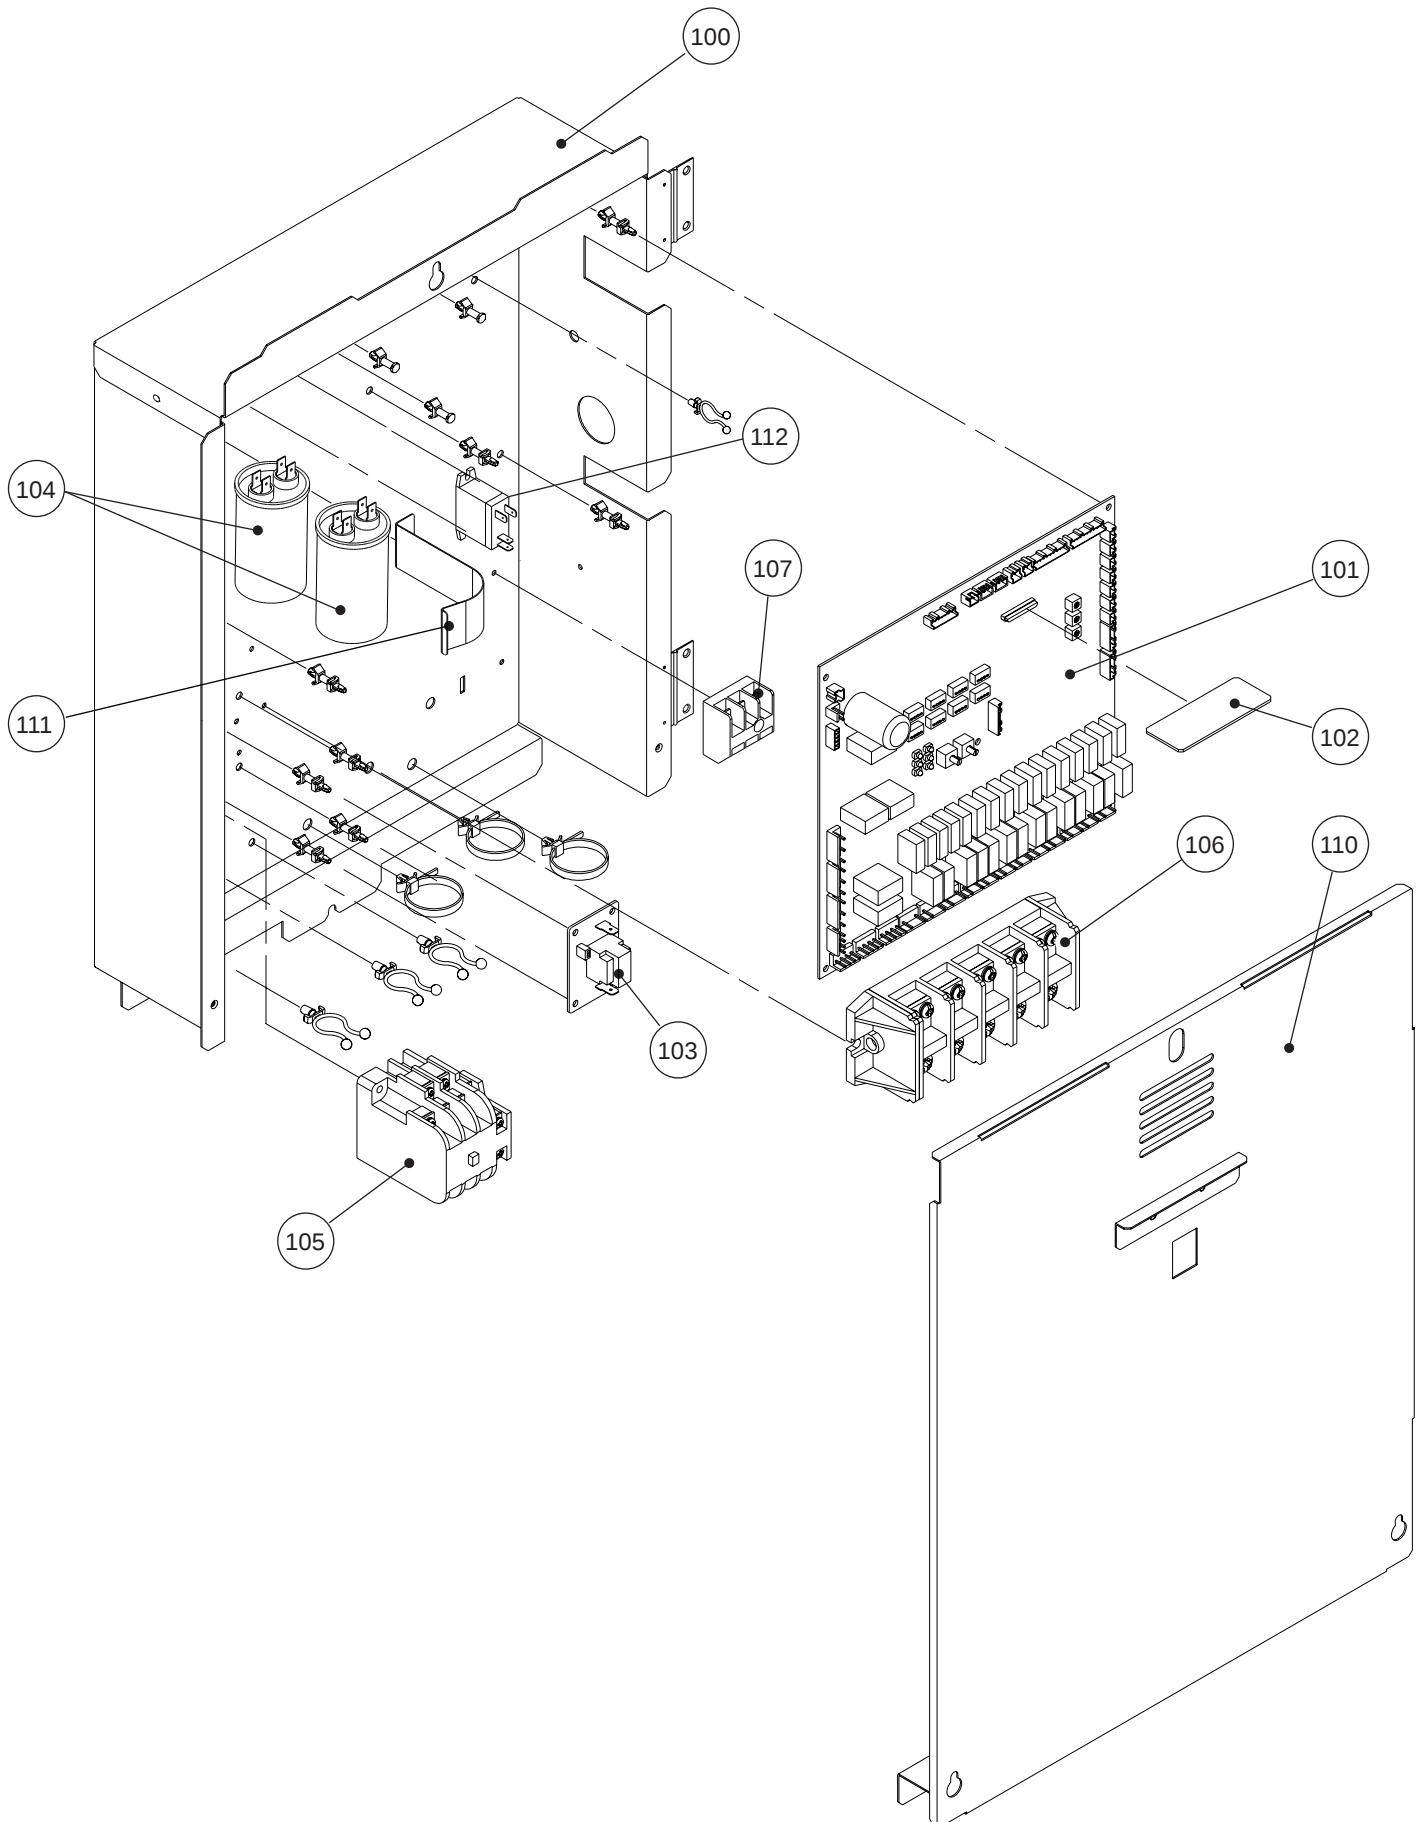


Model : AJ*A90LATF
AJ*A72LATF

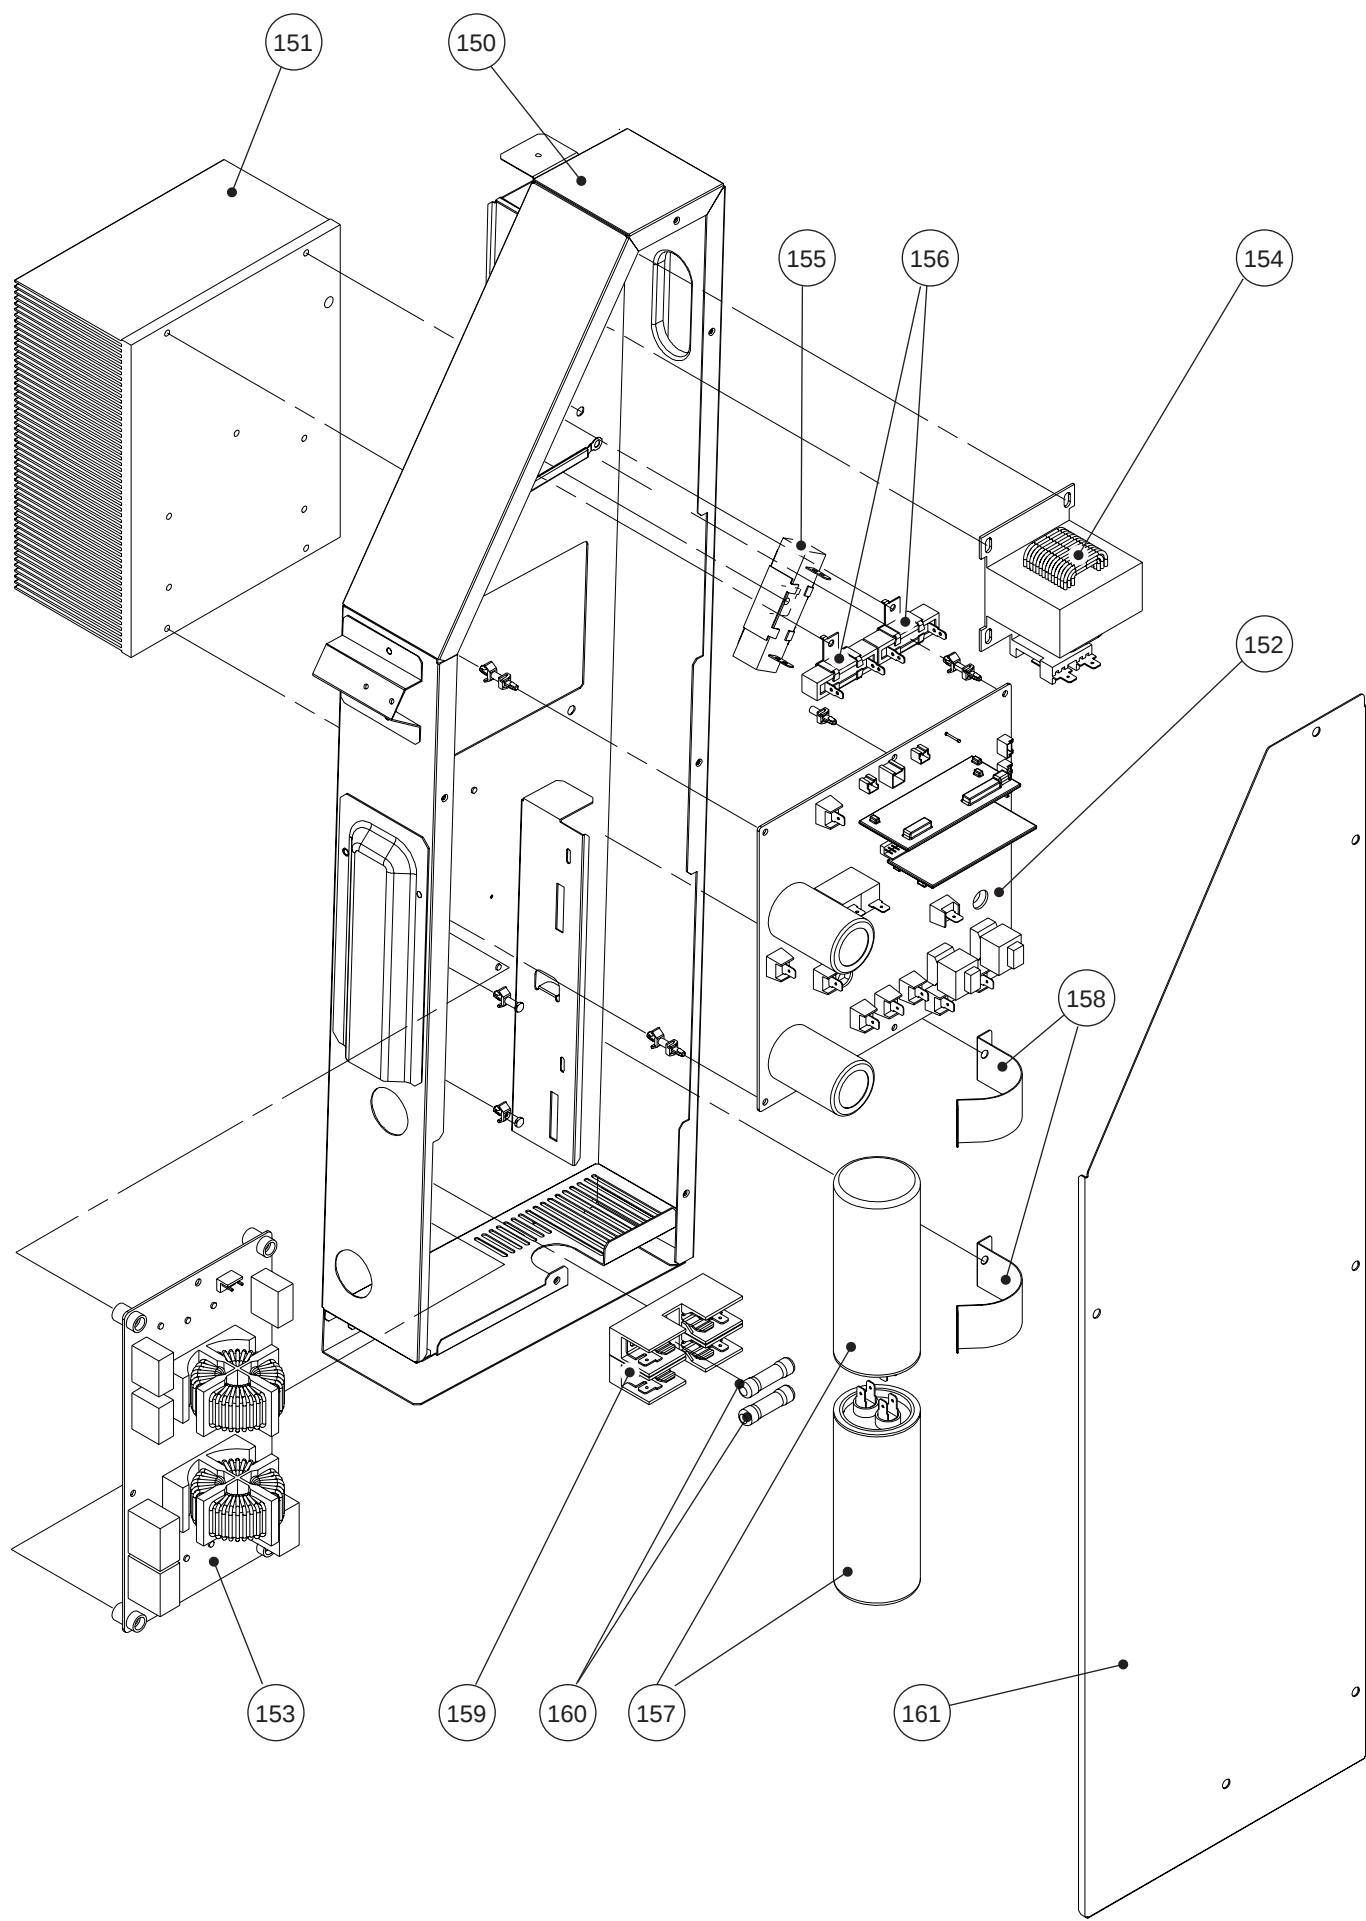

Model : AJ*A90LATF

AJ*A72LATF

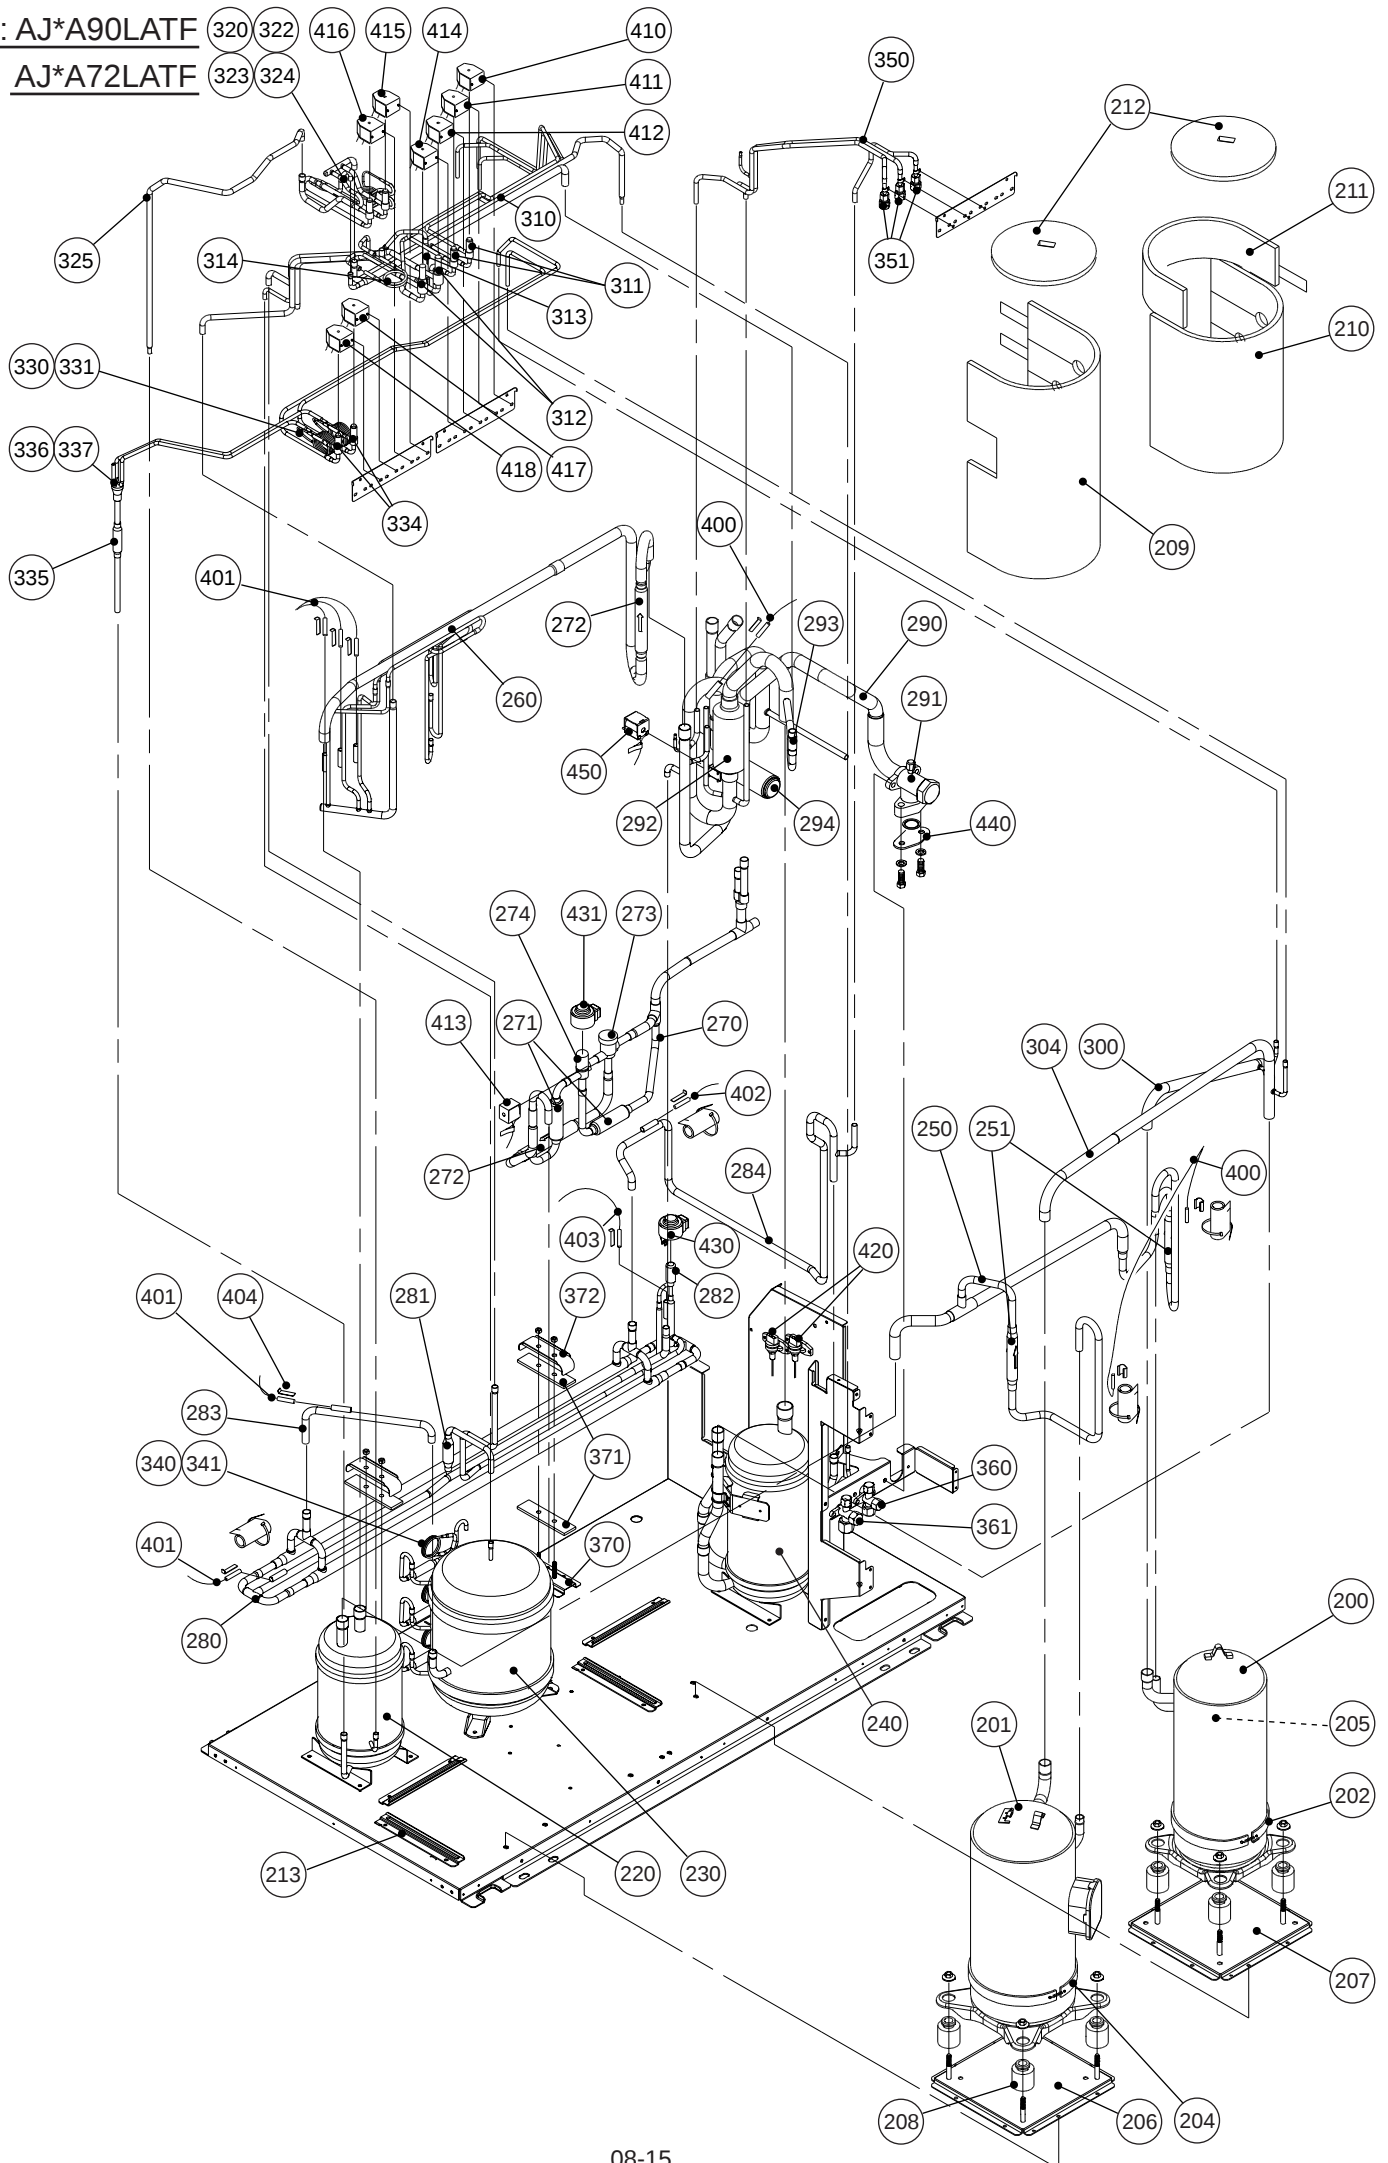

Model : AJ*A90LATF

AJ*A72LATF


Ref No.	Description	Part No.	Ref No.	Description	Part No.
		AJ*A90LATF AJ*A72LATF			AJ*A90LATF AJ*A72LATF
1	FAN COVER	9377941015	100	CONTROL BOX	9373932017
2	BELL MOUTH	9361721005	101	CONTROLLER PCB ASSY	9705653023
3	EMBLEM (FUJITSU)	9371388014	102	COMMUNICATION PCB	9704424044
4	SIDE PANEL- L ASSY	9362940023	103	PWB UNIT (CT)	9705702011
5	SIDE PANEL- R ASSY	9362941037	104	CAPACITOR (FAN MOTOR)	9900269180
6	FRONT PANEL- L	9361709027	105	MAGNETIC RELAY	9900116019
7	FRONT PANEL- R	9374339020	106	TERMINAL 5P	9900251017
8	FRONT PROTECTION NET	9377939012	107	TERMINAL 3P	9703345012
9	REAR PANEL ASSY	9362943031	110	CONTROL BOX COVER ASSY	9375204013
10	CONDENSER GUARD	9377940018	111	BAND (CAPACITOR)	9373942023
11	BASE ASSY	9372336021	112	RELAY	9900294014
12	BASE FOOT PAINTED	9361688025	150	CONTROL BOX (INVERTER)	9373935018
13	RFM (SIDE PANEL) ASSY	9362955027	151	HEAT SINK	9374245017
14	SEPARATE WALL- L	9373917014	152	INVERTER PCB ASSY	9705654013
15	SEPARATE WALL- R ASSY	9362948050	153	FILTER PCB ASSY	9705655010
16	BRACKET (VALVE)- A	9373926016	154	REACTOR ASSY	9900252014
17	RFM(SEPARATE WALL)	9361697003	155	RESISTOR,CEMENT	0200441016
18	BRKT PNL (S VLV)	9364230009	156	RESISTOR,CEMENT	0200444017
19	SEPARATE WALL TOP(LEFT) ASSY	9362942041	157	CAPACITOR (INVERTER)	9705387027
20	SEPARATE WALL TOP(RIGHT) ASSY	9362942034	158	BAND (CAPACITOR)	9373942016
21	CONDENSER A SUB ASSY	9362954167	159	FUSE HOLDER	9900260026
26	BRACKET (CONDENSER)-L ASSY	9362958028	160	FUSE	9900259013
27	BRACKET (CONDENSER)-R ASSY	9362959025	161	CONTROL BOX (INVERTER) COVER A	9375205010
28	BRACKET (MOTOR) A ASSY	9362960021			
29	CONDENSER B SUB ASSY	9362956079			
34	BRACKET (MOTOR) B ASSY	9362963022			
35	DRAIN PAN ASSY	9362961028			
36	BRACKET PANEL (MOTOR)	9361703001			
37	FAN MOTOR ASSY-OUTER	9601698012			
38	PROPELLER FAN	9361726000			
39	BRACKET (CONTROL BOX)	9361727007			
40	THERMISTOR (H.E)	9900099039			
41	THERMISTOR SPRING A	313728262708			
42	BUSHING	9361725003			
43	CONTROL BOX (INVERTER) COVER B	9373941019			
44	BRACKET (THERMISTOR)	9373154013			
50	GASKET	9375556013			
51	RESISTOR(WITH CONNECTOR)	9703926013			
52	FLANGE ASSY	9373983026			
54	INSULATION (PIPE) C	9363828009			
55	RFM CHASSIS A	9374790012			
56	RFM CHASSIS B	9374790029			

Model : AJ*A90LATF


AJ*A72LATF

Ref No.	Description	Part No.	Ref No.	Description	Part No.
		AJ*A90LATF AJ*A72LATF			AJ*A90LATF AJ*A72LATF
200	COMPRESSOR ASSY (INVERTER)	9374248018	310	BYPASS A ASSY	9374957019
201	COMPRESSOR ASSY	9374250011	311	SOLENOID VALVE SV1,2	9970038013
202	BELT HEATER C 240V 25W	9361140073	312	SOLENOID VALVE SV3,5	9970040016
204	BELT HEATER C 240V 35W	9361140202	313	CHECK VALVE	9312268009
205	TERMINAL COVER (COMP)	9372760017	314	CAPILLARY ASSY (SV5)	9375636012
206	BRKT PNL (COMP) ASSY	9373923015	320	BYPASS B ASSY	9374959013
207	BRKT PNL (COMP) ASSY	9373923022	322	CAPILLARY TUBE	9374001101
208	RUBBER SEAT (COMP)	9372761021	323	CHECK VALVE	9312268009
209	COMPRESSOR COVER-A	9374243020	324	SOLENOID VALVE SV6,7	9970046018
210	COMPRESSOR COVER-B (INVERTER)	9374243037	325	JOINT PIPE (BYPASS B)	9375657017
211	COMPRESSOR COVER-C (INVERTER)	9374243044	330	OIL RETURN VALVE ASSY	9375561024
212	COMPRESSOR COVER-D	9374243013	331	CAPILLARY TUBE	9374001095
213	BRACKET (COMPRESSOR)	9361694002	334	SOLENOID VALVE SV8-1,2	9970046018
220	OIL SEPARATOR ASSY	9373991021	335	STRAINER	9373588122
230	RECEIVER TANK ASSY	9373993025	336	DISTRIBUTOR	9304394006
240	ACCUMULATOR ASSY	9373995043	337	NOZZLE	9304395003
250	DISCHARGE PIPE ASSY	9375557027	340	CAPILLARY ASSY	9373979029
251	CHECK VALVE	9372198056	341	STRAINER	9373588115
260	JOINT PIPE E ASSY	9375018016	350	PRESSURE PORT ASSY	9373969020
270	EXPANSION VALVE ASSY	9374811021	351	CHECK JOINT ASSY	9372802038
271	STRAINER	9371191010	360	3WAY VALVE ASSY (OIL)	9372205129
272	CHECK VALVE	9372198063	361	3WAY VALVE ASSY (LIQUID)	9372205136
273	SOLENOID VALVE SV4	9970041013	370	BRACKET (PIPE BAND) ASSY	9374362011
274	EXPANSION VALVE	9900170035	371	CUSHION	9374366019
280	SUB COOL HEX ASSY	9374807017	372	PIPE BAND	9374365012
281	STRAINER ASSY	9372524015	400	THERMISTOR (TH1,2,11,12) ASSY	9900248017
282	EXPANSION VALVE	9900056025	401	THERMISTOR (TH5,6,7,8,9) ASSY	9900249014
283	JOINT PIPE (SUB COOL HEX) A ASSY	9374381029	402	THERMISTOR (TH10)	9900099046
284	JOINT PIPE (SUB COOL HEX) B ASSY	9374809011	403	THERMISTOR (TH13)	9900099053
290	4WAY VALVE ASSY	9374806010	404	THERMISTOR SPRING A	313728262708
291	3WAY VALVE ASSY (GAS)	9373989035	410	SOLENOID SV1	9900189037
292	STRAINER	9375130022	411	SOLENOID SV2	9900189044
293	STRAINER F	9365441008	412	SOLENOID SV3	9970044038
294	4WAY VALVE	9970042010	413	SOLENOID SV4	9970044014
300	SUCTION PIPE A ASSY	9375559014	414	SOLENOID SV5	9970044021
304	SUCTION PIPE C ASSY	9375559038	415	SOLENOID SV6	9900189105
			416	SOLENOID SV7	9900189068
			417	SOLENOID SV8-1	9900189075
			418	SOLENOID SV8-2	9900189082
			420	PRESSURE SENSOR	9900253011
			430	COIL (EXPANSION VALVE)	9900197025
			431	COIL (EXPANSION VALVE)	9900190040
			440	VALVE PLATE	9375555016
			450	SOLENOID 4WV	9970045011
				BINDER CB	9374569021
				BINDER LB	9305335008
				PIPE COVER	9363470000
				EMI FILTER	0400056140

Model : AJ*A90UATF
AJ*A72UATF

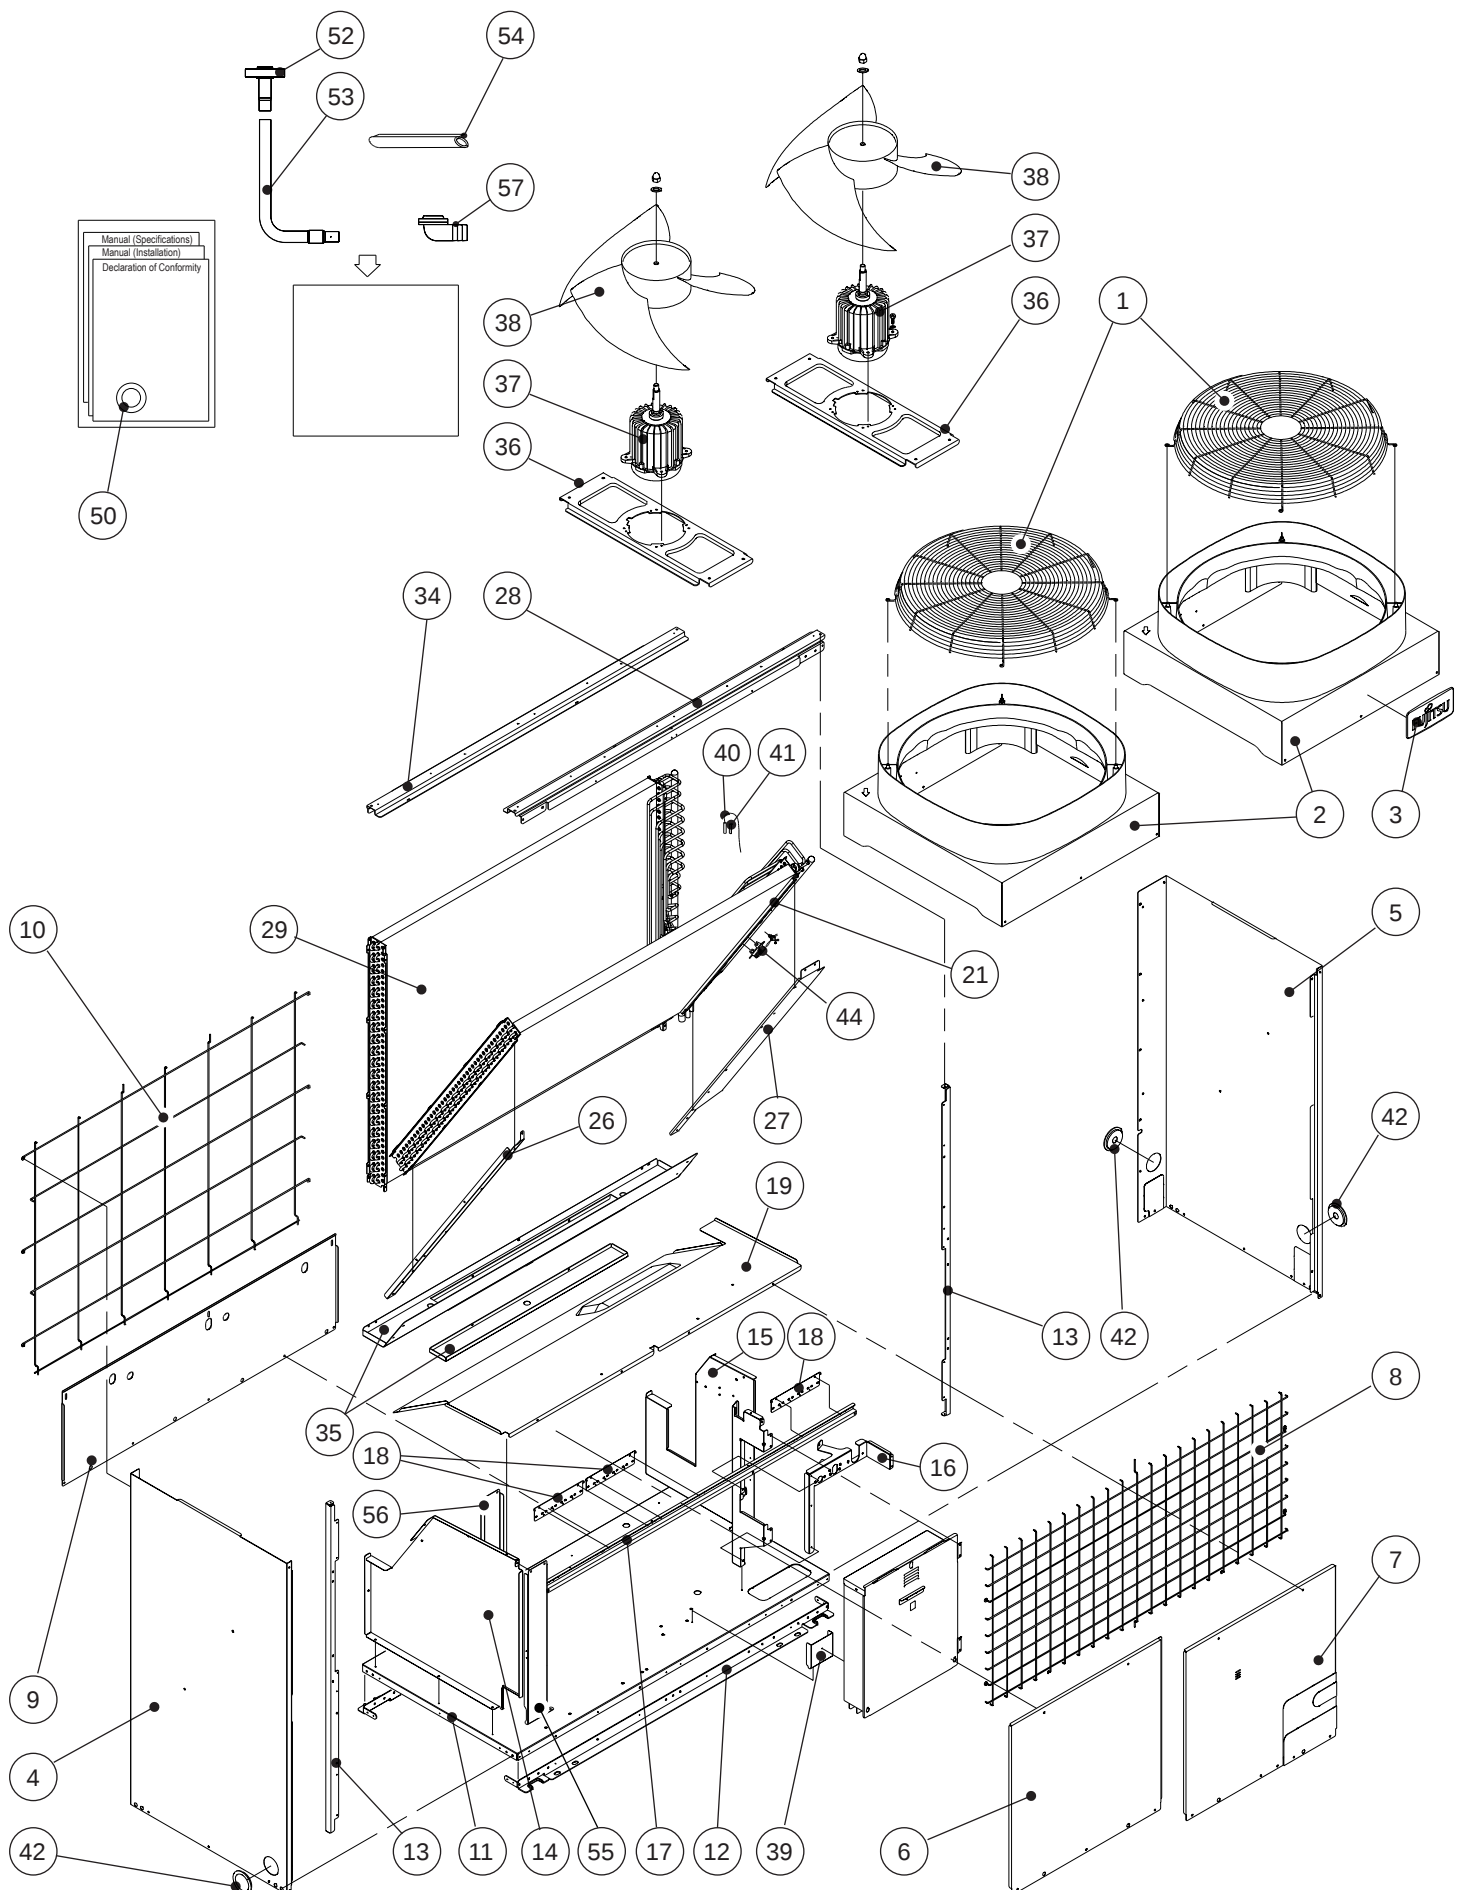


Model : AJ*A90UATF
AJ*A72UATF

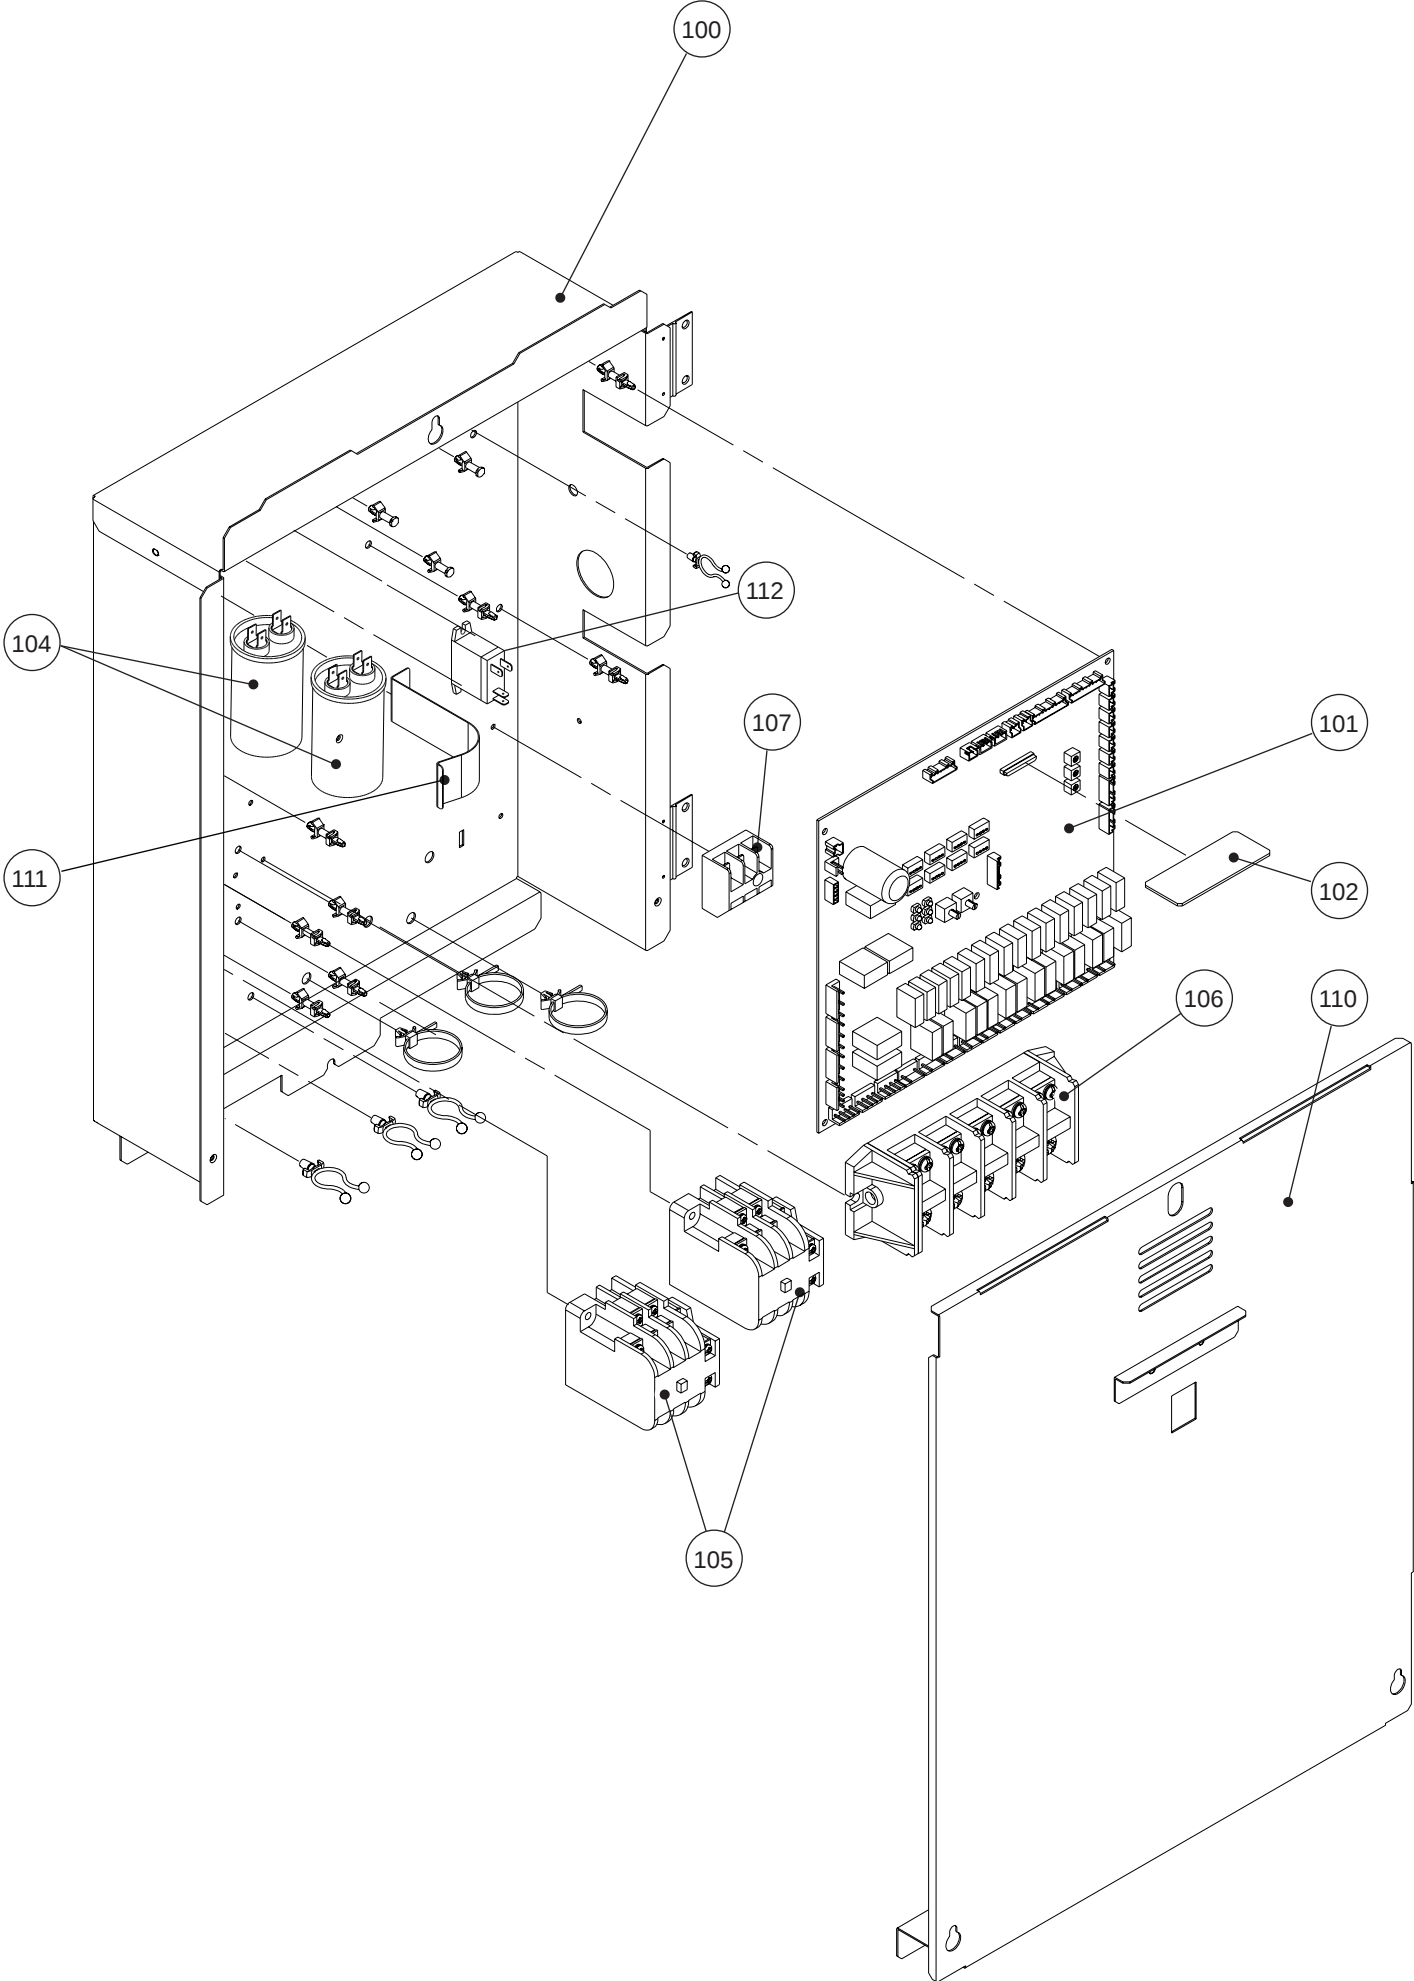

Model : AJ*A90UATF

AJ*A72UATF

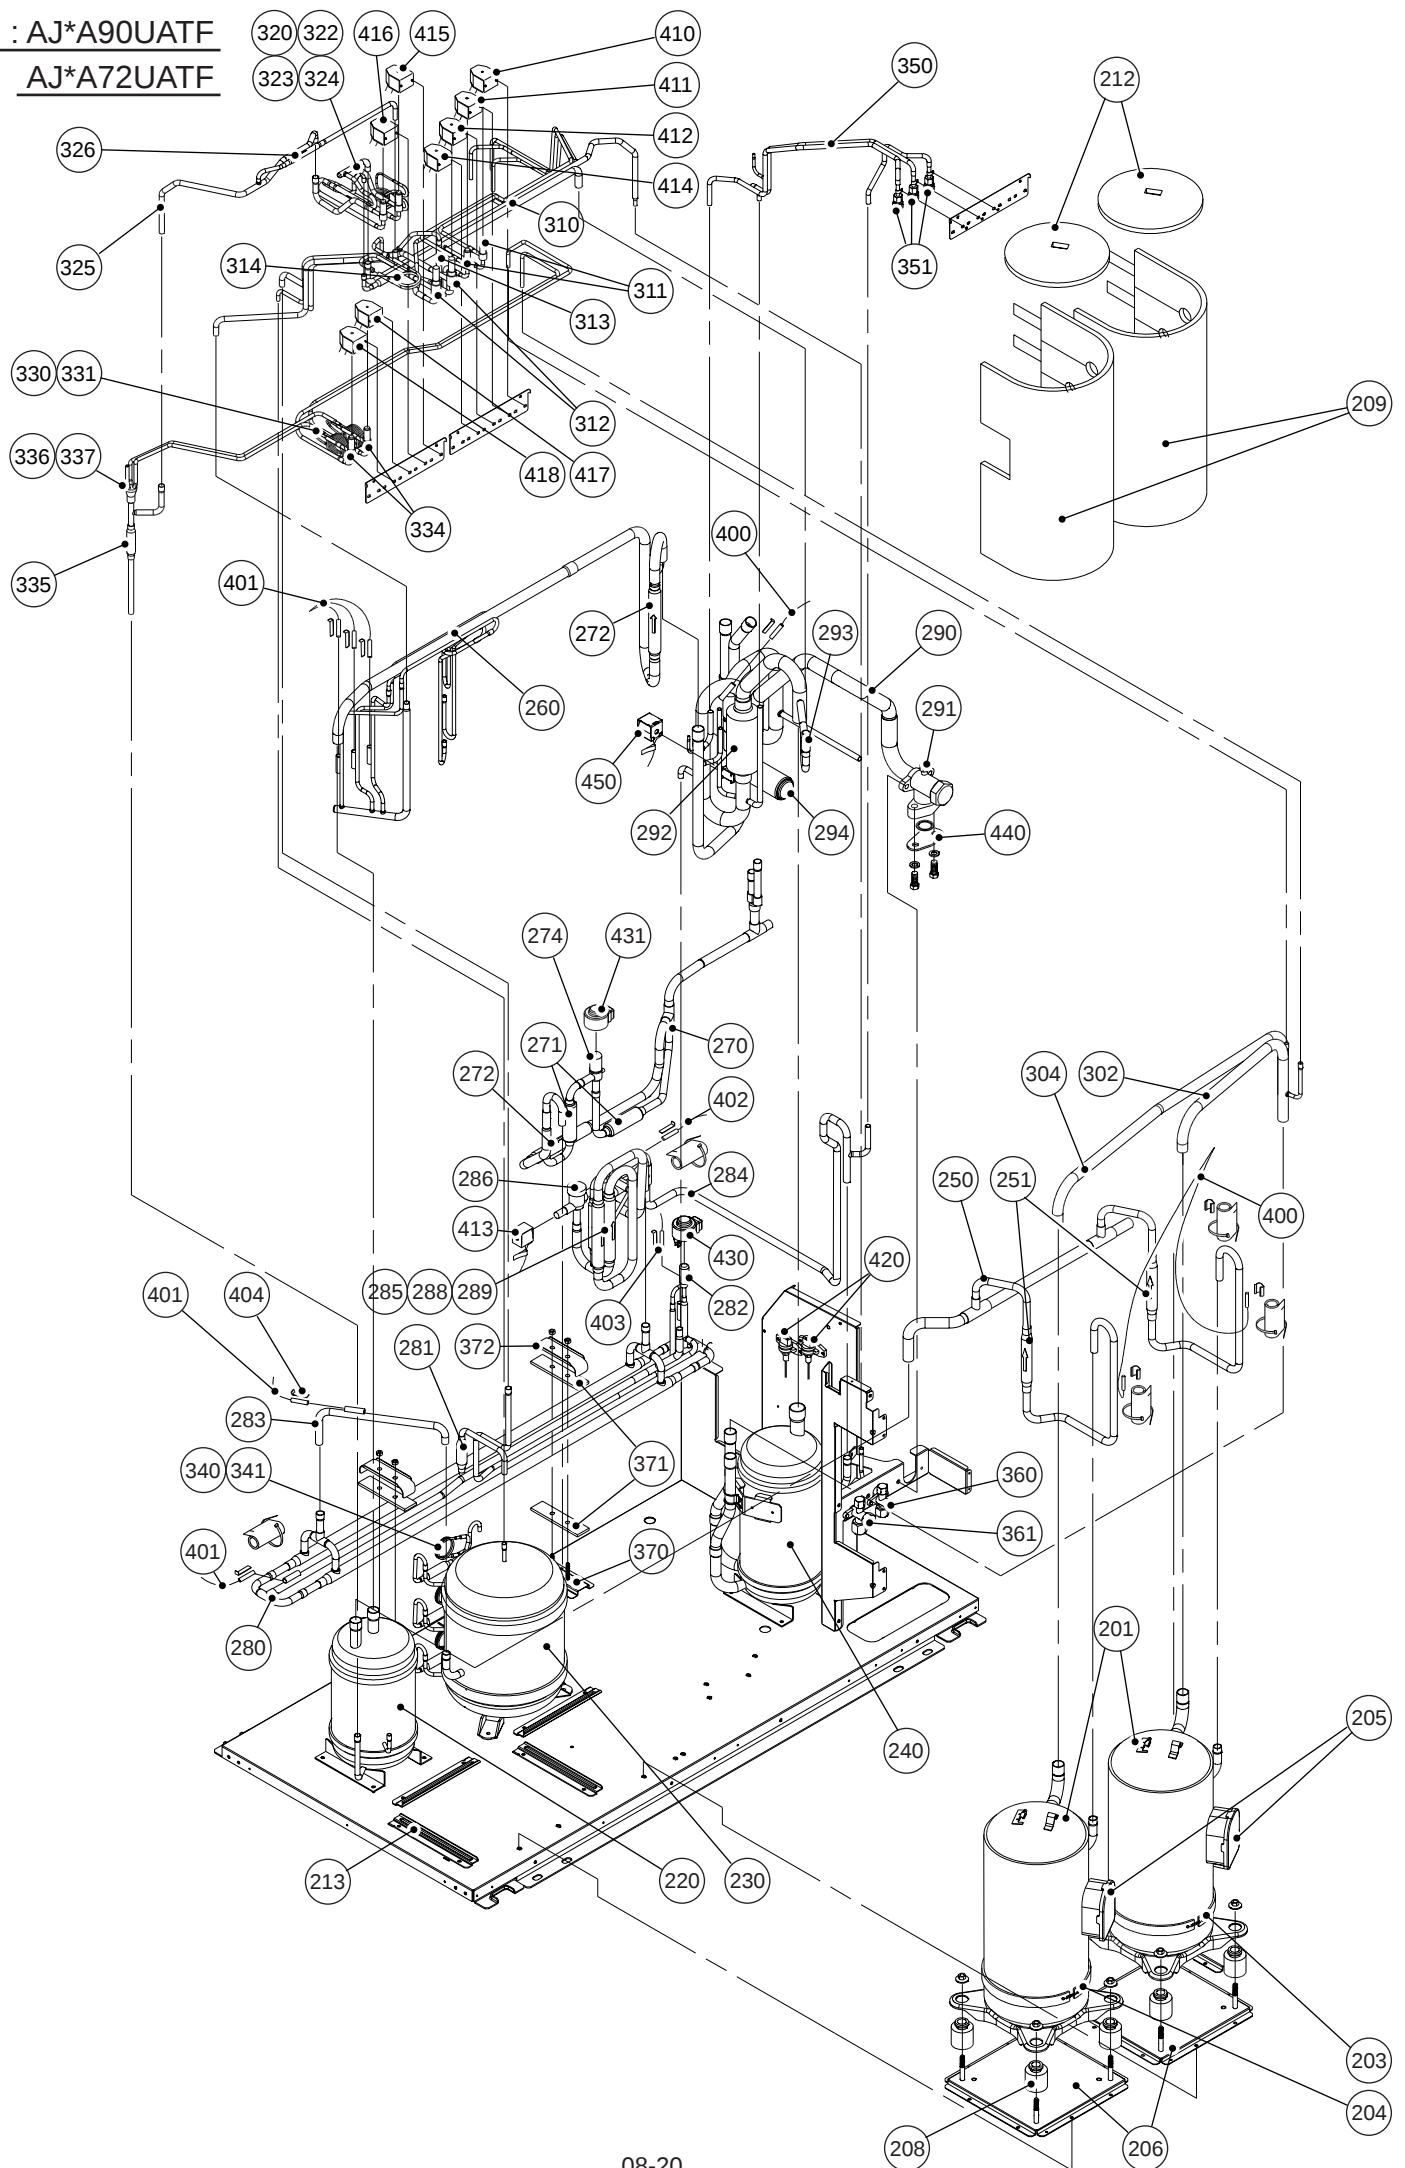

Model : AJ*A90UATF

AJ*A72UATF

Ref No.	Description	Part No.		Ref No.	Description	Part No.	
		AJ*A90UATF	AJ*A72UATF			AJ*A90UATF	AJ*A72UATF
1	FAN COVER	9377941015	9377941015	100	CONTROL BOX	9373932017	9373932017
2	BELL MOUTH	9361721005	9361721005	101	CONTROLLER PCB ASSY	9705653023	9705653023
3	EMBLEM (FUJITSU)	9371388014	9371388014	102	COMMUNICATION PCB	9704424044	9704424044
4	SIDE PANEL- L ASSY	9362940023	9362940023	104	CAPACITOR (FAN MOTOR)	9900269180	9900269180
5	SIDE PANEL- R ASSY	9362941037	9362941037	105	MAGNETIC RELAY	9900116019	9900116019
6	FRONT PANEL- L	9361709027	9361709027	106	TERMINAL 5P	9900251017	9900251017
7	FRONT PANEL- R	9374339020	9374339020	107	TERMINAL 3P	9703345012	9703345012
8	FRONT PROTECTION NET	9377939012	9377939012	110	CONTROL BOX COVER ASSY	9375204013	9375204013
9	REAR PANEL ASSY	9362943031	9362943031	111	BAND (CAPACITOR)	9373942023	9373942023
10	CONDENSER GUARD	9377940018	9377940018	112	RELAY	9900294014	9900294014
11	BASE ASSY	9372336021	9372336021				
12	BASE FOOT PAINTED	9361688025	9361688025				
13	RFM (SIDE PANEL) ASSY	9362955027	9362955027				
14	SEPARATE WALL- L	9373917014	9373917014				
15	SEPARATE WALL- R ASSY	9362948050	9362948050				
16	BRACKET (VALVE)- A	9373926016	9373926016				
17	RFM(SEPARATE WALL)	9361697003	9361697003				
18	BRKT PNL (S VLV)	9364230009	9364230009				
19	SEPARATE WALL TOP ASSY	9362942058	9362942058				
21	CONDENSER A SUB ASSY	9362954181	9362954181				
26	BRACKET (CONDENSER)-L ASSY	9362958028	9362958028				
27	BRACKET (CONDENSER)-R ASSY	9362959032	9362959032				
28	BRACKET(MOTOR) A ASSY	9362960021	9362960021				
29	CONDENSER B SUB ASSY	9362956079	9362956079				
34	BRACKET(MOTOR) B ASSY	9362963022	9362963022				
35	DRAIN PAN ASSY	9362961028	9362961028				
36	BRACKET PANEL (MOTOR)	9361703001	9361703001				
37	FAN MOTOR ASSY-OUTER	9601698012	9601698012				
38	PROPELLER FAN	9361726000	9361726000				
39	BRACKET (CONTROL BOX)	9361727007	9361727007				
40	THERMISTOR (H.E)	9900099039	9900099039				
41	THERMISTOR SPRING A	313728262708	313728262708				
42	BUSHING	9361725003	9361725003				
44	BRACKET (THERMISTOR)	9373154013	9373154013				
50	GASKET	9375556013	9375556013				
52	FLANGE ASSY	9373983026	9373983026				
54	INSULATION (PIPE) C	9363828009	9363828009				
55	RFM CHASSIS A	9374790012	9374790012				
56	RFM CHASSIS B	9374790029	9374790029				

Model : AJ*A90UATF
AJ*A72UATF

Ref No.	Description	Part No.		Ref No.	Description	Part No.	
		AJ*A90UATF	AJ*A72UATF			AJ*A90UATF	AJ*A72UATF
201	COMPRESSOR ASSY	9374250011	9374251018	310	BYPASS A ASSY	9374957019	9374957019
203	BELT HEATER B 240V 35W	9361140196	9361140196	311	SOLENOID VALVE SV1,2	9970038013	9970038013
204	BELT HEATER C 240V 35W	9361140202	9361140202	312	SOLENOID VALVE SV3,5	9970040016	9970040016
205	TERMINAL COVER (COMP)	9372760017	9372760017	313	CHECK VALVE	9312268009	9312268009
206	BRKT PNL (COMP) ASSY	9373923015	9373923015	314	CAPILLARY ASSY (SV5)	9375636012	9375636029
208	RUBBER SEAT (COMP)	9372761021	9372761014	320	BYPASS B ASSY	9374959013	9374959013
209	COMPRESSOR COVER-A	9374243020	9374243020	322	CAPILLARY TUBE	9374001101	9374001101
212	COMPRESSOR COVER-D	9374243013	9374243013	323	CHECK VALVE	9312268009	9312268009
213	BRACKET (COMPRESSOR)	9361694002	9361694002	324	SOLENOID VALVE SV6,7	9970046018	9970046018
220	OIL SEPARATOR ASSY	9373991021	9373991021	325	JOINT PIPE (BYPASS) ASSY	9375657024	9375657024
230	RECEIVER TANK ASSY	9373993025	9373993025	326	CHECK VALVE	9312268009	9312268009
240	ACCUMULATOR ASSY	9373995043	9373995043	330	OIL RETURN VALVE ASSY	9375561048	9375561048
250	DISCHARGE PIPE ASSY	9375557041	9375557041	331	CAPILLARY TUBE	9374001095	9374001095
251	CHECK VALVE	9372198056	9372198056	334	SOLENOID VALVE SV8-1,2	9970046018	9970046018
260	JOINT PIPE E ASSY	9375018016	9375018016	335	STRAINER	9373588122	9373588122
270	EXPANSION VALVE ASSY	9374811045	9374811045	336	DISTRIBUTOR	9304394006	9304394006
271	STRAINER	9371191010	9371191010	337	NOZZLE	9304395003	9304395003
272	CHECK VALVE	9372198063	9372198063	340	CAPILLARY ASSY	9373979029	9373979029
274	EXPANSION VALVE	9900170035	9900170035	341	STRAINER	9373588115	9373588115
280	SUB COOL HEX ASSY	9374807017	9374807017	350	PRESSURE PORT ASSY	9373969020	9373969020
281	STRAINER ASSY	9372524015	9372524015	351	CHECK JOINT ASSY	9372802038	9372802038
282	EXPANSION VALVE	9900056025	9900056025	360	3WAY VALVE ASSY (OIL)	9372205129	9372205129
283	JOINT PIPE (SUB COOL HEX) A ASSY	9374381029	9374381029	361	3WAY VALVE ASSY (LIQUID)	9372205136	9372205136
284	JOINT PIPE (SUB COOL HEX) B ASSY	9374809028	9374809028	370	BRACKET (PIPE BAND) ASSY	9374362011	9374362011
285	CHECK VALVE	9372198063	9372198063	371	CUSHION	9374366019	9374366019
286	SOLENOID VALVE SV4	9970041013	9970041013	372	PIPE BAND	9374365012	9374365012
288	STRAINER	9372951033	9372951033	400	THERMISTOR (TH1,2,11,12) ASSY	9900248017	9900248017
289	RELIEF VALVE	9375660017	9375660017	401	THERMISTOR (TH5,6,7,8,9) ASSY	9900249014	9900249014
290	4WAY VALVE ASSY	9374806010	9374806010	402	THERMISTOR (TH10)	9900099046	9900099046
291	3WAY VALVE ASSY (GAS)	9373989035	9373989035	403	THERMISTOR (TH13)	9900099053	9900099053
292	STRAINER	9375130022	9375130022	404	THERMISTOR SPRING A	313728262708	313728262708
293	STRAINER F	9365441008	9365441008	410	SOLENOID SV1	9900189037	9900189037
294	4WAY VALVE	9970042010	9970042010	411	SOLENOID SV2	9900189044	9900189044
302	SUCTION PIPE B ASSY	9375559052	9375559052	412	SOLENOID SV3	9970044038	9970044038
304	SUCTION PIPE C ASSY	9375559069	9375559069	413	SOLENOID SV4	9970044014	9970044014
				414	SOLENOID SV5	9970044021	9970044021
				415	SOLENOID SV6	9900189105	9900189105
				416	SOLENOID SV7	9900189068	9900189068
				417	SOLENOID SV8-1	9900189075	9900189075
				418	SOLENOID SV8-2	9900189082	9900189082
				420	PRESSURE SENSOR	9900253011	9900253011
				430	COIL (EXPANSION VALVE)	9900197025	9900197025
				431	COIL (EXPANSION VALVE)	9900190040	9900190040
				440	VALVE PLATE	9375555016	9375555016
				450	SOLENOID 4WV	9970045011	9970045011
					BINDER CB	9374569021	9374569021
					BINDER LB	9305335008	9305335008
					PIPE COVER	9363470000	9363470000