


AIR TO WATER HEAT PUMP
OUTDOOR UNIT

INSTALLATION MANUAL

For authorized service personnel only.

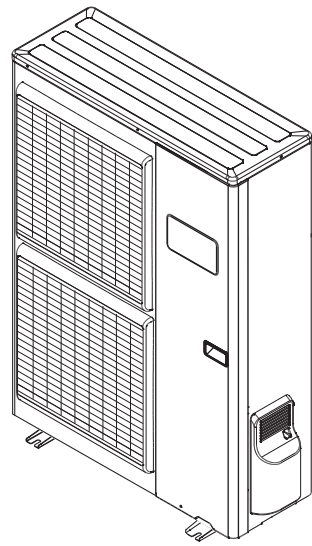

Contents

1. SAFETY PRECAUTIONS	2
2. ABOUT THE UNIT	2
2.1. Precautions for using R410A refrigerant	2
2.2. Special tools for R410A	2
2.3. Accessories	2
3. INSTALLATION WORK	3
3.1. Selecting an installation location	3
3.2. Drain installation	3
3.3. Installation dimensions	4
3.4. Transporting the unit	4
3.5. Installation	5
4. PIPE SELECTION	6
4.1. Selecting the pipe material	6
4.2. Protection of pipes	6
4.3. Refrigerant pipe size and allowable piping length	6
5. PIPE INSTALLATION-1	6
5.1. Brazing	6
5.2. Flare connection (pipe connection)	6
5.3. Sealing test	6
5.4. Vacuum process	8
5.5. Additional charging	9

PART NO. 9374995165

3. INSTALLATION WORK

- Make sure to obtain the customer's approval for selecting and installing the outdoor unit.

3.1. Selecting an installation location


- WARNING**
 - Securely install the outdoor unit at a location that can withstand the weight of the unit. Otherwise, the outdoor unit may fall and cause injury.
 - Be sure to install the outdoor unit as prescribed, so that it can withstand earthquakes and typhoons or other strong winds. Improper installation can cause the unit to topple or fall, or other accidents.
 - Do not install the outdoor unit near the edge of a balcony. Otherwise, children may climb onto the outdoor unit and fall off of the balcony.

- CAUTION**
 - Do not install the outdoor unit in the following areas:
 - Area with high salt content, such as at the seaside. It will deteriorate metal parts, causing the parts to fail or the unit to leak water.
 - Area filled with mineral oil or containing a large amount of splashed oil or steam, such as a kitchen. It will deteriorate plastic parts, causing the parts to fail or the unit to leak water.
 - Area that generates substances that adversely affect the equipment, such as sulfuric gas, chlorine gas, acid, or alkali. It will cause the copper pipes and brazed joints to corrode, which can cause refrigerant leakage.
 - Area containing equipment that generates electromagnetic interference. It will cause the control system to malfunction, preventing the unit from operating normally.
 - Area that can cause combustible gas to leak, contains suspended carbon fibers or flammable dust, or volatile inflammables such as paint thinner or gasoline. If gas leaks and settles around the unit, it can cause a fire.
 - Area where small animals may live. It may cause failure, smoke or fire if small animals enter and touch internal electrical parts.
 - Area where animals may urinate on the unit or ammonia may be generated.
- Do not tilt the outdoor unit more than 3 degrees.
- Install the outdoor unit in a well-ventilated location away from rain or direct sunlight.
- If the outdoor unit must be installed in an area without easy reach of the general public, install as necessary a protective fence or the like to prevent their access.
- Install the outdoor unit in a location that would not inconvenience your neighbors, as they could be affected by the airflow coming out from the outlet, noise, or vibration. If it must be installed in proximity to your neighbors, be sure to obtain their approval.
- If the outdoor unit is installed in a cold region that is affected by snow accumulation, snow fall, or freezing, take appropriate measures to protect it from those elements. To ensure a stable operation, install inlet and outlet ducts.

- CAUTION**
 - Install the outdoor unit in a location that is away from exhaust or the vent ports that discharge vapor, soot, dust, or debris.
 - Install the indoor unit, outdoor unit, power supply cable, transmission cable, and remote control cable at least 1 m away from a television or radio receivers. The purpose of this is to prevent TV reception interference or radio noise. (Even if they are installed more than 1 m apart, you could still receive noise under some signal conditions.)
 - If children under 10 years old may approach the unit, take preventive measures so that they cannot reach the unit.

3.2. Drain installation


- CAUTION**
 - Perform drain work in accordance with this Manual, and ensure that the drain water is properly drained. If the drain work is not carried out correctly, water may drip down from the unit, wetting the furniture.
 - When the outdoor temperature is 0 °C or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold weather. (Reverse cycle model only)
 - As the drain water flows out of the outdoor unit during heating operation, install the drain pipe and connect it to a commercial 16 mm hose. (Reverse cycle model only)
 - When installing the drain pipe, plug all the holes other than the drain pipe mounting hole in the bottom of the outdoor unit with putty so there is no water leakage. (Reverse cycle model only)

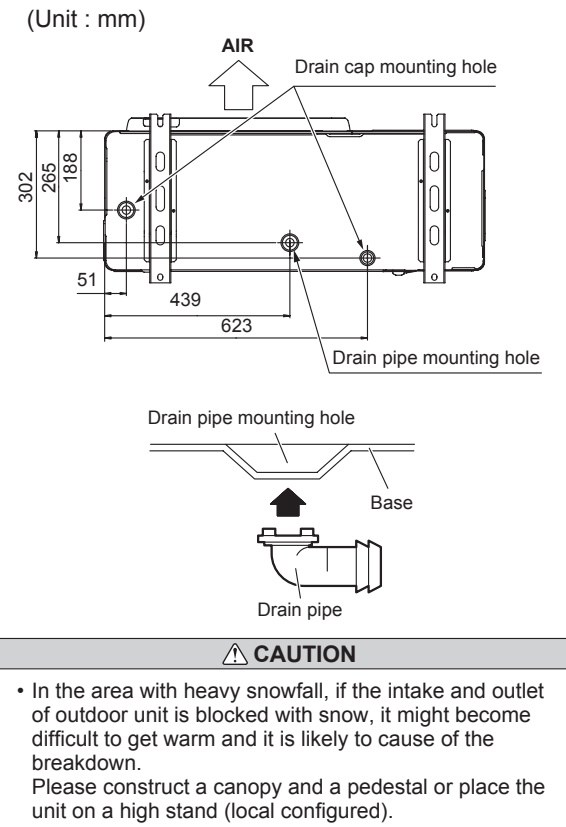

En-3


When an obstruction is present also in the upward area (Unit : mm)

- Obstacles at rear and above only

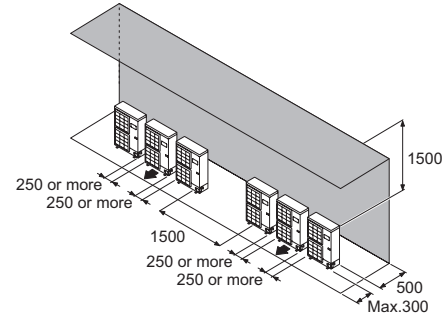


3.3.3. Outdoor units installation in multi row (Unit : mm)

(1) Single parallel unit arrangement

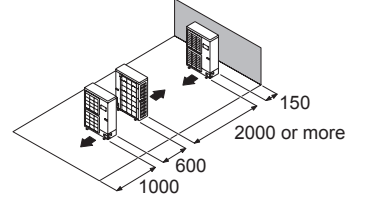


(2) Multiple parallel unit arrangement

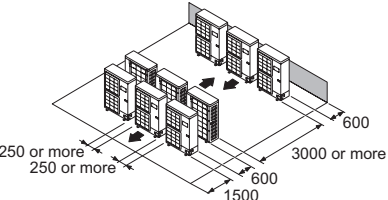


3.4. Transporting the unit

- WARNING**
 - Do not touch the fins. Otherwise, personal injury could result.
- CAUTION**
 - When carrying the unit, hold the handles on the right and left sides and be careful. If the outdoor unit is carried from the bottom, hands or fingers may be pinched.
 - Carry slowly in the manner as shown on "Fig. B" holding the handles "Fig. A" in right and left sides. (Be careful not to touch with hands or objects.)
 - Be sure to hold the handles on the sides of the unit. Otherwise, the suction grilles on the sides of the unit may be deformed.

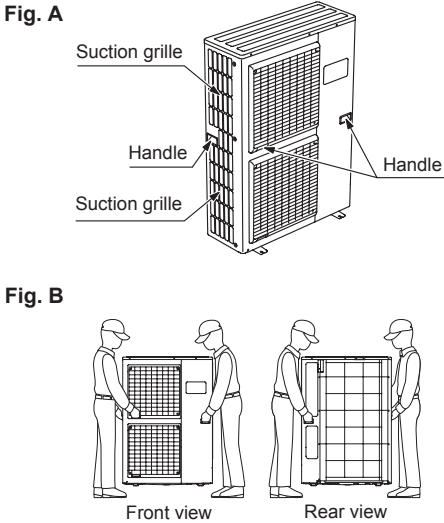


3.5. Installation

(Unit : mm)

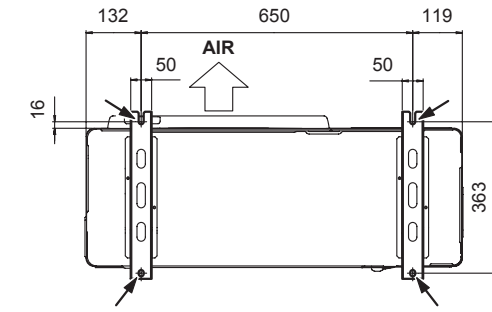


- Install 4 anchor bolts at the locations indicated with arrows in the above figure.
- To reduce vibration, do not install the unit directly on the ground. Install it on a secure base (such as concrete blocks).
- The foundation shall support the legs of the unit and have a width of 50 mm or more.
- Depending on the installation conditions, the outdoor unit may spread its vibration during operation, which may cause noise and vibration. Therefore, attach damping materials (such as damping pads) to the outdoor unit during installation.
- Install the foundation, making sure that there is enough space for installing the connection pipes.
- Secure the unit to a solid block using foundation bolts. (Use 4 sets of commercially available M10 bolts, nuts, and washers.)
- The bolts should protrude 20 mm. (Refer to the figure below.)
- If overturning prevention is required, purchase the necessary commercially available items.

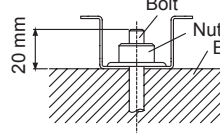

En-5

5.2.1. Flaring

- Use special pipe cutter and flare tool exclusive for R410A.
- (1) Cut the connection pipe to the necessary length with a pipe cutter.
- (2) Hold the pipe downward so that the cuttings will not enter the pipe and remove any burrs.
- (3) Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool. Leakage of refrigerant may result if other flare nuts are used.
- (4) Protect the pipes by pinching them or with tape to prevent dust, dirt, or water from entering the pipes.

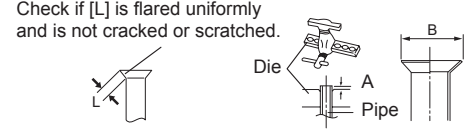

Pipe outside diameter [mm (in.)]	Dimension A [mm]
6.35 (1/4)	0 to 0.5
9.52 (3/8)	
12.70 (1/2)	
15.88 (5/8)	
19.05 (3/4)	

Pipe outside diameter [mm (in.)]	Dimension B - 0.4 [mm]
6.35 (1/4)	9.1
9.52 (3/8)	13.2
12.70 (1/2)	16.6
15.88 (5/8)	19.7
19.05 (3/4)	24.0

- When using conventional flare tools to flare R410A pipes, the dimension A should be approximately 0.5 mm more than indicated in the table (for flaring with R410A flare tools) to achieve the specified flaring. Use a thickness gauge to measure the dimension A.


Width across flats	Pipe outside diameter [mm (in.)]	Width across flats of Flare nut [mm]
	6.35 (1/4)	17
	9.52 (3/8)	22
	12.70 (1/2)	26
	15.88 (5/8)	29
	19.05 (3/4)	36

5.2.2. Bending pipes

- CAUTION**
 - To prevent breaking of the pipe, avoid sharp bends. Bend the pipe with a radius of curvature of 100 mm to 150 mm.
 - If the pipe is bent repeatedly at the same place, it will break.
 - If pipes are shaped by hand, be careful not to collapse them.
 - Do not bend the pipes at an angle of more than 90°.
 - When pipes are repeatedly bent or stretched, the material will harden, making it difficult to bend or stretch them any more.
 - Do not bend or stretch the pipes more than three times.


5.2.3. Pipe connection

- CAUTION**
 - Be sure to install the pipe against the port on the indoor unit and the outdoor unit correctly. If the centering is improper, the flare nut cannot be tightened smoothly. If the flare nut is forced to turn, the threads will be damaged.
 - Do not remove the flare nut from the outdoor unit pipe until immediately before connecting the connection pipe.
 - After installing the piping, make sure that the connection pipes do not touch the compressor or outer panel. If the pipes touch the compressor or outer panel, they will vibrate and produce noise.

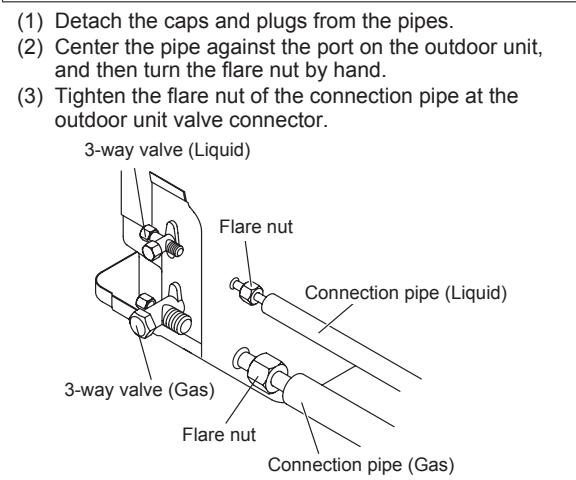

- (4) After tightening the flare nut by hand, use a torque wrench to fully tighten it.

- CAUTION**
 - Hold the torque wrench at its grip, keeping it in a right angle with the pipe, in order to tighten the flare nut correctly.
 - Outer panel may be distorted if fastened only with a wrench. Be sure to fix the elementary part with a spanner and fasten with a wrench (refer to below diagram).
 - Do not apply force to the blank cap of the valve or hang a wrench, etc., on the cap. It may cause leakage of refrigerant.

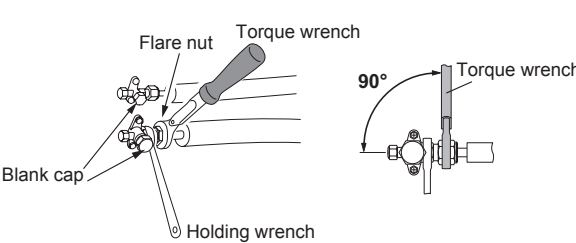

Flare nut [mm (in.)]	Tightening torque [N·m (kgf·cm)]
6.35 (1/4) dia.	16 to 18 (160 to 180)
9.52 (3/8) dia.	32 to 42 (320 to 420)
12.70 (1/2) dia.	49 to 61 (490 to 610)
15.88 (5/8) dia.	63 to 75 (630 to 750)
19.05 (3/4) dia.	90 to 110 (900 to 1100)

En-7

1. SAFETY PRECAUTIONS

- Be sure to read this Manual carefully before installation.
- The warnings and precautions indicated in this Manual contain important information pertaining to your safety. Be sure to observe them.
- Hand this Manual, together with the Operating Manual, to the customer. Request the customer to keep them on hand for future use, such as for relocating or repairing the unit.

WARNING This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

- Request your dealer or a professional installer to install the outdoor unit in accordance with this Installation Manual. An improperly installed unit can cause serious accidents such as water leakage, electric shock, or fire. If the outdoor unit is installed in disregard of the instructions in the Installation Manual, it will void the manufacturer's warranty.

- Do not turn ON the power until all work has been completed. Turning ON the power before the work is completed can cause serious accidents such as electric shock or fire.

- If refrigerant leaks while work is being carried out, ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.

- Installation work must be performed in accordance with national wiring standards by authorized personnel only.

CAUTION This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

2. ABOUT THE UNIT

2.1. Precautions for using R410A refrigerant

- WARNING**
 - Do not introduce any substance other than the prescribed refrigerant into the refrigeration cycle. If air enters the refrigeration cycle, the pressure in the refrigeration cycle will become abnormally high and cause the piping to rupture.
 - If there is a refrigerant leak, make sure that it does not exceed the concentration limit. If a refrigerant leak exceeds the concentration limit, it can lead to accidents such as oxygen starvation.
 - Do not touch refrigerant that has leaked from the refrigerant pipe connections or other areas. Touching the refrigerant directly can cause frostbite.
 - If a refrigerant leak occurs during operation, immediately vacate the premises and thoroughly ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.

2.2. Special tools for R410A

- WARNING**
 - To install a unit that uses R410A refrigerant, use dedicated tools and piping materials that have been manufactured specifically for R410A use. Because the pressure of R410A refrigerant is approximately 1.6 times higher than R22, failure to use dedicated piping material or improper installation can cause rupture or injury. Furthermore, it can cause serious accidents such as water leakage, electric shock, or fire.

Tool name	Changes
Gauge manifold	The pressure in the refrigerant system is extremely high and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended to use a gauge manifold with a high pressure display range of -0.1 to 5.3 MPa and a low pressure display range of -0.1 to 3.8 MPa.
Charging hose	To increase pressure resistance, the hose material and base size were changed. (The charging port thread diameter for R410A is 1/2 UNF 20 threads per inch.)
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter. Be sure that the pump oil does not back-flow into the system. Use one capable for vacuum suction of -100.7 kPa (5 Torr, -755 mmHg).
Gas leakage detector	Special gas leakage detector for R410A refrigerant.


2.3. Accessories

- WARNING**
 - For installation purposes, be sure to use the parts supplied by the manufacturer or other prescribed parts. The use of non-prescribed parts can cause serious accidents such as the unit falling, water leakage, electric shock, or fire.
 - The following installation parts are supplied. Use them as required.
 - Keep the Installation Manual in a safe place and do not discard any other accessories until the installation work has been completed.

Name and shape	Q'ty	Description
Installation Manual	1	This manual
Drain pipe	1	For outdoor unit drain piping work (May not be supplied, depending on the model.)
Drain cap	2	
Insulation (seal)	1	For filling in a gap at the entrance of connection cords

En-4


When an obstruction is present also in the upward area (Unit : mm)

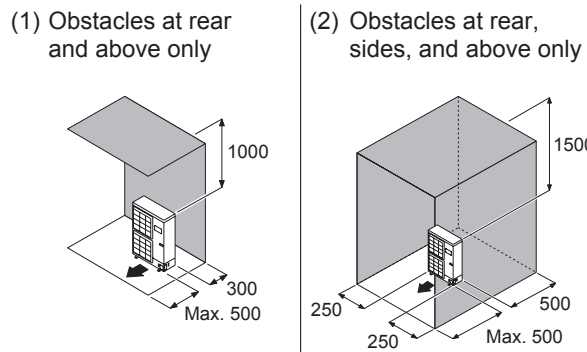

3.3.2. Multiple outdoor unit installation

- Provide at least 15 mm of space between the outdoor units if multiple units are installed.
- When routing the piping from the side of an outdoor unit, provide space for the piping.
- No more than 3 units must be installed side by side. When 3 units or more are arranged in a line, provide the space as shown in the following example when an obstruction is present also in the upward area.

When the upward area is open (Unit : mm)

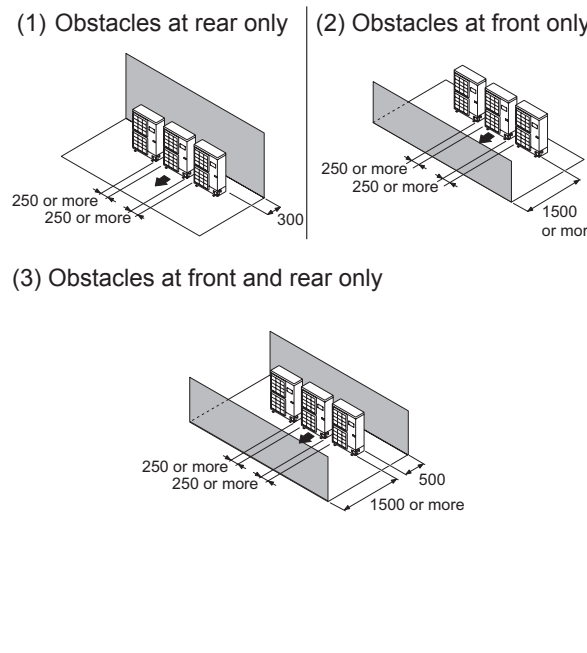

En-6

4. PIPE SELECTION

4.1. Selecting the pipe material

- CAUTION**
 - Do not use existing pipes.
 - Use pipes that have clean external and internal sides without any contamination which may cause trouble during use, such as sulfur, oxide, dust, cutting waste, oil, or water.
 - It is necessary to use seamless copper pipes. Material: Phosphor deoxidized seamless copper pipes. It is desirable that the amount of residual oil is less than 40 mg/10 m.
 - Do not use copper pipes that have a collapsed, deformed, or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants.
 - Improper pipe selection will degrade performance. As an air to water heat pump using R410A incurs pressure higher than when using conventional refrigerant, it is necessary to choose adequate materials.
- Thicknesses of copper pipes used with R410A are as shown in the table.
- Never use copper pipes thinner than those indicated in the table even if they are available on the market.

Thicknesses of Annealed Copper Pipes (R410A)

Pipe outside diameter [mm (in.)]	Thickness [mm]
6.35 (1/4)	0.8
9.52 (3/8)	
12.70 (1/2)	1.0
15.88 (5/8)	1.2
19.05 (3/4)	

4.2. Protection of pipes

- Protect the pipes to prevent the entry of moisture and dust.
- Especially, pay attention when passing the pipes through a hole or connecting the end of a pipe to the outdoor unit.

Location	Working period	Protection method
Outdoor	1 month or more	Pinch pipes
Indoor	Less than 1 month	Pinch or tape pipes

4.3. Refrigerant pipe size and allowable piping length


CAUTION	
• Keep the piping length between the indoor unit and outdoor unit within the allowable tolerance.	
Pipe diameter <Liquid/Gas> (Standard)	9.52 (3/8) / 15.88 (5/8)
Max. piping length [m]	20*1
Min. piping length [m]	5
Max. height difference <Indoor unit to outdoor unit> [m]	15

*1: For the standard pipe diameter.

5. PIPE INSTALLATION-1

5.1. Brazing

- CAUTION**
 - If air or another type of refrigerant enters the refrigeration cycle, the internal pressure in the refrigeration cycle will become abnormally high and prevent the unit from exerting its full performance.
 - Apply nitrogen gas while brazing the pipes. If a pipe is brazed without applying nitrogen gas, an oxidation film will be created. This can degrade performance or damage the parts in the unit (such as the compressor or valves).
 - Pressure regulating valve
 - Nitrogen gas pressure: 0.02 MPa (= pressure felt sufficiently on the back of the hand)
 - For brazing material, use phosphor copper that does not require flux. Do not use flux to braze pipes. If the flux is the chlorine type, it will cause the pipes to corrode. Furthermore, if the flux contains fluoride, it will adversely affect the refrigerant pipe system such as by degrading the refrigerant. If fluoride is contained, quality of refrigerant deteriorates and affects the refrigerant piping system.

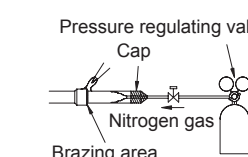

5.2. Flare connection (pipe connection)

- CAUTION**
 - Do not use mineral oil on a flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
 - While welding the pipes, be sure to blow dry nitrogen gas through them.
 - The maximum lengths of this product are shown in the table. If the units are further apart than this, correct operation cannot be guaranteed.


5.2.4. Handling precautions for the valves

- Mounted part of Blank cap is sealed for protection.
- Fasten blank cap tightly after opening valves.

Blank cap [mm (in.)]	Tightening torque [N·m (kgf·cm)]
6.35 (1/4)	20 to 25 (200 to 250)
9.52 (3/8)	20 to 25 (200 to 250)
12.70 (1/2)	25 to 30 (250 to 300)
15.88 (5/8)	30 to 35 (300 to 350)
19.05 (3/4)	35 to 40 (350 to 400)

Operating the valves

- Use a hexagon wrench (size 4 mm).
- Opening
 - (1) Insert the hexagon wrench into the valve shaft, and turn it counterclockwise.
 - (2) Stop turning when the valve shaft can no longer be turned. (Open position)
- Closing
 - (1) Insert the hexagon wrench into the valve shaft, and turn it clockwise.
 - (2) Stop turning when the valve shaft can no longer be turned. (Closed position)

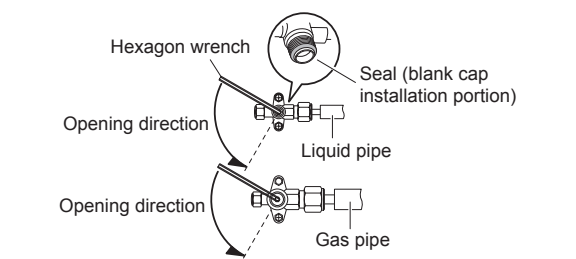

5.3. Sealing test

- WARNING**
 - Before operating the compressor, install the pipes and securely connect them. Otherwise, if the pipes are not installed and if the valves are open when the compressor operates, air could enter the refrigeration cycle. If this happens, the pressure in the refrigeration cycle will become abnormally high and cause damage or injury.
 - After the installation, make sure there is no refrigerant leakage. If the refrigerant leaks into the room and becomes exposed to a source of fire such as a fan heater, stove, or burner, it produces a toxic gas.
 - Do not subject the pipes to strong shocks during the sealing test. It can rupture the pipes and cause serious injury.


- CAUTION**
 - Do not block the walls and the ceiling until the sealing test and the charging of the refrigerant gas have been completed.
 - For maintenance purposes, do not bury the piping of the outdoor unit.

En-8

- CAUTION**
 - Perform a refrigerant leakage test (air tightness test) to check for leaks using nitrogen gas while all valves in the outdoor unit are closed. (Use the test pressure indicated on the nameplate.)
 - Be sure to evacuate the refrigerant system using a vacuum pump.
 - The refrigerant pressure may sometimes not rise when a closed valve is opened after the system is evacuated using a vacuum pump. This is caused by the closure of the refrigerant system of the outdoor unit by the electronic expansion valve. This will not affect the operation of the unit.
 - If the system is not evacuated sufficiently, its performance drops.
 - Use a clean gauge manifold and charging hose that were designed specifically for use with R410A. Using the same vacuum equipment for different refrigerants may damage the vacuum pump or the unit.
 - Do not purge the air with refrigerants, but use a vacuum pump to evacuate the system.

- (1) Check that the valves are closed by removing the blank caps from the gas and liquid pipes.
- (2) Remove the charging port cap, and connect the gauge manifold and the vacuum pump to the charging valve with the service hoses.
- (3) Vacuum the indoor unit and the connecting pipes until the pressure gauge indicates -0.1 MPa (-76 cmHg).
- (4) When -0.1 MPa (-76 cmHg) is reached, operate the vacuum pump for at least 60 minutes.
- (5) Disconnect the service hoses and fit the charging port cap to the charging valve to the specified torque. (Refer to below table)
- (6) Remove the blank caps, and fully open the 3-way valves with a hexagon wrench [Torque: 6 to 7 N·m (60 to 70 kgf·cm)].
- (7) Tighten the blank caps of the 3-way valve to the specified torque. (Refer to Table A on the left side)

	Tightening torque [N·m (kgf·cm)]
Charging port cap	10 to 12 (100 to 120)

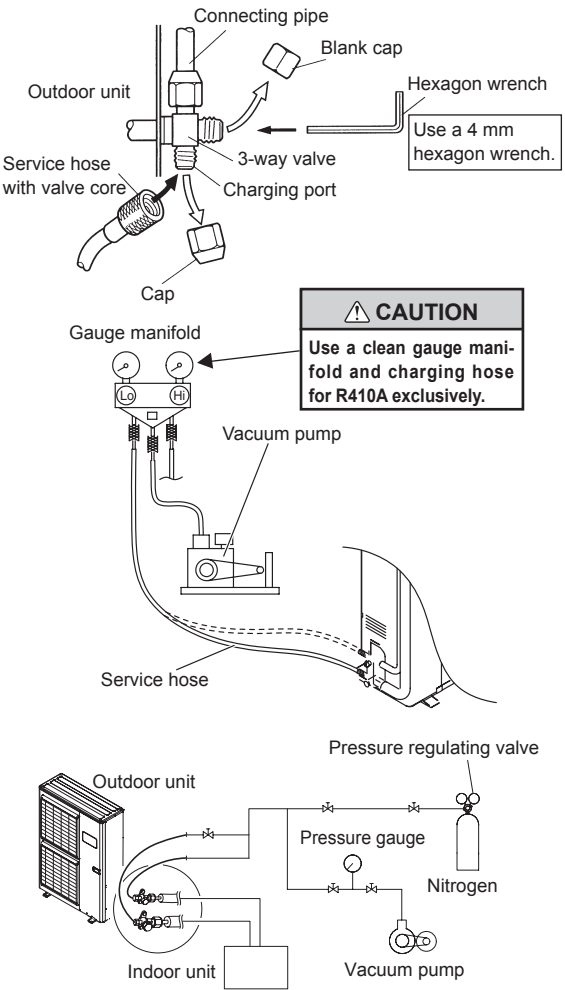

5.5. Additional charging

- CAUTION**
- After vacuuming the system, add refrigerant.
 - When moving and installing the air to water heat pump, do not mix gas other than the specified refrigerant R410A inside the refrigerant cycle.
 - Do not reuse recovered refrigerant.
 - When charging the refrigerant R410A, always use an electronic scales for refrigerant charging (to measure the refrigerant by weight). Adding more refrigerant than the specified amount will cause a malfunction.
 - When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable. Adding refrigerant through the gas pipe will cause a malfunction.

CAUTION

- Check if the steel cylinder has a siphon installed or not before filling. (There is an indication "with siphon for filling liquid" on the steel cylinder.)

Filling method for cylinder with siphon

R410A Gas Set the cylinder vertical and fill with the liquid. (Liquid can be filled without turning bottom up with the siphon inside.)

Filling method for other cylinders

R410A Gas Turn bottom up and fill with liquid. (Be careful to avoid turning over the cylinder.)

- Be sure to use the special tools for R410A for pressure resistance and to avoid mixing of impure substances.
- If the units are further apart than the maximum pipe length, correct operation can not be guaranteed.
- Make sure to back closing valve after refrigerant charging. Otherwise, the compressor may fail.
- Minimize refrigerant release to the air. Excessive release is prohibited under the Freon Collection and Destruction Law.

Refrigerant suitable for a piping length of 15 m is charged in the outdoor unit at the factory.

When the piping is longer than 15 m, additional charging is necessary.

For the additional amount, see the table below.

Pipe length	~15 m	20 m	g/m
Additional refrigerant	None	250 g	50 g/m


6. ELECTRICAL WIRING

6.1. Notes for electrical wiring

- WARNING**
- Wiring connections must be performed by a qualified person in accordance with the specifications. The voltage rating for this product is 230 V at 50 Hz. It should be operated within the range of 198 to 264 V.
 - Before connecting the wires, make sure the power supply is OFF.
 - Never touch electrical components immediately after the power supply has been turned off. Electrical shock may occur. After turning off the power, always wait 10 minutes or more before touching electrical components.
 - Use a dedicated power supply circuit. Insufficient power capacity in the electrical circuit or improper wiring may cause electric shock or fire.
 - Install a breaker at the power supply for each outdoor unit. Improper breaker selection can cause electric shock or fire.
 - Install a leakage circuit breaker in accordance with the related laws and regulations. An improperly installed electrical box cover can cause serious accidents such as electric shock or fire through exposure to dust or water.
 - A circuit breaker is installed in the permanent wiring. Always use a circuit that can trip all the poles of the wiring and has an isolation distance of at least 3 mm between the contacts of each pole.
 - Use designated cables and power cables. Improper use may cause electric shock or fire by poor connection, insufficient insulation, or over current.


6.3. Wiring method

6.3.1. Connection diagrams

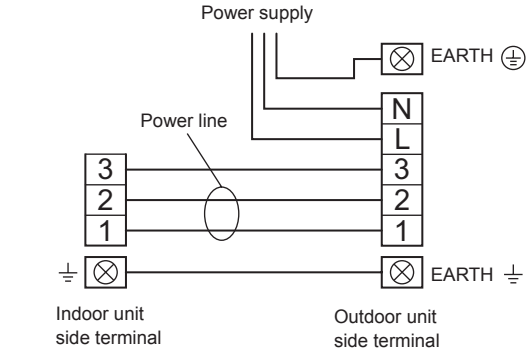


6.3.2. Connection cable preparation

- Keep the earth wire longer than the other wires.

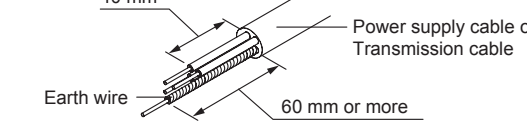


6.3.3. Wiring procedure

- Remove the one mounting screw. And remove the valve cover by sliding upward. (Fig. A)
- Remove the service panel and insulation sheet. And connect the wires to the terminal in accordance with the terminal nameplate. (Fig. A, Fig. B)

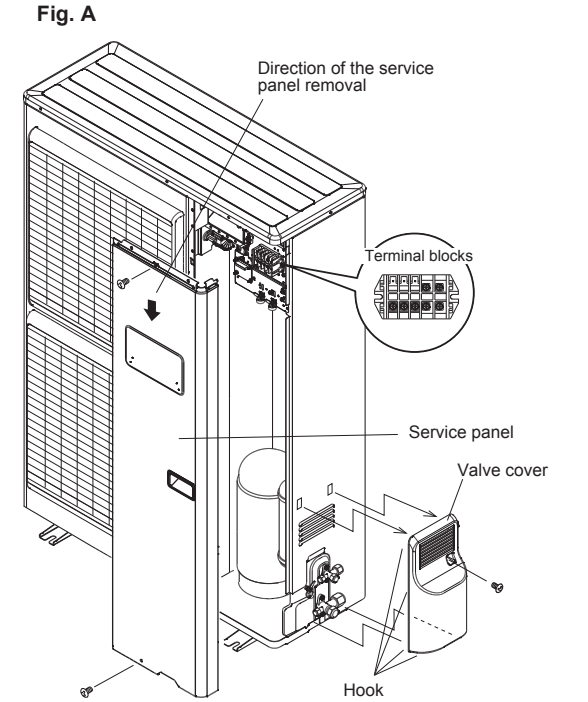


- After connecting the wires, use cable clips to secure the wires. (Fig. B)
- Connect the wires without applying excessive tension.

Fig. B

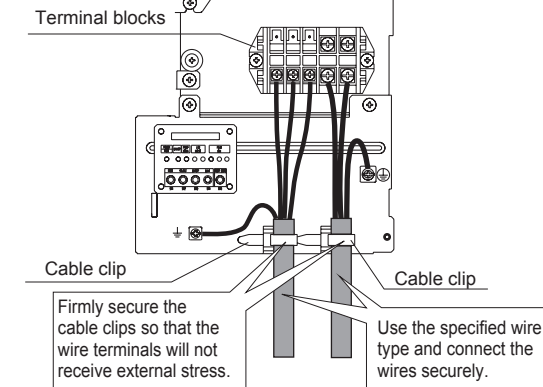

- Secure the cables using the cable clips under the terminal blocks, and then secure the cables using the cable clips attached to the base of the valves.

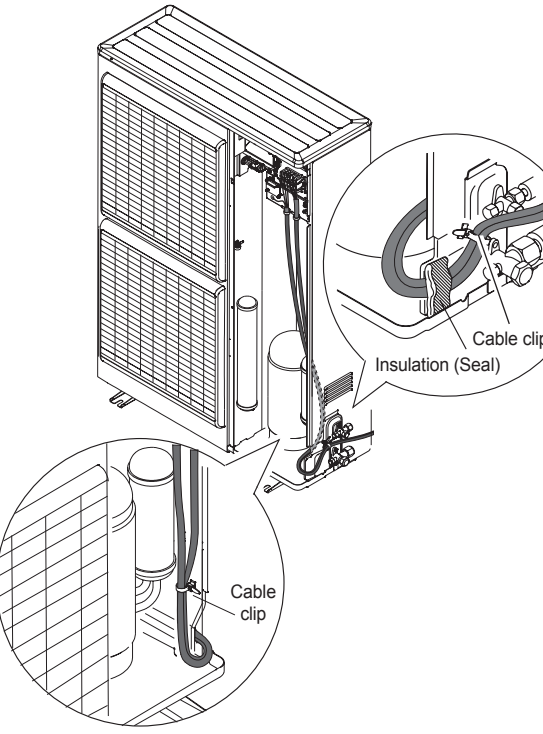

- Be sure to install the insulation sheet after the wiring is complete.

7. PIPE INSTALLATION-2


WARNING

- Install the insulated pipes so that they do not touch the compressor.


7.1. Installing insulation

- Use an insulation on the refrigerant pipes to prevent burn injury, condensation and dripping.


< Example of circuit diagram >

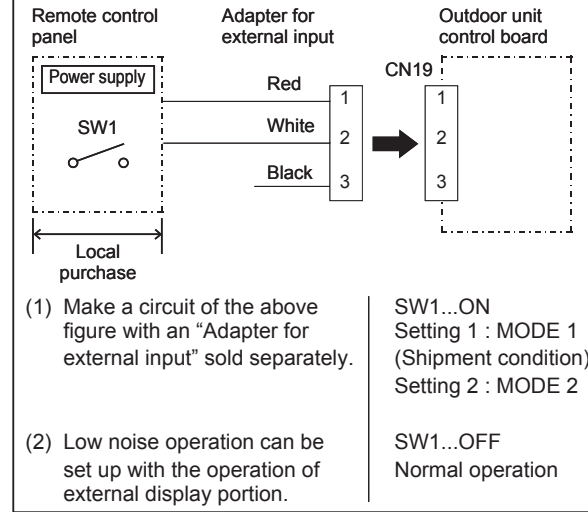

9.1.1. Setting for low noise

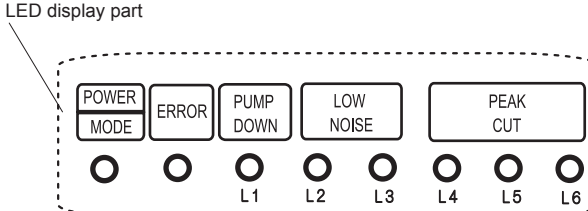


- Switch to "Local setting mode" by pressing [MODE] switch (SW1) for 3 seconds or more.
 - Confirm (POWER / MODE) blinks 9 times, and press [ENTER] switch (SW3).
- Sign "o": Lights off
- Press [SELECT] switch (SW2), and adjust LED display as shown below. (Current setting is displayed)

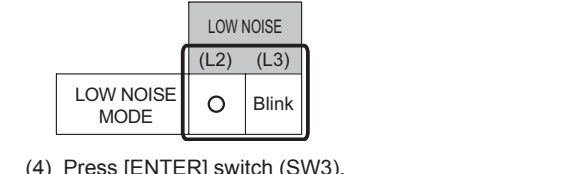

- Press [ENTER] switch (SW3).
- Sign "o": Lights on


- Press [SELECT] switch (SW2), and adjust LED display as shown in below figure.

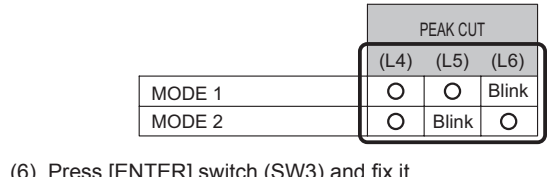


- Press [ENTER] switch (SW3) and fix it.
- Sign "o": Lights on
- Return to "Operating status display (Normal operation)" by pressing [EXIT] switch (SW4).
 - In case of missing how many times [SELECT] and [ENTER] switch are pressed, restart from the beginning of operation procedure after returning to "Operation status display (normal operation)" by pressing the [EXIT] switch once.

9.2. Peak cut mode (Local work)

- Efficient operation while reducing power supply and power consumption with below local work.
- Peak cut function can be effective with contact installation of an additional ON-OFF switch to the CN19 connector on the outdoor control board.

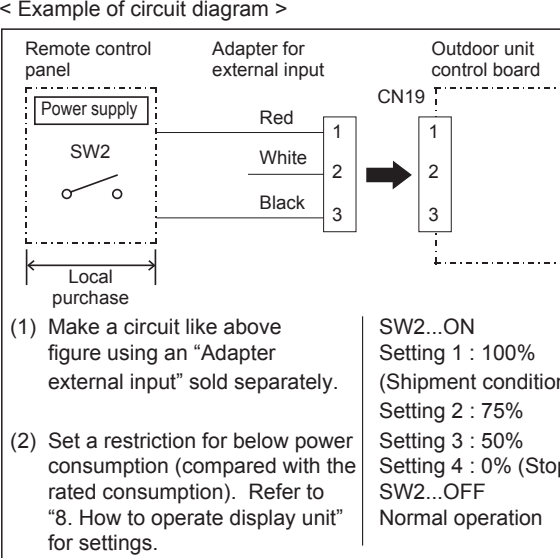

- Make a circuit like above figure using an "Adapter external input" sold separately.
 - Set a restriction for below power consumption (compared with the rated consumption). Refer to "8. How to operate display unit" for settings.
- SW2...ON Setting 1: 100% (Shipment condition) Setting 2: 75% Setting 4: 50% (Stop) SW2...OFF Normal operation

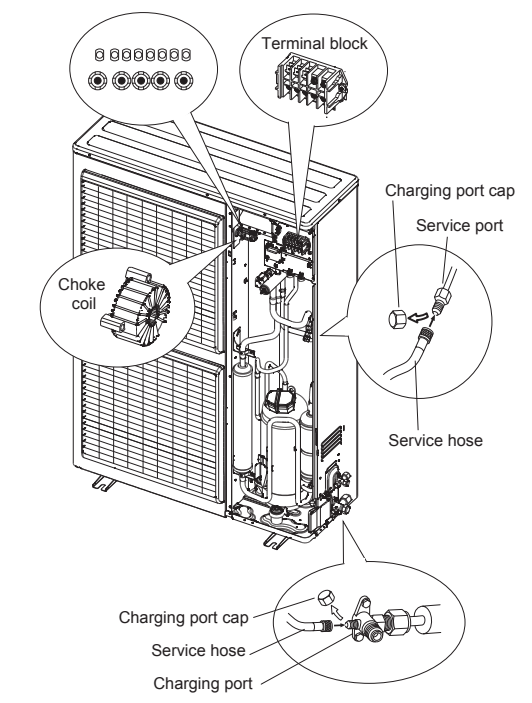


11.1. Preparation for pump down


- Confirm that the power is off, and then open the service panel.

11.2. Pump down procedure

- Check the 3-way valves (both at the liquid side and gas side) are opened.
- Turn the power on.
- Press [PUMP DOWN] switch for 3 seconds or more after 3 minutes after power on.

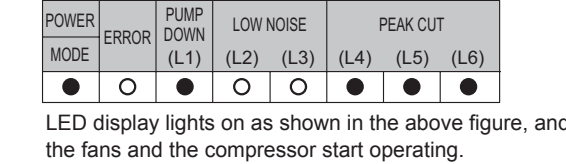


- If the [PUMP DOWN] switch is pressed while the compressor is operating, the compressor will stop, then start again in about 3 minutes.
- LED display will change as shown below about 3 minutes after the compressor starts. Fully close the 3-way valve on the liquid pipe side at this stage.

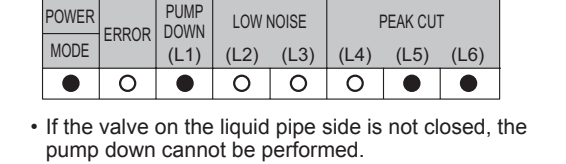


- If the valve on the liquid pipe side is not closed, the pump down cannot be performed.


- When LED display changes as shown in the below figure, close the 3-way valve on the gas pipe side tightly.

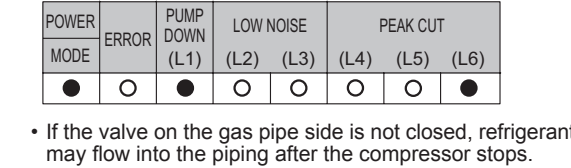

- When LED display changes as shown in the below figure, close the 3-way valve on the gas pipe side tightly.




- LED display changes after 1 minute as shown in the figure below.



- Fans and compressor stop automatically.

- If the pump down is successfully completed (the above LED display is shown), the outdoor unit remains stopped until the power is turned off.



- Turn the power off.

- (Note)
- To stop pump down, press the [PUMP DOWN] switch again.
 - To start the pump down again after the compressor is automatically stopped due to an error, turn the power off and open the 3-way valves. Wait 3 minutes, turn the power on and start the pump down again.
 - When starting the operation after completion of the pump down, turn the power off, and then open the 3-way valves. Wait 3 minutes, turn the power on and perform a test run in the "COOL" operation mode.


- WARNING**
- Do not modify power cable, use extension cable or branch wiring. Improper use may cause electric shock or fire by poor connection, insufficient insulation or over current.
 - Connect the connector cable securely to the terminal. Check no mechanical force bears on the cables connected to the terminals. Faulty installation can cause a fire.
 - Use crimp-type terminals and tighten the terminal screws to the specified torques, otherwise, abnormal overheating may be produced and possibly cause serious damage inside the unit.
 - Make sure to secure the insulation portion of the connector cable with the cable clamp. Damaged insulation can cause a short circuit.
 - Fix cables so that cables do not make contact with the pipes (especially on high pressure side). Do not make power supply cable and transmission cable come in contact with valves (Gas).
 - Never install a power factor improvement condenser. Instead of improving the power factor, the condenser may overheat.
 - Be sure to perform the grounding work. Do not connect grounding wires to a gas pipe, water pipe, lightning rod or grounding wire for a telephone.
 - Connection to a gas pipe may cause a fire or explosion if gas leaks.
 - Connection to a water pipe is not an effective grounding method if PVC pipe is used.
 - Connection to the grounding wire of a telephone or to a lightning rod may cause a dangerously abnormal rise in the electrical potential if lightning strikes. Improper grounding work can cause electric shocks.
 - Securely install the electrical box cover on the unit. An improperly installed service panel can cause serious accidents such as electric shock or fire through exposure to dust or water.

CAUTION


- The primary power supply capacity is for the air to water heat pump itself, and does not include the concurrent use of other devices.
- Do not start operation until the refrigerant is charged completely. The compressor will fail if it is operated before the refrigerant piping charging is complete.
- Transmission cable between indoor unit and outdoor unit is 230 V.
- Be sure not to remove thermistor sensor etc. from power wiring and connection wiring. Compressor may fail if operated while removed.
- Start wiring work after closing branch switch and over current breaker.
- Use an earth leakage breaker that is capable of handling high frequencies. Because the outdoor unit is inverter controlled, a high-frequency earth leakage breaker is necessary to prevent a malfunction of the breaker itself.
- When using an earth leakage breaker that has been designed solely for ground fault protection, be sure to install a fuse-equipped switch or circuit breaker.
- Do not connect the AC power supply to the transmission line terminal board. Improper wiring can damage the entire system.
- Do not use crossover power supply wiring for the outdoor unit.
- If the temperature surrounding the breaker is too high, the amperage at which the breakers cuts out may decrease.

How to connect wiring to the terminal

- Caution when wiring cable
- When stripping off the coating of a lead wire, always use a special tool such as a wire stripper. If there is no special tool available, carefully strip the coating with a knife etc.
 - Use crimp-type terminals with insulating sleeves as shown in the figure below to connect to the terminal block.
 - Securely clamp the crimp-type terminals to the wires using an appropriate tool so that the wires do not come loose.

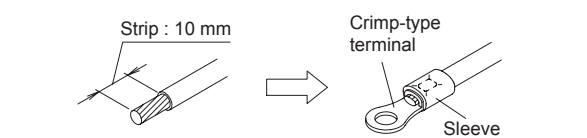

- Use the specified wires, connect them securely, and fasten them so that there is no stress placed on the terminals.
- Use an appropriate screwdriver to tighten the terminal screws. Do not use a screwdriver that is too small, otherwise, the screw heads may be damaged and prevent the screws from being properly tightened.
- Do not tighten the terminal screws too much, otherwise, the screws may break.

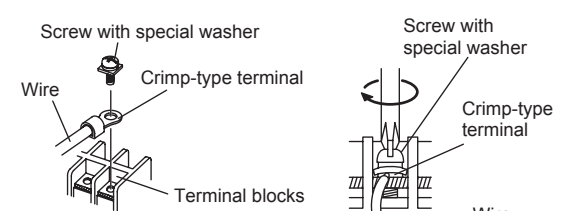

- See the table below for the terminal screw tightening torques.

Tightening torque [N·m (kgf·cm)]
M4 screw 1.2 to 1.8 (12 to 18)
M5 screw 2.0 to 3.0 (20 to 30)

6.2. Selecting circuit breaker and wiring

- Decide the diameter of wire referring to below table "Breaker and wiring specifications" in accordance with local and national codes.

Breaker and wiring specifications

Model	Breaker capacity [A]	Power supply cable Conductor size [mm ²]	Transmission cable* Conductor size [mm ²]	Max. length [m]
112	27	4.0	1.5 (Min.)	50
140	32	6.0		

- *: If the transmission wire is longer than 50m, use the bigger conductor size.
- Use confirmed cable with type 245 IEC 57.
 - Perform all electrical work according to the standard.
 - Install a circuit breaker with a contact gap of at least 3 mm in all poles nearby the units. (Both indoor units and outdoor units)
 - Install the circuit breaker nearby the units.

8. HOW TO OPERATE DISPLAY UNIT

8.1. Various setting methods

WARNING



- Never touch electrical components such as the terminal blocks or reactor except the switch on the display board. It may cause a serious accident such as electric shock.

CAUTION

- Once refrigerant charging is completed, be sure to open the valve prior to performing the local settings. Otherwise, the compressor may fail.
- Discharge any static electricity from your body before touching the push switches. Never touch any terminal or pattern of any parts on the control board.

- The positions of the switches on the outdoor unit control board are shown in the figure below.

- Various settings can be adjusted by pressing Push switches on the board of the outdoor unit.

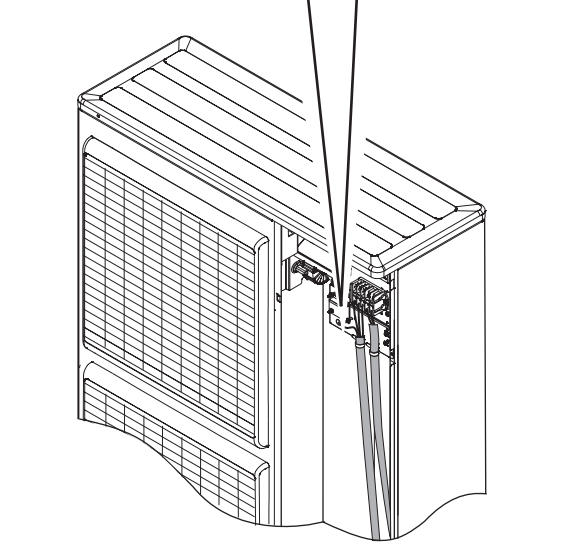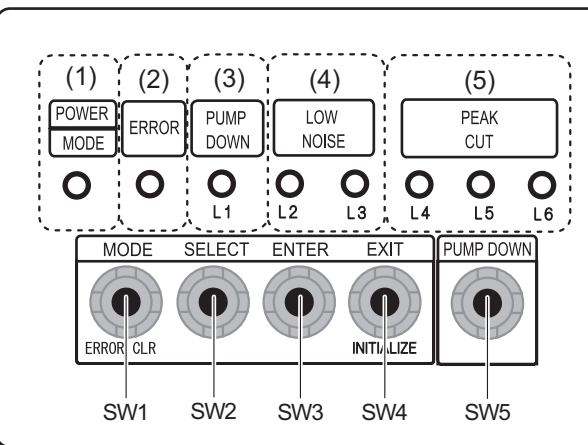

8.2. Description of display

Display lamp	Function or operation method
(1) POWER / MODE	Green Lights on while power on Local setting in outdoor unit or error code is displayed with blink.
(2) ERROR	Red Blinks during abnormal operation. Number of blinks indicates kind of error and error code is displayed.
(3) PUMP DOWN (L1)	Orange Lights on during pump down operation.
(4) LOW NOISE MODE (L2, L3)	Orange Lights on during "Low noise" function when local setting is activated. (Lighting pattern of L2 and L3 indicates low noise level) => See page 13.
(5) PEAK CUT (L4, L5, L6)	Orange Lights on during "Peak cut" function when local setting is activated. (Lighting pattern of L4, L5 and L6 indicates peak cut level) => See page 14.


Switch	Function or operation method
SW1	Push switch To switch between "Local setting" and "Error code display".
SW2	Push switch To switch between the individual "Local settings" and the "Error code displays".
SW3	Push switch To fix the individual "Local settings" and the "Error code displays".
SW4	Push switch EXIT
SW5	Push switch To start the pump down operation.

9. LOCAL SETTING


9.1. Low noise mode (Local work)

- Outdoor unit may be operated with lower noise than normal operation when following below local work.
- Low noise operation is available by installation of an additional commercially available timer or contact input from the ON-OFF switch to the CN19 connector (an external contact input sold separately) on the control board of the outdoor unit.
- Performance may be deficient depending on outdoor temperature or conditions etc.


9.2.1. Setting for peak cut

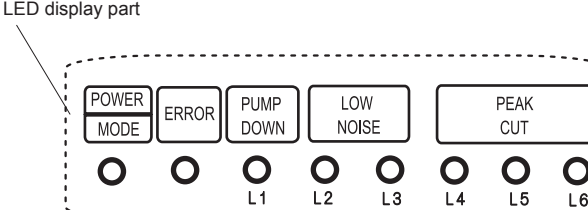

- Switch to "Local setting mode" by pressing [MODE] switch (SW1) for 3 seconds or more.
 - Confirm (POWER / MODE) blinks 9 times, and press [ENTER] switch (SW3).
- Sign "o": Lights off
- Press [SELECT] switch (SW2), and adjust LED display as shown below. (Current setting is displayed)

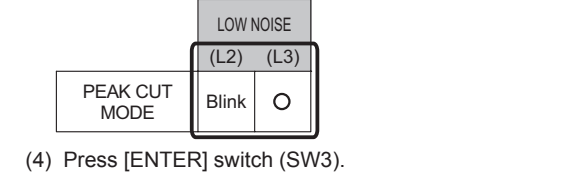

- Press [ENTER] switch (SW3).
- Sign "o": Lights on

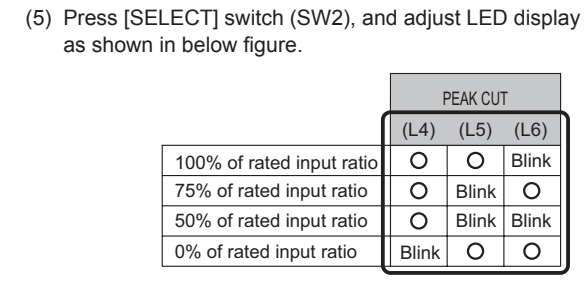

- Press [ENTER] switch (SW3) and fix it.
- Sign "o": Lights on

- Return to "Operating status display (Normal operation)" by pressing [EXIT] switch (SW4).
- When pressed number is lost during operation, restart from the beginning of operation procedure after returning to "Operation status display (normal operation)" by pressing the [EXIT] switch once.

10. TEST RUN

- Always turn on the power 6 hours prior to the start of the operation in order to protect the compressor.

Perform test run described in installation manual of indoor unit.



11. PUMP DOWN

WARNING

- Never touch electrical components such as the terminal blocks or reactor except the switch on the display board. It may cause a serious accident such as electric shock.
- During the pump-down operation, make sure that the compressor is turned off before you remove the refrigerant piping. Do not remove the connection pipe while the compressor is in operation with 2-way or 3-way valve open. This may cause abnormal pressure in the refrigeration cycle that leads to breakage and even injury.

- Perform the pump down operation before disconnecting any refrigerant pipe or electric cable.
- Collect refrigerant from the service port or the 3-way valve if pump down cannot be performed.

- In case of a group control system installation, do not turn the power off pump down is completed in all outdoor units. (Group control system installation described in "SPECIAL INSTALLATION METHODS" in the installation manual of the indoor unit.)
- Operate [PUMP DOWN] switch on the display board in the manner described below.

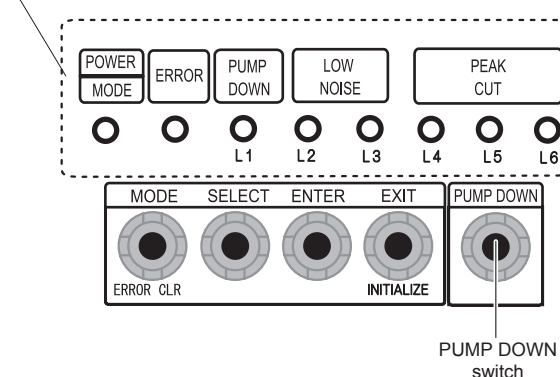

12. ERROR CODE DISPLAY

- When an error occurs, "short-press" the [ENTER] switch once. The number of blinks of the LED indicates the type of error.

12.1. How to check error code

12.1.1. Display when an error occurs

POWER MODE	ERROR	PUMP DOWN (L1)	LOW NOISE (L2) (L3)	PEAK CUT (L4) (L5) (L6)
●	○	○	○	○

- Check that the "ERROR" LED blinks, and then "short-press" the [ENTER] switch once.

12.1.2. Display while an error code is blinking

POWER MODE	ERROR	PUMP DOWN (L1)	LOW NOISE (L2) (L3)	PEAK CUT (L4) (L5) (L6)
Blinks (Times)	Blinks	○	○	○

- The "POWER MODE" LED will blink twice and the "ERROR" LED will blink several times.
- The number of blinks of the "ERROR" LED varies according to the type of error. For details, refer to the table in the same page.

12.2. Error code check table

Number of blinks (LED)	Error type
2	Serial forward transfer error
3	Discharge thermistor error
4	Pressure sensor error
5	Heat-exchange thermistor (outlet) error
6	Heat-exchange thermistor (intermediate) error
7	Expansion valve thermistor error
8	Outdoor temperature thermistor error
9	Compressor thermistor error
10	Heatsink thermistor (inverter) error
11	Discharge temperature protection (permanent stoppage)
12	Compressor temperature protection (permanent stoppage)
13	Current trip (permanent stoppage)
14	Detection of compressor position error (permanent stoppage)
15	Compressor start up error (permanent stoppage)
16	Fan motor (1) error (permanent stoppage)
17	Fan motor (2) error (permanent stoppage)
18	Inverter error
19	Active filter error
20	Low pressure abnormal
21	Connection with indoor unit error
22	Indoor unit abnormality condition