

Cassette Type SPLIT TYPE AIR CONDITIONER INSTALLATION INSTRUCTION SHEET

(PART NO. 9374318261-02)

For authorized service personnel only.

DANGER	This mark indicates procedures which, if improperly performed, are most likely to result in the death or serious injury to the user or service personnel.
WARNING	This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.
CAUTION	This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

DANGER

Never touch electrical components immediately after the power supply has been turned off. Electrical shock may occur. After turning off the power, always wait 5 minutes or more before touching electrical components.

This air conditioner uses new refrigerant HFC (R410A).

The basic installation work procedures are the same as conventional refrigerant models. However, pay careful attention to the following points:

- Since the working pressure is 1.6 times higher than that of conventional refrigerant models, some of the piping and installation and service tools are special. (See the table below.) Especially, when replacing a conventional refrigerant model with a new refrigerant R410A model, always replace the conventional piping and flare nuts with the R410A piping and flare nuts.
- Models that use refrigerant R410A have a different charging port thread diameter to prevent erroneous charging with conventional refrigerant and for safety. Therefore, check beforehand. [The charging port thread diameter for R410A is 1/2 UNF 20 threads per inch.]
- Be more careful that foreign matter (oil, water, etc.) does not enter the piping than with refrigerant models. Also, when storing the piping, securely seal the openings by pinching, taping, etc.
- When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.

Special tools for R410A

Tool name	Contents of change
Gauge manifold	Pressure is high and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended the gauge with seals -0.1 to 5.3 MPa (-76 cmHg to 38 kgf/cm ²) for low pressure. -0.1 to 3.8 MPa (-76 cmHg to 38 kgf/cm ²) for high pressure. -0.1 to 3.8 MPa (-76 cmHg to 38 kgf/cm ²) for low pressure.
Charge hose	To increase pressure resistance, the hose material and base size were changed.
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter.
Gas leakage detector	Special gas leakage detector for HFC refrigerant R410A.

Copper pipes

It is necessary to use seamless copper pipes and it is desirable that the amount of residual oil is less than 40 mg/10 m. Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants. As an air conditioner using R410A incurs pressure higher than when using conventional refrigerant, it is necessary to choose adequate materials. Thicknesses of copper pipes used with R410A are as shown in the table. Never use copper pipes thinner than that in the table even when it is available on the market.

Thicknesses of Annealed Copper Pipes (R410A)

Pipe outside diameter	Thickness
6.35 mm (1/4 in.)	0.80 mm
9.52 mm (3/8 in.)	0.80 mm
12.70 mm (1/2 in.)	0.80 mm
15.88 mm (5/8 in.)	1.00 mm
19.05 mm (3/4 in.)	1.20 mm

STANDARD PARTS

The following installation parts are furnished. Use them as required.

INDOOR UNIT ACCESSORIES


Name and Shape	Qty	Application
Coupler heat insulation	2	For indoor side pipe joint
Special nut A (large flange)	4	For installing indoor unit
Special nut B (small flange)	4	For installing indoor unit
Template (Carton top)	1	For ceiling openings cutting. Also used as packing
Remote control unit	1	For air conditioner operation
Battery	2	For remote controller unit
Remote control unit holder	1	For installing the remote controller unit holder installation
Tapping screw	2	For mounting the remote control unit

DECORATION PANEL ACCESSORIES

Name and Shape	Qty	Application
Connector cover	1	For covering connector
Screw	4	For mounting decoration panel
Screw	1	For mounting connector cover

OPTIONAL PARTS

Exterior	Parts name	Model No.	Summary
	Wired remote controller	UTB-+UD	Unit control is performed by wired remote controller
	Air outlet shutter plate	UTR-YDZB	Install the plate at outlet when carrying out 3-way direction operation.

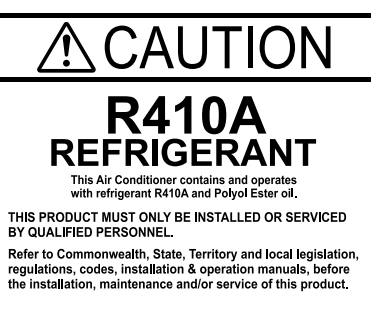

For authorized service personnel only.

WARNING
① For the air conditioner to operate satisfactorily, install it as outlined in this installation instruction sheet.
② Connect the indoor unit and outdoor unit with the air conditioner piping and cords available from our standards parts. This installation instruction sheet describes the correct connections using the installation set available from our standard parts.
③ Installation work must be performed in accordance with national wiring standards by authorized personnel only.
④ Do not turn on the power until all installation work is complete.

CAUTION
This installation instruction sheet describes how to install the indoor unit only. To install the outdoor unit, refer to the installation instruction sheet included with the outdoor unit.

- Be careful not to scratch the air conditioner when handling it.
- After installation, explain correct operation to the customer, using the operating manual.
- Let the customer keep this installation instruction sheet because it is used when the air conditioner is serviced or moved.

CONNECTION PIPE REQUIREMENT

CAUTION
Refer to the installation instruction sheet of the outdoor unit for description of the length of connecting pipe or for difference of its elevation.

MODEL	12,000 BTU/h model	14,000/18,000 BTU/h model	24,000 BTU/h model
Diameter	Liquid 6.35 mm (1/4 in.) Gas 9.52 mm (3/8 in.)	Liquid 6.35 mm (1/4 in.) Gas 12.70 mm (1/2 in.)	Liquid 6.35 mm (1/4 in.) Gas 15.88 mm (5/8 in.)

- Use pipe with water-resistant heat insulation.

CAUTION
Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leaks. Use heat insulation with heat resistance above 120 °C. (Reverse cycle model only) In addition, if the humidity level at the installation location of the refrigerant piping is expected to exceed 70%, install heat insulation around the refrigerant piping. If the expected humidity level is 70-80%, use heat insulation that is 15 mm or thicker and if the expected humidity exceeds 80%, use heat insulation that is 20 mm or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation. In addition, use heat insulation with heat conductivity of 0.045 W/(m·K) or less (at 20 °C).

ELECTRICAL REQUIREMENT

Connection cord (mm ²)	MAX.	MIN.
	2.5	1.5

- Use conformed cord with Type 245 IEC57.
- Install all electrical works in accordance to the standard.
- Install the disconnect device with a contact gap of at least 3 mm in all poles nearby the units. (Both indoor unit and outdoor unit)

INSTALLATION PROCEDURE

Install the air conditioner as follows:


1 INDOOR UNIT INSTALLATION

WARNING
① Install the air conditioner in a location which can withstand a load of do at least five times the weight of the main unit and which will not amplify sound or vibration. If the installation location is not strong enough, the indoor unit may fall and cause injuries.
② If the job is done with the panel frame only, there is a risk that the unit will come loose. Please take care.

1. INSTALLING BODY

Ceiling openings and hanging bolt installation diagram


WARNING
When fastening the hangers, make the bolt positions uniform.

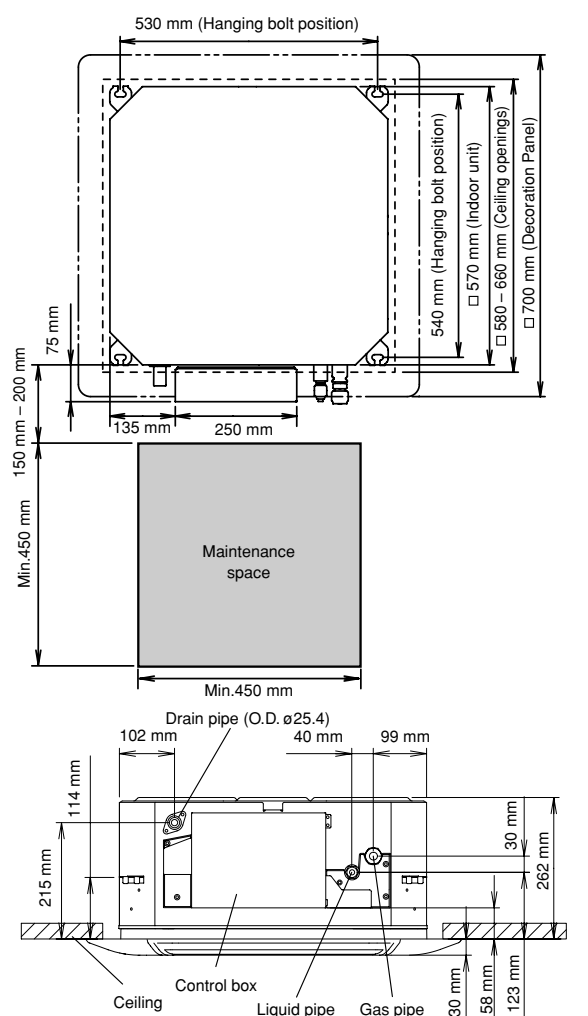

- Be sure to keep sufficient space in the designated position for future maintenance.

3 INSTALLING THE COUPLER HEAT INSULATION


After checking for gas leaks, insulate by wrapping insulation around the two parts (gas and liquid) of the indoor unit coupling, using the coupler heat insulation. After installing the coupler heat insulation, wrap both ends with vinyl tape so that there is no gap.

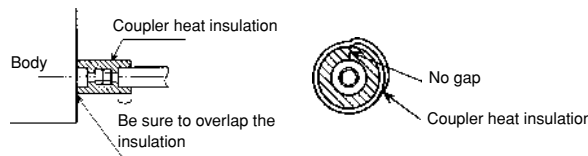

CAUTION
Must fit tightly against body without any gap.

Discharge Direction Setting


- The discharge direction can be selected as shown below.

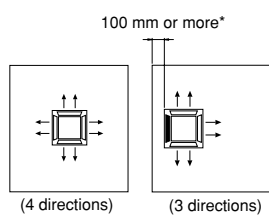

*Please ensure sufficient maintenance space during installation.

- For a 3-way outlet, make sure to perform the Function Setting on the remote control. Also, make sure to use the optional shutter panel to block the outlet.
- The ceiling height cannot be set in the 3-way outlet mode. Therefore, do not change the setting in the "Setting the Ceiling Height" at 7 FUNCTION SETTING.
- When the outlet is shut, be sure to install the optional Air outlet shutter plate kit. For the details of installation, please refer to Installation Manual of kit.


- Install the indoor unit on a place having a sufficient strength so that it withstands against the weight of the indoor unit.
- The inlet and outlet ports should not be obstructed; the air should be able to blow all over the room.
- Leave the space required to service the air conditioner.
- The ceiling rear height as shown in the figure.
- A place from where the air can be distributed evenly throughout the room by the unit.
- A place from where drainage can be extracted outdoors easily.
- Install the unit where noise and vibrations are not amplified.

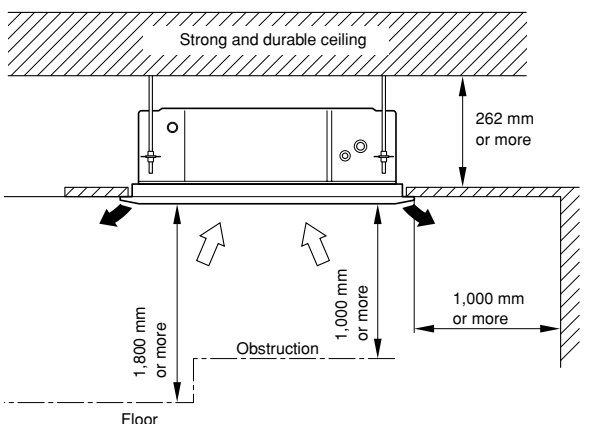

This product can be installed at a height of up to 3.0 m. Perform the Function Setting on the remote control in accordance with the installed height. (See 7 FUNCTION SETTING.)


2 CONNECTING THE PIPE

CAUTION
① Do not use mineral oil on flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
② While welding the pipes, be sure to blow dry nitrogen gas through them.

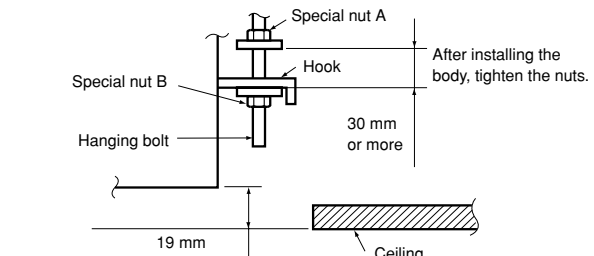


2. LEVELING

Using a level, or vinyl hose filled with water, fine adjust so that the body is level.

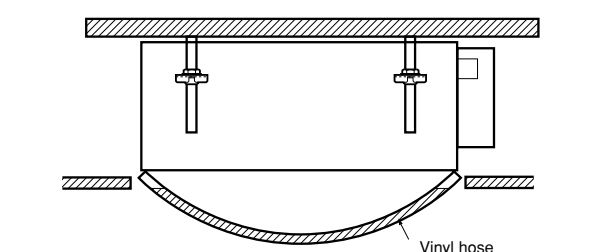

3. INSTALLING DRAIN PIPE

- Note: Install the drain pipe.**
- Install the drain pipe with downward gradient (1/50 to 1/100) and so there are no rises or traps in the pipes.
 - Use general hard polyvinyl chloride pipe (VP25) (outside diameter 32 mm (1-1/4")) and connect it with adhesive (polyvinyl chloride) so that there is no leakage.
 - When the pipe is long, install supporters.
 - Do not perform air bleeding.
 - Always heat insulate the indoor side of the drain pipe.
 - When desiring a high drain pipe height, raise it up to 700 mm or less from the ceiling within a range of 150 mm from the body. A rise dimension over this range will cause leakage.

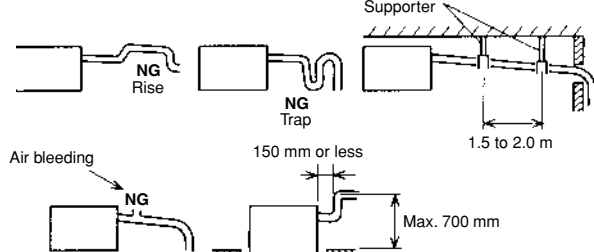


- Be sure to keep sufficient space in the designated position for future maintenance.

4 ELECTRICAL WIRING

WARNING
① Before starting work, check that power is not being supplied to the indoor unit and outdoor unit.
② Match the terminal board numbers and connection cord colors with those of the outdoor unit. Erroneous wiring may cause burning of the electric parts.
③ Connect the connection cords firmly to the terminal board. Imperfect installation may cause a fire.
④ Always fasten the outside covering of the connection cord with the cord clamp. (If the insulator is chafed, electric leakage may occur.)
⑤ Always connect the ground wire.
⑥ Install the remote controller wires so as not to be direct touched with your hand.

HOW TO CONNECT WIRING TO THE TERMINALS For stand wiring

- Use crimp-type terminals with insulating sleeves as shown in the figure below to connect to the terminal block.
- Securely crimp the crimp-type terminals to the wires using an appropriate tool so that the wires do not come loose.
- Use the specified wires, connect them securely, and fasten them so that there is no stress placed on the terminals.
- Use an appropriate screwdriver to tighten the terminal screws. Do not use a screwdriver that is too small, otherwise, the screw heads may be damaged and prevent the screws from being properly tightened.
- Do not tighten the terminal screws too much, otherwise, the screws may break.
- See the table below for the terminal screw tightening torques.

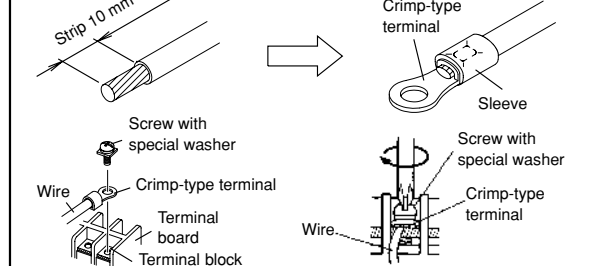


Tightening torque
M4 screw 1.2 to 1.8 N·m (12 to 18 kgf·cm)


WARNING
Use crimp-type terminals and tighten the terminal screws to the specified torques, otherwise, abnormal overheating may be produced and possibly cause heavy damage inside the unit.

1. CONNECTION DIAGRAMS

Connection cord (to outdoor unit)

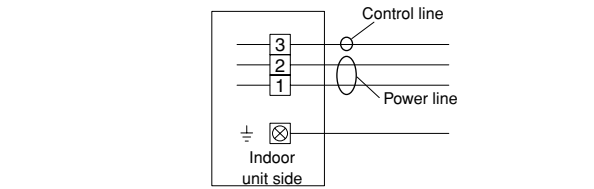

Wired remote controller cord (option)

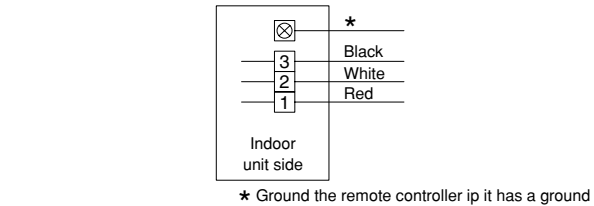


2. CONNECTION CORD PREPARATION

Keep the earth wire longer than the other wires.

CAUTION
① Do not use mineral oil on flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
② While welding the pipes, be sure to blow dry nitrogen gas through them.

1. FLARING

- Cut the connection pipe to the necessary length with a pipe cutter.
- Hold the pipe downward so that cuttings will not enter the pipe and remove the burrs.
- Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool. Use the special R410A flare tool, or the conventional flare tool.

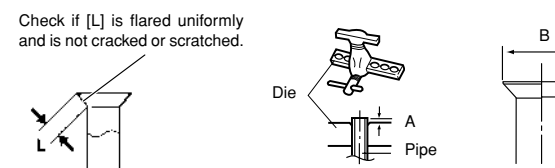

Pipe outside diameter	Dimension A (mm)
6.35 mm (1/4 in.)	9.1
9.52 mm (3/8 in.)	13.2
12.70 mm (1/2 in.)	16.6
15.88 mm (5/8 in.)	19.7
19.05 mm (3/4 in.)	24.0

Pipe outside diameter	Dimension B (mm)
6.35 mm (1/4 in.)	9.1
9.52 mm (3/8 in.)	13.2
12.70 mm (1/2 in.)	16.6
15.88 mm (5/8 in.)	19.7
19.05 mm (3/4 in.)	24.0

When using conventional flare tools to flare R410A pipes, the dimension A should be approximately 0.5 mm more than indicated in the table (for flaring with R410A flare tools) to achieve the specified flaring. Use a thickness gauge to measure the dimension A.

Pipe outside diameter	Width across flats of Flare nut
6.35 mm (1/4 in.)	17 mm
9.52 mm (3/8 in.)	22 mm
12.70 mm (1/2 in.)	26 mm
15.88 mm (5/8 in.)	29 mm
19.05 mm (3/4 in.)	36 mm



- Be sure to keep sufficient space in the designated position for future maintenance.

2. BENDING PIPES

The pipes are shaped by your hands. Be careful not to collapse them. Do not bend the pipes in an angle more than 90°. When pipes are repeatedly bend or stretched, the material will harden, making it difficult to bend or stretch them any more. Do not bend or stretch the pipes more than three times.



CAUTION
① To prevent breaking of the pipe, avoid sharp bends. Bend the pipe with a radius of curvature of 150 mm or over.
② If the pipe is bent repeatedly at the same place, it will break.

3. CONNECTION PIPES


Indoor unit

- Detach the caps and plugs from the pipes.

CAUTION
① Be sure to apply the pipe against the port on the indoor unit correctly. If the centering is improper, the flare nut cannot be tightened smoothly. If the flare nut is forced to turn, the threads will be damaged.
② Do not remove the flare nut from the indoor unit pipe until immediately before connecting the connection pipe.

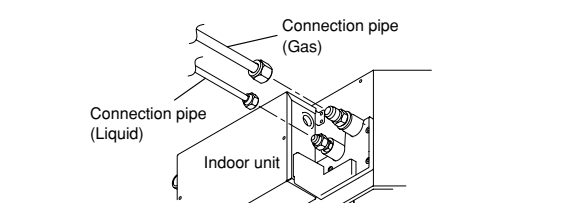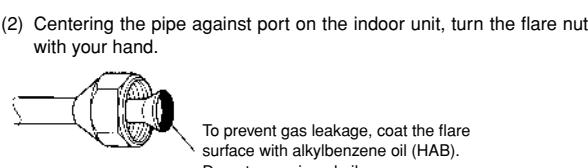

- When the flare nut is tightened properly by your hand, use a torque wrench to finally tighten it.

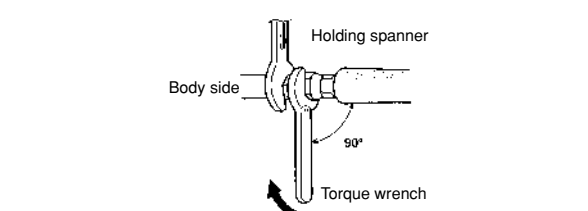


CAUTION
Hold the torque wrench at its grip, keeping it in the right angle with the pipe, in order to tighten the flare nut correctly.

Flare nut	Tightening torque
6.35 mm (1/4 in.) dia.	16 to 18 N·m (160 to 180 kgf·cm)
9.52 mm (3/8 in.) dia.	30 to 42 N·m (300 to 420 kgf·cm)
12.70 mm (1/2 in.) dia.	49 to 61 N·m (490 to 610 kgf·cm)
15.88 mm (5/8 in.) dia.	63 to 75 N·m (630 to 750 kgf·cm)
19.05 mm (3/4 in.) dia.	90 to 110 N·m (900 to 1100 kgf·cm)

2. CONNECTION CORD PREPARATION


Keep the earth wire longer than the other wires.

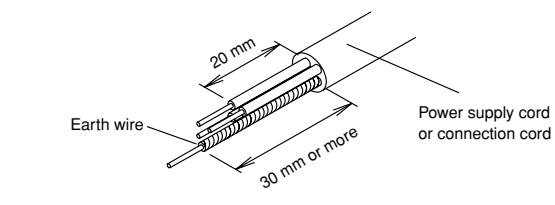



- Use a 4-core wire cord.

3. CONNECTION OF WIRING

- Remove the control box cover and install each connection wire

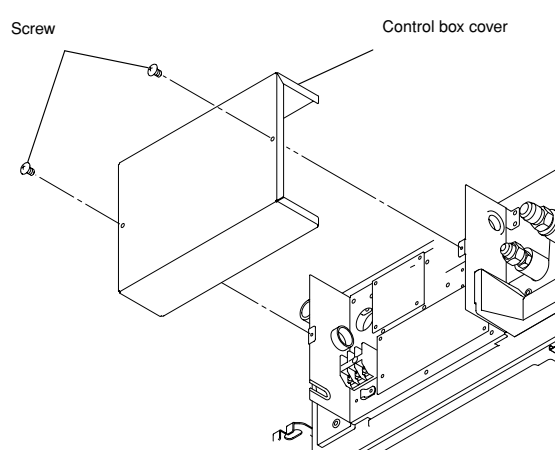

- After wiring is complete, secure the remote controller cord, connection cord, and power cord with the cord clamps.

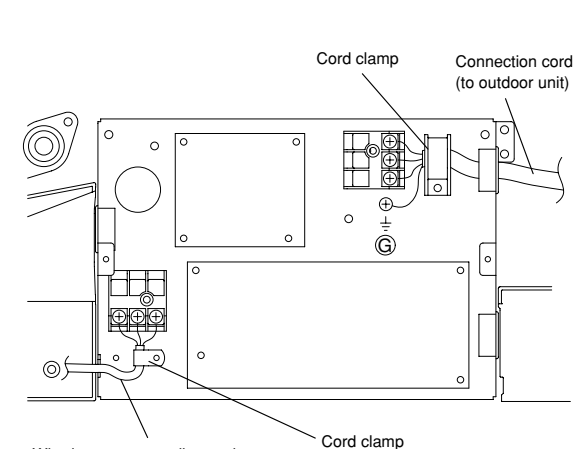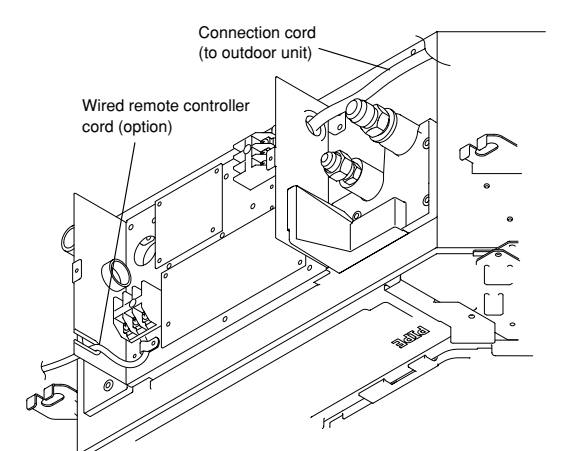

- Install control box cover.

CAUTION
Do not bundle the remote controller cord, or wire the remote controller cord in parallel, with the indoor unit connection wire (to the outdoor unit) and the power supply cord. It may cause erroneous operation.

(Continued to the next page)

